

**vtech**<sup>®</sup>

# Instruction Manual

## Animal Fun Treehouse



IM-515103-000<sup>UK</sup>

**VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...**

## **vtech** Baby

**Toys that will stimulate their interest in different textures, sounds and colours**

### **I am...**

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

*Birth-36 months*



## **Pre-School**

**Interactive toys to develop their imagination and encourage language development**

### **I want...**

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

*3-6 years*



## **Electronic Learning Computers**

**Cool, aspirational and inspiring computers for curriculum related learning**

### **I need...**

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

*4-10 years*




To learn more about this and other VTech® products, visit [www.vtech.co.uk](http://www.vtech.co.uk)

# INTRODUCTION

Thank you for purchasing the **Animal Fun Treehouse!**

Join your animal friends in the **Animal Fun Treehouse!** Place any of the animals on one of the **SmartZones** to hear fun phrases and sounds. Press the light up buttons to hear music and learn more about the animals. Explore and discover different parts of the play set with the animals to enjoy role play fun!

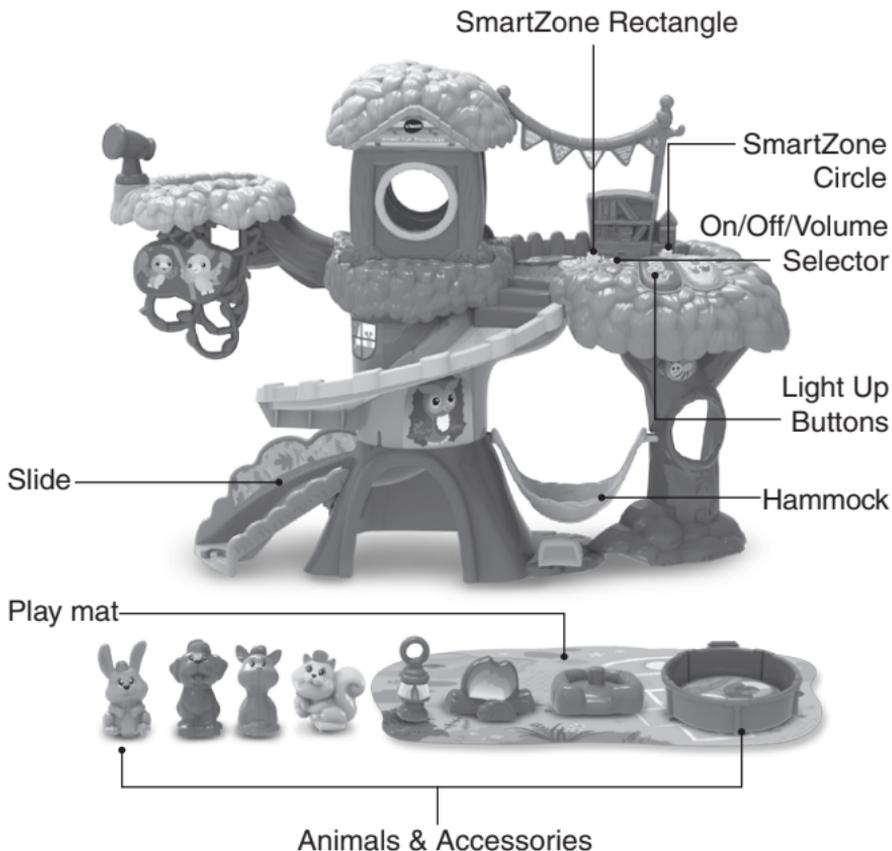

# INCLUDED IN THE PACKAGE



One tree trunk




One tree base




One slide



One telescope platform

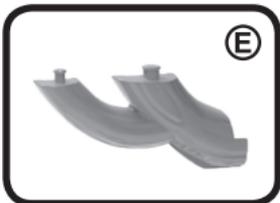

One tree branch

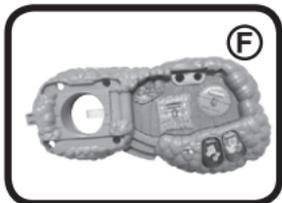

One electronic panel



One side tree



One treehouse ceiling




Two window gates



One camping accessory



One camping lantern

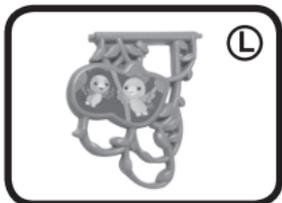

One vine



One hammock



One swimming pool



One telescope



One campfire




One bed  
accessory



One play mat



Two screws

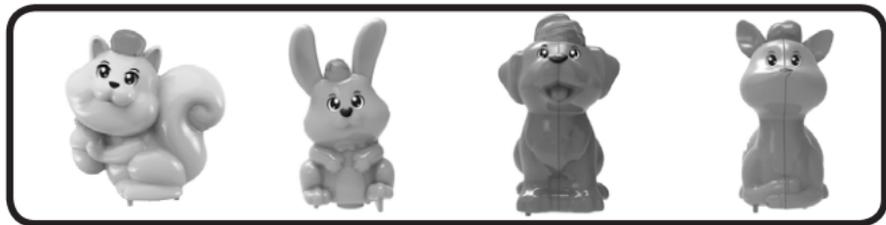

Four animals (Squirrel, Rabbit, Dog and Deer)

- Label sheet
- Quick Start Guide

## WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

## NOTE

Please save this Instruction Manual as it contains important information.

## CAUTION

Adult assembly required. This package contains small screws. For your child's safety, do not let your child play with the toy until it is fully assembled.

# INSTRUCTIONS

## BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned **Off**.
2. Locate the battery cover on the back of the Electronic Panel. Use a screwdriver to loosen the screw. Then remove the cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 3 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.



## WARNING:

Adult assembly required for battery installation.  
Keep batteries out of reach of children.

## **IMPORTANT: BATTERY INFORMATION**

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

### **RECHARGEABLE BATTERIES:**

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

## Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

VTech® cares for the planet.

Care for the environment and give your toy a second life by disposing of it at a small electricals collection point so all its materials can be recycled.

In the UK:



Visit [www.recyclenow.com](http://www.recyclenow.com) to see a list of collection points near you.

In Australia & New Zealand:

Check with your local council for kerbside collections.

# LABEL APPLICATION

Please securely stick the labels to the play set as indicated on the following pages:

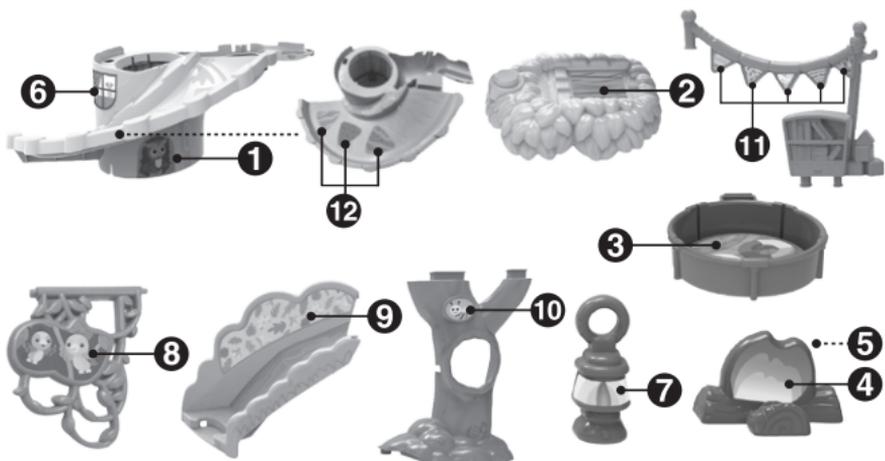
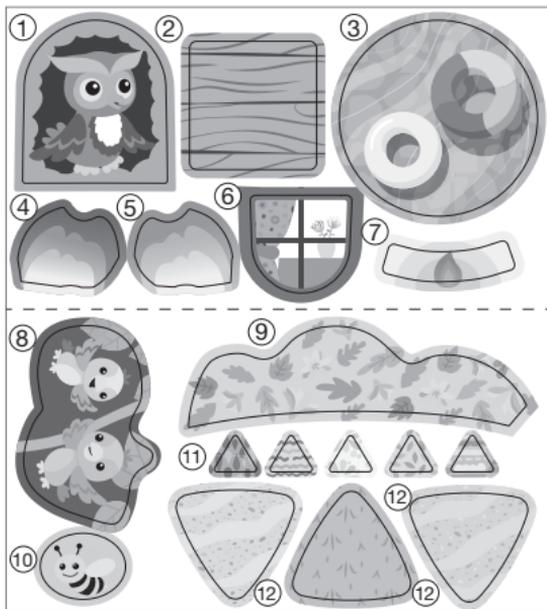


# ASSEMBLY INSTRUCTIONS





With the **Animal Fun Treehouse**, safety comes first. To ensure your child's safety, adult assembly is required.

## SMALL COMPONENT ASSEMBLY


1. Insert **(A)** into **(B)**, then **(C)** as shown. You will hear a click sound to indicate the pieces are secure. Please note that they cannot be detached once connected.

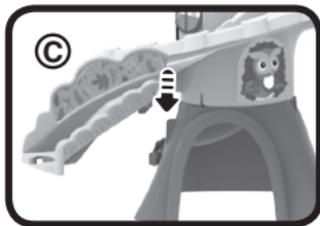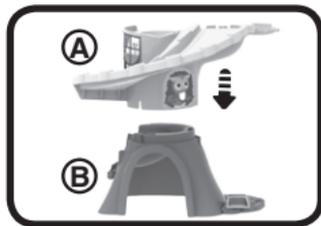



2. Insert **(E)** into **(D)**, then insert into **(F)**. You will hear a click sound to indicate the pieces are secure. And turn over and secure with two screws. Please note that they cannot be detached once connected.

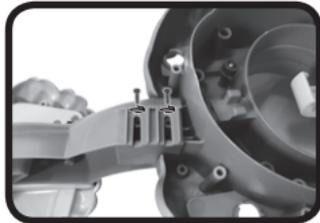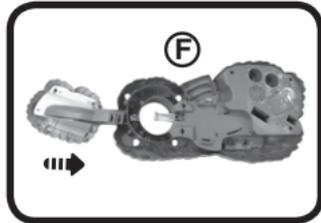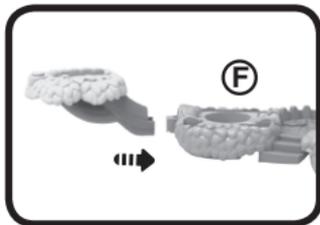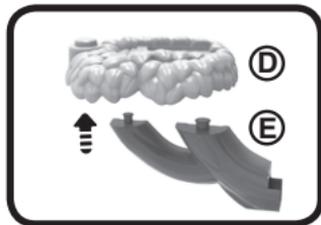



3. Insert **G** into **Second Floor Base**. You will hear a click sound to indicate the pieces are secure. Please note they cannot be detached once connected.

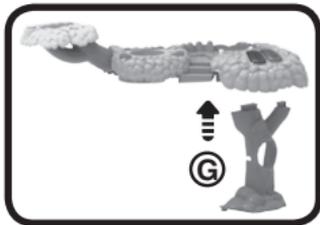

4. Attach the **Second Floor Base** and **Side Tree** into the **Tree Trunk**. You will hear a click sound to indicate the pieces are secure.

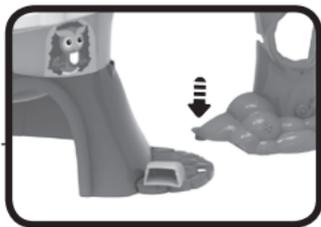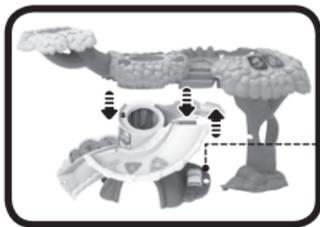


5. Insert **I** into **H** then insert into **Second Floor Trunk**. You will hear a click sound to indicate the pieces are secure. Please note that they cannot be detached once connected.

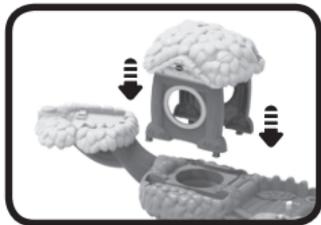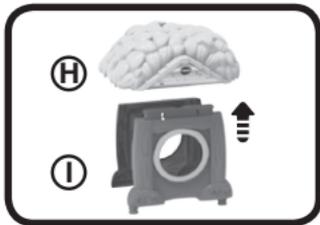


6. Insert **J** into the **Second Floor Base**. You will hear a click sound to indicate the pieces are secure. Please note that they cannot be detached once connected. Lastly, Hang **K** onto **J** as shown.



6. Insert **L** into **D**. You will hear a click sound to indicate the pieces are secure.

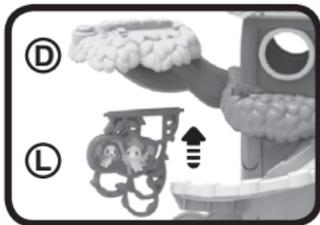

7. Finally, assemble the play pieces. Hang **M** between the main tree and side tree and insert **N** at the bottom of the tree. Lastly, put **O** on the platform as shown.

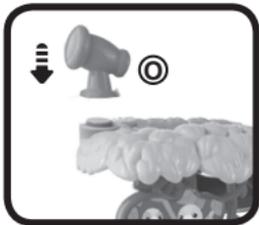


Once you've completed the above steps, you are ready to play! Refer to the product image on the cover page of the manual for one way to set up the **Animal Fun Treehouse**.

# PRODUCT FEATURES

## 1. On/Off/Volume Selector

To turn the unit **On**, slide the **On/Off/-Volume Selector** to either volume setting. You will hear a song, a phrase and a sound effect. To turn the unit **Off**, slide the **On/Off/Volume Selector** to the **Off** ● position.

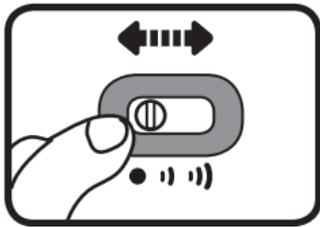

## 2. Automatic Shut-Off


To preserve battery life, the **Animal Fun Treehouse** will automatically turn **Off** after approximately 30 seconds without input. The unit can be turned on again by pressing any button.

### NOTE:

If the unit powers down or if the light fades out during play, please install a new set of batteries.

# ACTIVITIES

1. Slide the **On/Off/Volume Selector** to turn the unit on. You will hear a song, a welcoming phrase and a short tune with a sound effect. The lights will flash with the sounds.

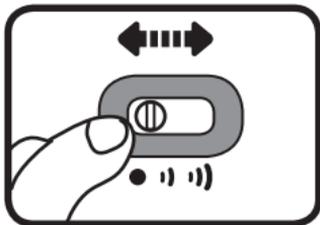

2. Put the animals down the tree trunk hole to watch them slide down the slide.




3. Press the **Light Up Music Button** to hear sing-along songs and melodies. Press the **Light Up Animal Button** to discover different parts of the treehouse. When the animals are placed on the **SmartZones**, press the **Light Up Animal Button** to learn about animals and watch them interact with each other. The lights will flash with the sounds.



4. Place the animals on the **SmartZone Rectangle** to learn animal names, sounds and facts. The lights will flash with sounds.



5. Place the animals on the **SmartZone Circle** to hear friendly phrases. When there's an animal on the **SmartZone Rectangle**, place another animal on the **SmartZone Circle** to watch them interact with each other. The lights will flash with sounds.

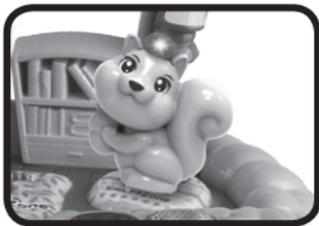

# MELODIES

1. Yankee Doodle
2. Incy Wincy Spider
3. Hey Diddle Diddle
4. London Bridge
5. Bingo
6. Did You Ever See a Lassie?
7. Flying Trapeze
8. Hickory Dickory Dock
9. Hot Cross Buns
10. Little Bo-Peep
11. Mary Had a Little Lamb
12. Muffin Man
13. Mulberry Bush
14. On Top of Old Smokey
15. Skip to My Lou

# SONG LYRICS

## Song 1

Up high in our treehouse,  
We have fun every day!

## Song 2

Who wants to swing on the swing,  
And slide down the slide,  
Animal friends going up and down,  
Exploring and playing all day.

## Song 3

We are a family of friends,  
In our tall treehouse.  
Come with us, we'll show you around,  
There's lots of fun to be had.

## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

## TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit sit for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to play with again.
5. If the unit is not working properly, install a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department, and a service representative will be happy to help you.

# CONSUMER SERVICES

Creating and developing VTech® products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

## **UK Customers:**

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: [www.vtech.co.uk/support](http://www.vtech.co.uk/support)

## **Australian Customers:**

Phone: 1800 862 155

Website: [support.vtech.com.au](http://support.vtech.com.au)

## **NZ Customers:**

Phone: 0800 400 785

Website: [support.vtech.com.au](http://support.vtech.com.au)

# PRODUCT WARRANTY/ CONSUMER GUARANTEES

## **UK Customers:**

Read our complete warranty policy online at [vtech.co.uk/warranty](http://vtech.co.uk/warranty).

## **Australian Customers:**

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –  
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to [vtech.com.au/consumerguarantees](http://vtech.com.au/consumerguarantees) for further information.

**Visit our website for more  
information about our products,  
downloads, resources and more.**

***[www.vtech.co.uk](http://www.vtech.co.uk)***  
***[www.vtech.com.au](http://www.vtech.com.au)***

