

# BLUEY



## Instruction Manual

# RING RING PHONE



**BBC**  
**STUDIOS**

BLUEY™ and BLUEY character logos™ & © Ludo Studio Pty Ltd  
2018. Licensed by BBC Studios.  
BBC logo™ & © BBC 1996

**VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...**

## **vtech** Baby

**Toys that will stimulate their interest in different textures, sounds and colours**

### **I am...**

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

*Birth-36 months*



## **Pre-School**

**Interactive toys to develop their imagination and encourage language development**

### **I want...**

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

*3-6 years*



## **Electronic Learning Computers**

**Cool, aspirational and inspiring computers for curriculum related learning**

### **I need...**

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

*4-10 years*



To learn more about this and other VTech® products, visit [www.vtech.co.uk](http://www.vtech.co.uk)

# INTRODUCTION

Thank you for purchasing Ring Ring Phone! Let's play and chat with Bluey and Bingo. Kids can pretend to call their favourite Bluey friends and playgames from the show. Let's do this!



# INCLUDED IN THE PACKAGE

- One Ring Ring Phone
- One Quick Start Guide


## WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

## NOTE

Please save this Instruction Manual as it contains important information.

## Unlock the Packaging Locks

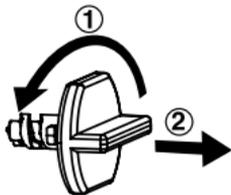


- ① Turn the packaging lock anti-clockwise several times.
- ② Pull out and discard the packaging lock.

# INSTRUCTIONS

## Battery Removal and Installation

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 2 new 'AAA' (AM-4/LR03) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

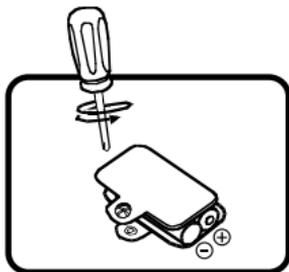

### **WARNING:**

Adult assembly required for battery installation.  
Keep batteries out of reach of children.

### **IMPORTANT: BATTERY INFORMATION**

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

## RECHARGEABLE BATTERIES:

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

### Australia/New Zealand:

If you think batteries might have been swallowed or placed inside any part of the body, immediately call the 24-hour Poisons Information Centre on 13 11 26 (in Australia) or 24-hour National Poisons Centre on 0800 764 766 (in New Zealand) for fast, expert advice and go straight to the nearest hospital emergency room.

## Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

VTech® cares for the planet.

Care for the environment and give your toy a second life by disposing of it at a small electricals collection point so all its materials can be recycled.

In the UK:

Visit [www.recyclenow.com](http://www.recyclenow.com) to see a list of collection points near you.

In Australia & New Zealand:

Check with your local council for kerbside collections.

# PRODUCT FEATURES

## 1. On/Off Button

To turn the unit **On**, press the **On/Off Button**. Press the **On/Off Button** again to turn the unit **Off**.

## 2. 6 Character Buttons



Press one of the **Six Character Buttons** (Bandit, Chilli, Bluey, Bingo, Chloe and Snickers) to hear the characters introduced.

## 3. Activity & Feature Buttons



Press the **Activity & Feature Buttons** to enter one of the five activities.

## 4. Number Buttons



Press the **Number Buttons** to hear Bluey say them.

## 5. Chat Button

Press the **Chat Button** to have a conversation with Bluey and Bingo.

## 6. OK Button

Press the **OK Button** to confirm your choice.

## 7. **Left/Right Buttons**

Press the **Left/Right Buttons** to make a selection in activities or menus.

## 8. **Phone Call Button**

Press the **Phone Call Button** to make a pretend phone call. You will hear the phone ringing then will be prompted to leave a message.

## 9. **Cancel Call Button**

Press the **Cancel Call Button** at any time to exit the current activity.

## 10. **Microphone** ●

The **Microphone** is used for the voice activation feature. Be sure to keep the **Microphone** about 10 cm from your mouth for best results.

## 11. **AUTOMATIC SHUT-OFF**

To preserve battery life, the **Bluey Ring Ring Phone** will automatically turn **Off** after several minutes of inactivity. The unit can be turned **On** again by pressing the **On/Off Button**. The unit will also automatically turn **Off** when the batteries are very low. A warning will be displayed on screen as a reminder to change the batteries.

# ACTIVITIES

## 1. Friends & Family

Press any of the **Six Character Buttons** (Bandit, Chilli, Bluey, Bingo, Chloe and Snickers) on the phone to play an animation of that character with a brief introduction or to listen to messages from Bluey and Bingo about their family and friends.



## 2. Dance Mode



Music Time! Listen to different music and see characters dance by pressing the **Number Buttons**. Press the **Left/Right Buttons** to change the main instrument of a melody.



## 3. Fruitbat



Help Bluey catch fruit while pretending to be a fruit bat. Use the **Left/Right Buttons** to move Bluey and eat the fruit to keep flying.



## 4. Handstand



Bingo is doing handstands! Arrows or an OK icon will drop from the top of the screen. Press the matching **Left/Right Buttons** or **OK Button** when the icons get to the black square to keep Bingo from falling over.



## 5. Bubbles



Bluey is blowing bubbles. Join in by blowing into the **Microphone** and see how many bubbles you can blow!



## 6. Chat

Chat with Bluey and Bingo. Press the **Chat Button** to hear Bluey or Bingo and see fun animations.



## 7. Settings

Personalise your phone with three ringtones, adjust the screen contrast and background music.



# CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth. Never use solvents or abrasives.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to moisture or water.

# TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

# CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

## **UK Customers:**

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: [www.vtech.co.uk/support](http://www.vtech.co.uk/support)

## **Australian Customers:**

Phone: 1800 862 155

Website: [support.vtech.com.au](http://support.vtech.com.au)

## **NZ Customers:**

Phone: 0800 400 785

Website: [support.vtech.com.au](http://support.vtech.com.au)

# PRODUCT WARRANTY/ CONSUMER GUARANTEES

## **UK Customers:**

Read our complete warranty policy online at [vtech.co.uk/warranty](http://vtech.co.uk/warranty).

## **Australian Customers:**

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –  
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to [vtech.com.au/consumerguarantees](http://vtech.com.au/consumerguarantees) for further information.

**Visit our website for more  
information about our products,  
downloads, resources and more.**

***www.vtech.co.uk***  
***www.vtech.com.au***

