

vtech[®]

Instruction Manual

Super Songs Music Player



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Explore and learn with the cute animated character on the Super Songs Music Player by VTech®! Enjoy fun interactive games, music and relaxing activities with included kid-safe headphones! Let's jam!



- | | |
|----------------------------|---------------------|
| ① Headphones | ⑪ Chill Zone |
| ② On/Off Button | ⑫ Dance Party |
| ③ Super Songs | ⑬ LCD Screen |
| ④ Jazz Music | ⑭ Classical Music |
| ⑤ Rock Music | ⑮ Pop Music |
| ⑥ Instrument Remix | ⑯ Sneaky Notes |
| ⑦ Catch the Rhythm | ⑰ Play/Pause Button |
| ⑧ Previous Button | ⑱ Next Button |
| ⑨ Light Button | |
| ⑩ Volume Button (5 Levels) | |

INCLUDED IN THIS PACKAGE

- One **Super Songs Music Player**
- One set of headphones

WARNING:


All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE:

Please keep this Instruction Manual as it contains important information.

Packaging Lock Removal:

- ① Turn the packaging lock anticlockwise several times.
- ② Pull out and discard the packaging lock.

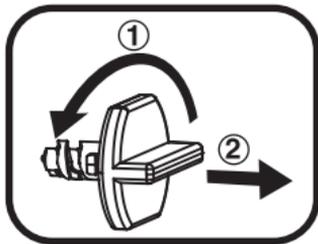

GETTING STARTED


Slide the On/Off Button to start playing. Before playing for the first time, please install 2 new AAA batteries. (The AAA batteries included in the unit are for demo purposes only and are not long life batteries).

Note:

In order to protect your child's hearing, the volume level of the headphones is lower than the speaker.

BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned OFF.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 2 new AAA (LR03/AM-4) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

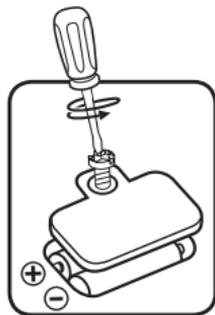

WARNING:

Adult assembly required for battery installation.

Keep batteries out of reach of children.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

www.vtech.co.uk/recycle

www.vtech.com.au/sustainability

* Visit www.recyclenow.com to see a list of collection points near you.

Player		Headphones	
Maximum output voltage	$\leq 150\text{mV}$	Wide band characteristic voltage	$\geq 75\text{mV}$

Product Features

1. ON/OFF BUTTON

Press the ON/OFF BUTTON to turn the unit ON. Press the ON/OFF BUTTON again to turn the unit OFF.

2. FUNCTION BUTTONS

A) PLAY/PAUSE BUTTON

Play or pause the music by pressing the PLAY/PAUSE BUTTON.

B) PREVIOUS BUTTON & NEXT BUTTON

Press the PREVIOUS BUTTON & NEXT BUTTON to make a selection.

C) LIGHT BUTTON

Press the LIGHT BUTTON to turn the backlight and LEDs ON/OFF.

D) VOLUME BUTTON

Press the VOLUME BUTTON to adjust the volume.

3. 10 ACTIVITIES BUTTONS

Press the different activity buttons to play the different games and music.

4. AUTOMATIC SHUT-OFF

To preserve battery life, the unit will automatically power-off after several minutes without input. The unit can be turned on again by pressing the ON/OFF BUTTON.

ACTIVITIES

1. Super Songs

Hear a variety of songs about letters, numbers, washing hands and more! Press the PREVIOUS & NEXT BUTTONS to select different songs.

2. Dance Party

Listen to the lyrics of the song, then dance and shake your body around to the music!

3. Chill Zone

Different calming breathing activities help children unwind and relax. You can select the Balloon Blowing exercise to steady breathing, or Quiet Time to follow instructions and listen to meditation music for a moment of calm.

4. Rock Music

Listen to rock music and press the PREVIOUS & NEXT BUTTONS to select a different song or melody.

5. Jazz Music

Listen to jazz music and press the PREVIOUS & NEXT BUTTONS to select a different song or melody.

6. Classical Music

Listen to classical music and press the PREVIOUS & NEXT BUTTONS to select a different song or melody.

7. Pop Music

Listen to pop music and press the PREVIOUS & NEXT BUTTONS to select a different song or melody.

8. Catch the Rhythm

Challenge yourself to follow the rhythm and catch it. Press the correct button when the falling bar touches the icon to catch the rhythm!

9. Instrument Remix

Explore fun melodies and swap the instruments by pressing the PREVIOUS & NEXT BUTTONS!

10. Sneaky Notes

Collect the various sneaky notes as they appear on screen at random!

SONG LYRICS

SONG 1

Dance! Dance! Everybody dance!
Listen to the beat and get off your feet!

SONG 2

Scrub, Scrub, Scrub! I'm gonna wash my hands!
Soapy, Soapy, Suds! Oh yeah that's the plan!
The water is warm and the bubbles are poppin'!
Washing my hands with the music boppin'!

SONG 3

You can be anything you wanna be!
Believe in yourself and follow your dreams!
Just try your best and never give up!
Your dreams can become reality!

SONG 4

If a mistake is made, it's ok.
Sometimes lessons are learned this way.
Practise makes perfect, be patient and kind.
Because we all make mistakes from time to time.

SONG 5

There was a farmer who had a dog,
And Bingo was his name - O.
B-I-N-G-O!
B-I-N-G-O!
B-I-N-G-O!
And Bingo was his name - O.
There was a farmer who had a dog,
And Bingo was his name - O.
B-I-N-G-O!
B-I-N-G-O!
B-I-N-G-O!
And Bingo was his name - O.

SONG 6

One, two,
Buckle my shoe!
Three, four,
Knock at the door!
Five, six,
Pick up sticks!
Seven, eight,
Lay them straight!
Nine, ten,
Let's do it all again!

SONG 7

A - B - C - D - E - F - G
H - I - J - K - L - M - N - O - P
Q - R - S
T - U - V,
W - X
Y and Z

Now I know my A - B - C's
Next time won't you sing with me?

SONG 8

Clap, Clap, Clap your hands!
Stomp, Stomp, Stomp your feet!
Wiggle, Wiggle, Wiggle all around!
Jump, Jump, Jump off the ground!
Whoaaa! Whoaaa! This is our song!
Whoaaa! Whoaaa! Party all day long!
Wave, Wave, Wave your arms!
Shake, Shake, Shake your legs!
Jiggle, Jiggle, Jiggle all around!
Bounce, Bounce, Bounce off the ground!
Whoaaa! Whoaaa! This is our song!
Whoaaa! Whoaaa! Party all day long!
Whoaaa! Whoaaa! This is our song!
Whoaaa! Whoaaa! Party all day long!

Note:

For added fun, the above dance instruction lyrics will sometimes be randomised in a different order.

SONG 9

Boogie, Boogie, Boogie! Shake and spin!
Woogie, Woogie, Woogie! Twist and jump!
Boogie, Boogie, Boogie! Hop and skip!
Woogie, Woogie, Woogie! Hands on hips!
And Freeze!

Note:

For added fun, the above dance instruction lyrics will sometimes be randomised in a different order.

SONG 10

Bounce! Bounce! Raise your hands up!
Bounce! Bounce! Never give up!
Jump up! Jump far! And reach for the sky!
Jump up! Jump far! Let's touch the stars!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working, please follow these steps:

1. Please turn the unit OFF.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit ON. The unit should now be ready to play with again.

5. If the product still does not work, please install a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.

CONSUMER SERVICES

Creating and developing **VTech**[®] products is accompanied by a responsibility that we at **VTech**[®] take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au

