



Parent's Guide

Let's Chat Learning Phone



INTRODUCTION


Thank you for purchasing the Peppa Pig Let's Chat Learning Phone. Stay in touch with your favorite little pig with this exciting smartphone! Explore six engaging features and activities that test your skill with numbers, counting, shapes and more. You can also receive virtual voice messages from George, Mummy Pig and Daddy Pig, and use voice-activated play to make pretend phone calls!



INCLUDED IN THIS PACKAGE

- One Peppa Pig Let's Chat Learning Phone
- One parent's guide

UNLOCK THE PACKAGING LOCK

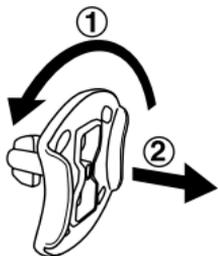

- ① Rotate the packaging lock 90 degrees counterclockwise.
- ② Pull out the packaging lock and discard.

WARNING:

All packing materials, such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE: Please keep this parent's guide as it contains important information.

ATTENTION :


Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes et vis d'emballage. Ils ne font pas partie du jouet.

NOTE : Il est conseillé de conserver ce guide des parents car il comporte des informations importantes.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned OFF.
2. Locate the battery cover on the back of the unit.
3. Open the battery cover using a screwdriver (not included).
4. Install 2 new AAA (LR03/AM-4) batteries as illustrated. (The use of new alkaline batteries is recommended for maximum performance.)
5. Replace the battery cover and tighten the screw to secure.

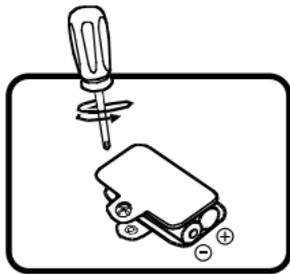

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

PRODUCT FEATURES

1. On/Off Button

To turn the unit **ON**, press the **On/Off Button**. Press the **On/Off Button** again to turn the unit **OFF**.

2. Peppa Pig Button

Press the **Peppa Pig Button** to hear Peppa's voice and see fun animations.

3. Pig Family Buttons

Press one of the three **Pig Family Buttons** (George, Mummy Pig or Daddy Pig) to get a voice message from that character.



4. Activity Buttons

Press the **Activity Buttons** to play one of the four activities.



5. Settings Button

Press the **Settings Button** to adjust the ringtone, background music and screen brightness.

6. Number Buttons

Press the **Number Buttons** to learn about numbers or to answer number-related questions.



7. Let's Chat Button



Press the **Let's Chat Button** to enter the Let's Chat activity. This activity uses the voice-activation feature. The LED will light up when the button is activated.

8. Enter Button



Press the **Enter Button** to confirm your choice.

9. Left/Right Buttons



Press the **Left/Right Buttons** to make a selection in activities or menus.

10. Call Button



Press the **Call Button** to make a virtual phone call. You will hear the phone ringing and will then be able to leave a voicemail message.

11. Cancel Call Button



Press the **Cancel Call Button** at any time to exit the current activity.

12. Microphone

The **Microphone** is used for the voice-activation feature. The suggested distance to keep between the **Microphone** and your mouth is about 4-5 inches.

13. Automatic Shut Off

To preserve battery life, the **Peppa Pig Let's Chat Learning Phone** will automatically power down after several minutes of inactivity. The unit can be turned **ON** again by pressing the **On/Off Button**. The unit will also automatically turn **OFF** when the batteries are very low. A warning will be displayed on screen as a reminder to change the batteries.

Note: If the unit powers down while playing, we suggest changing the batteries.

ACTIVITIES & FEATURES

1. Voice Messages

Press any of the three **Pig Family Buttons** (George, Mummy Pig and Daddy Pig) on the phone to play an animation of that character and to hear fun phrases related to the characters.

2. Muddy Puddles

The whole family enjoys jumping up and down in muddy puddles. Count how many times they jump. Press the correct **Number Button** to answer.




3. Leaf Collection

Leaves fall down in autumn, and that's when it's time for Peppa and George to collect leaves with a basket. As these number leaves fall from the trees, help Peppa and George to collect the leaves with the correct number. Press the **Left or Right Buttons** to move the basket.



4. Counting On

Peppa is helping Daddy Pig get ready for dinner by counting the total number of cupcakes. Help Peppa by pressing the correct **Number Button**.

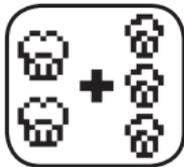

5. George's Balloons

Grandpa Pig helps George blow up balloons. What shape is the balloon? Blow into the **Microphone** to find out!



6. Let's Chat

Let's call Peppa! Press the **Let's Chat Button** and your phone speed dials Peppa Pig. Once she answers, Peppa will then ask you to tell her about yourself. Speak into the **Microphone** to answer.



CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to excess moisture.

TROUBLESHOOTING

If for some reason the program/activity stops working, please follow these steps:

1. Turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **ON**. The unit will now be ready to play again.
5. If the unit still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our website at vtechkids.com and filling out our Contact Us form located under the Customer Support link. A service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing VTech® products is accompanied by a responsibility that we at VTech® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, or by going to our website at vtechkids.com and filling out our Contact Us form located under the Customer Support link with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

CAN ICES-3 (B)/NMB-3(B)

Supplier's Declaration of Conformity

Trade Name:	VTech®
Model:	5231
Product name:	Peppa Pig Let's Chat Learning Phone
Responsible Party:	VTech Electronics North America, LLC
Address:	1156 W. Shure Drive, Suite 200, Arlington Heights, IL 60004
Website:	vtechkids.com

**CLASS 1
LED PRODUCT**

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com

**Read our complete warranty policy online at
*vtechkids.com/warranty***



VTech and the VTech logo TM & © 2018 VTech Holdings Limited.

All rights reserved.

Printed in China.

91-003614-001 (S)