

BLUEY



Instruction Manual

BLUEY'S KEYTAR



BBC
STUDIOS

BLUEY (word mark and character logos) are trade marks of Ludo Studio Pty Limited and are used under licence. BLUEY logo © Ludo Studio Pty Limited 2018. Licensed by BBC Studios. BBC is a trade mark of the British Broadcasting Corporation and is used under licence. BBC logo © BBC 1996

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

 
4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing **Bluey's Keytar**. Play the keytar like Bluey for real life! Whether it's romance music or a silly song, your child can play along to 10 melodies, choose from five different instruments and hear character sounds.

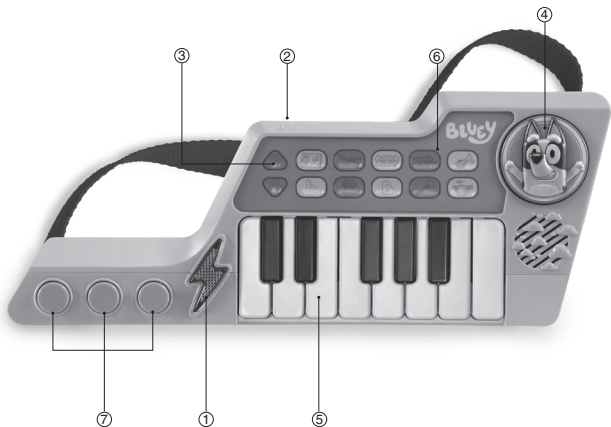

- ① Light Up Melody Button
- ② Power Switch
- ③ Volume Buttons
- ④ Bluey Button
- ⑤ Keyboard
- ⑥ Instrument Buttons
- ⑦ Sound Effect Buttons

INCLUDED IN THE PACKAGE

- Bluey's Keytar
- Keytar Strap
- Quick Start Guide

 
WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE:

Please save this Instruction Manual as it contains important information.

Unlock the Packaging Locks:

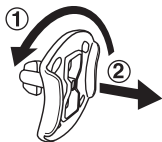

- ① Rotate the packaging locks 90 degrees anticlockwise.
- ② Pull out the packaging locks and discard.

WARNING:

 
Adult assembly required for battery installation.

Keep batteries out of reach of children.

GETTING STARTED

Battery Removal and Installation

1. Make sure the unit is turned **OFF**.
2. Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

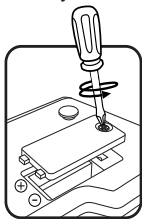


ASSEMBLY INSTRUCTIONS

With **Bluey's Keytar**, safety comes first. Adult assembly required. For your child's safety, do not let them play with this toy until it is fully assembled.

Bluey's Keytar comes with an optional keytar strap that can be attached or removed at any time. Follow the steps below to attach your keytar strap.

 Turn over the keytar. Insert one of the keytar straps through the slot on the right and the other through the slot on the left as shown.

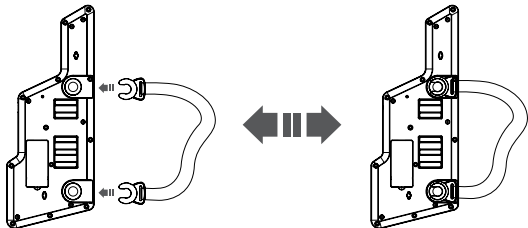

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.



Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

www.vtech.co.uk/recycle

 
www.vtech.com.au/sustainability

* Visit www.recyclenow.com to see a list of collection points near you.

PRODUCT FEATURES


1. Power Switch

To turn the unit **On**, slide the switch to the **On** position. To turn the unit **Off**, slide the switch to the **Off** position.

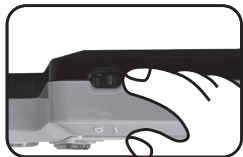

2. Volume Control

 Press the **Volume Control** buttons to adjust the volume. There are three volume levels to choose from.

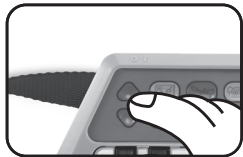


3. Instrument Buttons

Press the **Instrument Buttons** to select different instruments and character sounds. Select synthesizer, guitar, piano, xylophone and trumpet on the top row and Bingo's phrases, Chattermax sounds, Bluey's silly sounds, magical sounds and percussion on the bottom row.




4. Bluey Button

 Press the **Bluey Button** to hear Bluey talk and make funny sounds.

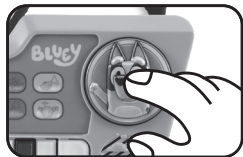


5. Keyboard

 Press the keys on the **Keyboard** to play musical notes.

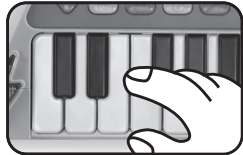


6. Sound Effect Buttons

 Press the three **Sound Effect Buttons** to hear three short tunes.

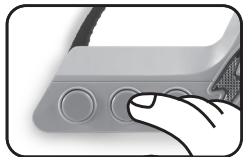

7. Light Up Melody Button

 Press the **Light Up Melody Button** to hear 10 melodies and see the light flash to the beat.

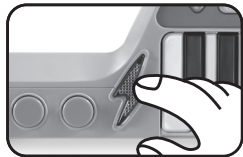

8. Automatic Shut-Off

To preserve battery life, **Bluey's Keytar** will automatically turn off after approximately 30 seconds without input. **Bluey's Keytar** can be woken up again by pressing the **Bluey Button**.

Bluey's Keytar will also automatically turn off when the battery power is very low. If the unit powers down while playing, we suggest replacing the batteries.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play with again.
5. If the unit still does not work, install a new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.

CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED – CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au



TM & © 2023 Vtech Holdings Limited.
All rights reserved.
IM-563700-001
Version:0