

Quick Start Guide



Secret Safe
My Style Box

By reducing the quantity of paper used for our Manuals, we aim to reduce our environmental impact and contribute to the preservation of the environment. The full version of the Instruction Manual is available online through the following links or by scanning the QR code.



For UK
vtech.co.uk/manuals



For AUS/NZ
vtech.com.au/support/product_manuals

© 2025 VTech Holdings Limited. All rights reserved.

Printed in China.

91-004754-000 (M) (C)

INCLUDED IN THIS PACKAGE

- One **Secret Safe My Style Box**
- Two Removable Trays
- One Quick Start Guide


WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE:

Please keep this Quick Start Guide as it contains important information.

Unlock the Packaging Locks :

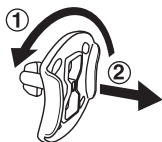


- ① Turn the packaging locks anticlockwise several times.
- ② Pull out the packaging locks and discard.

GETTING STARTED

BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover at the bottom of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. If used or spent batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 4 new AA (LR6/AM-3) batteries following the diagram inside the battery compartment. (For best performance, alkaline batteries are recommended. Rechargeable batteries are not guaranteed to work with this product).
5. Replace the battery cover and tighten the screw to secure.

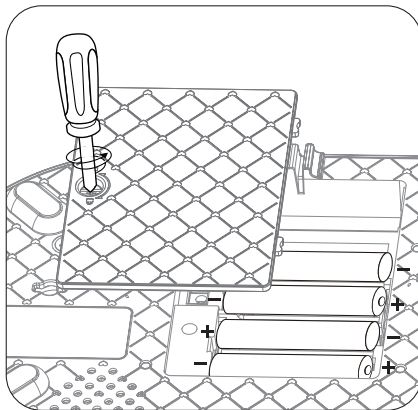

WARNING:

**Adult assembly required for battery installation.
Keep batteries out of reach of children.**



Exit Try-Me Mode:

The product is in Try-Me mode in the packaging. To exit Try-Me mode, press and hold the **Reset Button** (located at the bottom of the unit with the word **RESET** above it) for several seconds, you will hear a “Di” sound. Once you have exited Try-Me mode you will be able to do the `First Set-Up`.

First Set-Up

When you first use the **Secret Safe My Style Box**, you will need to set the password and time first.

1. Password Set-Up

Press the **Option Buttons** to create a 4-digit number or pattern password and then press the **OK Button** to confirm.

2. Time Set-Up

Press the **Option Buttons** to select and input the time, press the **OK Button** to confirm.

Note: If there is a pairing problem with your **Bluetooth®** device, please follow these steps:

1. On your **Bluetooth®** enabled device, please go to **Bluetooth®** settings. If “VTech 5818 Dresser” is found in your list of connected, paired or saved devices, please “forget” or “unpair” it.
2. Disable and enable **Bluetooth®** or restart your device.
3. Turn the unit off and on and repeat the pairing process.



IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.





Bluetooth® Statement

The **Bluetooth®** word mark and logos are registered trademarks owned by the **Bluetooth®** SIG, Inc. and any use of such marks by **VTech®** is under license. Other trademarks and trade names are those of their respective owners.

RF Warning Statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

DECLARATION OF CONFORMITY



Hereby, VTech Electronics Europe BV declares that the radio equipment type 5818 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

www.vtech.com/re-directive

Frequency Band: 2402MHz – 2480MHz

Maximum RF power: 0.003W (4.77dBm)



DECLARATION OF CONFORMITY

Hereby, VTech Electronics Europe Plc declares that the radio equipment type 5818 is in compliance with The Radio Equipment Regulations 2017 (2017 No.1206). The full text of the Declaration of conformity is available at the following internet address:

www.vtech.com/re-directive

Frequency Band: 2402MHz – 2480MHz

Maximum RF power: 0.003W (4.77dBm)

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

VTech® cares for the planet.

Care for the environment and give your toy a second life by disposing of it at a small electricals collection point so all its materials can be recycled.

In the UK:

Visit www.recyclenow.com to see a list of collection points near you.

In Australia & New Zealand:

Check with your local council for kerbside collections.



CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
5. If the unit stops working or malfunctions, install a new set of batteries.

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED – CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.



Contact VTech

Tel: 0330 678 0149 (from UK)
+44 330 678 0149 (outside UK)
1800 862 155 (Aus) / 0800 400 785 (NZ)
www.vtech.co.uk
www.vtech.com.au