



Parent's Guide

TIME TO BE A HERO LEARNING TABLET



©2018 Frog Box/Entertainment One UK Limited
91-003448-000

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years

 


To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the **VTech® PJ Masks Time to Be a Hero Learning Tablet!**

Join Catboy, Owlette and Gekko as they go into the night to save the day! The **VTech® PJ Masks Time to Be a Hero Learning Tablet** features six exciting activities that help to reinforce learning of letters, phonics, rhyming, matching and problem solving! With fun animations, cool sound effects, character voices and more, your child will love to join this learning adventure with the PJ Masks!

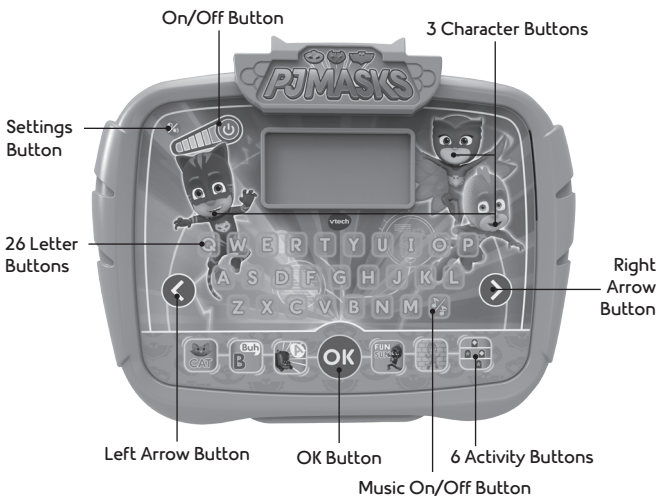


INCLUDED IN THIS PACKAGE

- One VTech® PJ Masks Time to Be a Hero Learning Tablet
- One Parent's Guide

WARNING: All packing materials such as tape, plastic sheets, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

NOTE: Please keep this user's manual as it contains important information.

 Unlock the packaging locks:

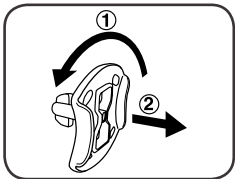


- ① Rotate the packaging lock 90 degrees anticlockwise.
- ② Pull out the packaging lock.

GETTING STARTED

BATTERY INSTALLATION

 1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit. Use a coin or screwdriver to loosen the screw.
3. Install 2 new AA (LR6/AM-3) batteries into the compartment as illustrated. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.

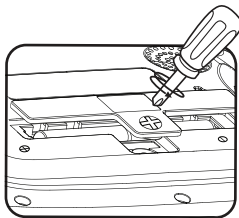

BATTERY NOTICE

- Use new alkaline batteries or fully charged NI-MH (Nickel Metal-hydride) rechargeable batteries for best performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

DISPOSAL OF BATTERIES AND PRODUCT



The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product

or batteries responsibly.

For more information, please visit:

www.recycle-more.co.uk

www.recyclenow.com

PRODUCT FEATURES

1. ON/OFF BUTTON

To turn the unit on, press the **On/Off Button**. Press the **On/Off Button** again to turn the unit off.

 
2. 6 ACTIVITY BUTTONS

Press one of the **Activity Buttons** to choose any of the 6 activities.



3. LETTER BUTTONS

Press the **Letter Buttons** to learn letters or to answer letter-related questions.

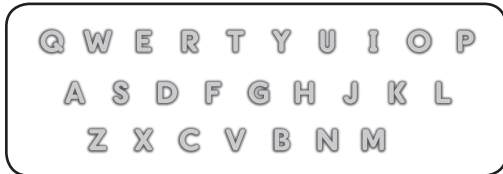

4. ARROW BUTTONS

Press the **Arrow Buttons** to navigate on the screen or to select an option.

5. OK BUTTON

Press this button to confirm a selection.

6. 3 CHARACTER BUTTONS

Press the 3 **Character Buttons** (Catboy, Owlette, Gekko) on the tablet to play an animation of that character with a brief introduction or to play some fun phrases related to the characters in each game.



7. SETTINGS BUTTON



Press this button to adjust screen contrast and sound volume. There are 3 steps to adjust the screen contrast and 3 steps to adjust the volume level. Use the **Left Arrow** button to reduce the volume level or contrast, or use the **Right Arrow** button to increase the volume level or contrast and then press the **OK Button** to confirm.

8. MUSIC ON/OFF BUTTON



Press this button to turn the background music on or off.

9. AUTOMATIC SHUT OFF

To preserve battery life, the **PJ Masks Time to Be a Hero Learning Tablet** will automatically turn off after several minutes of inactivity. The unit can be turned on again by pressing the **On/Off** button. The unit will also automatically turn off when the batteries are very low. A warning will be displayed on screen as a reminder to change the batteries.

TO BEGIN PLAY

- Press the **On/Off** button to turn the unit **On**. A short animation will play and you will be asked to select an activity.
- Press an activity button to play. Alternatively press one of the **Character Buttons** on the tablet to play an animation or to play a fun phrase related to that character.

ACTIVITIES

1. Letter Fun

Let's explore the Picture Player together. Press any letter button to learn about letters, phonics and words.

Press one of the 3 character buttons to play an animation of that character with a brief introduction.



2. Matching Phonics

Oh no! Luna Girl's moths have messed with the Picture Player and the data is not displaying properly. Owlette needs your help to fix the Picture Player by matching the letters with their letter sounds. Press a letter to answer.

There are 3 levels of play with varying degrees of interference hiding the letters.

Press the 3 character buttons to hear phrases related to phonic sounds.



3. Letter Eggs

Watch out! Romeo is launching spoiled eggs all over the city. Help the PJ Masks defend the city from the stinky rotten eggs. Type the letters to destroy the eggs before they hit the PJ Masks.

There are 3 levels of moving speed for the letters. Press one of the 3 character buttons to change to that character.



4. Rhyming Words

Night Ninja has hidden Master Fang's sword in the park. Help Catboy find the sword.

A word will be shown at the bottom of the screen. Press the Left or Right Arrow Button to choose a tree with another word that rhymes with the first word.



Then press OK to confirm.

There are 3 levels of difficulty for the pairs of rhyming words.

Press one of the 3 character buttons to show a related rhyming phrase on the screen.

5. Super Gekko Camouflage

Gekko is hiding from Night Ninja. Help him match the pattern on the wall to hide.

Press the Left or Right Arrow Button to choose the matching pattern, then press OK to confirm.

There are 3 levels of difficulty for the patterns that need to be matched.

Press the 3 character buttons to hear fun phrases related to the game.



6. Shapes Maze

Oh, no! Romeo has captured Owlette & Gekko and Catboy needs your help to rescue them.

There are a series of doors with different patterns shown on the screen. Doors with matching patterns are linked to one another.

Press the Left or Right Arrow Button to move Catboy. Then, press the OK button to enter a door. For example, if Catboy enters a door with a circle, he will exit from another door with a circle on it. Continue to move Catboy until he reaches the cage where he will release Owlette & Gekko.

There are 3 levels of difficulty from simple to complex shaped patterns on the doors.

Press the 3 character buttons to hear their phrases and to play animations related to the game.





CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to excess moisture.

TROUBLESHOOTING

If for some reason the program/activity stops working, then please follow these steps:

1. Turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.

IMPORTANT NOTE

Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

CLASS 1
LED PRODUCT



PRODUCT REGISTRATION

Visit www.vtech.co.uk/clubvtech/login
to register your VTech product

By joining the VTech Club you can also enter competitions, find out about news and events, seek expert advice for parents and let your kids play fun learning games and activities.



PRODUCT WARRANTY

Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor). Please include details of the fault together with your name and address.
9. To keep an online record of your warranty, please register your product online at www.vtech.co.uk/warranty

VTech Electronics EU PLC, c/o XPO Logistics, Warehouse 350, Cat & Fiddle Lane, West Hallam, DE7 6HE

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.





**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk



VTech and the VTech logo TM & © 2018 VTech Holdings Limited. All rights reserved.
Printed in China.

©2018 Frog Box/Entertainment One UK Limited

91-003448-000 