 


vtech®

Parent's Guide

**SWITCH & GO®**  
**DiNOS**   
*Thunder the Spinosaurus*

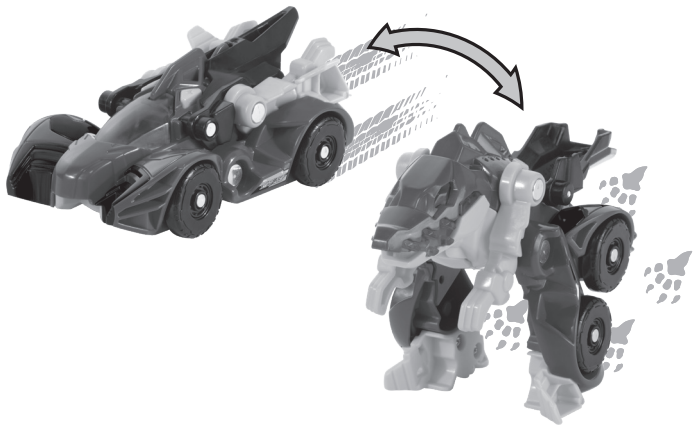

**VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...**

## **vtech** Baby

**Toys that will stimulate their interest in different textures, sounds and colours**

### **I am...**

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

**Birth-36 months**



## **Pre-School**

**Interactive toys to develop their imagination and encourage language development**

### **I want...**

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

**3-6 years**



## **Electronic Learning Computers**

**Cool, aspirational and inspiring computers for curriculum related learning**

### **I need...**

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

**4-10 years**



 
To learn more about this and other VTech® products, visit [www.vtech.co.uk](http://www.vtech.co.uk)

# INTRODUCTION

I'm **Thunder the Spinosaurus**. Look at my spines, they're so cool! I'm a fierce dino! Nothing scares me! I can even switch into a super car and back again! C'mon! Let's race!

Talk Button

Sound Effect Button

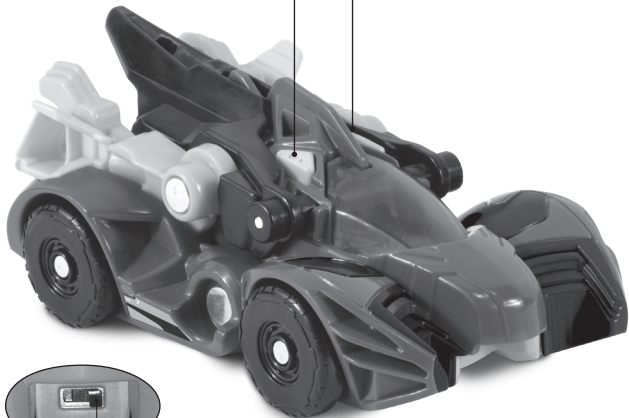

Off/Volume Switch

# INCLUDED IN THIS PACKAGE

- One VTech® SWITCH & GO DINOS® Thunder the Spinosaurus
- One parent's guide

 
**WARNING:** All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

**NOTE:** Please keep this parent's guide as it contains important information.

## GETTING STARTED

### BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit. Use a screwdriver to loosen the screw.
3. Install 1 new AAA (LR03/AM-4) battery into the main unit following the diagram inside the battery box. (The use of new, alkaline batteries is recommended for maximum performance).
4. Replace the battery cover and tighten the screw to secure.

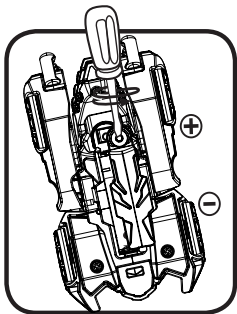

**Note:** If there is no response when the unit is switched on, please insert a new battery and try switching it on again.

## BATTERY NOTICE

- Use new alkaline batteries or fully charged NI-MH (Nickel Metal-hydride) rechargeable batteries for best performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

## Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.


 

For more information, please visit:


[www.recycle-more.co.uk](http://www.recycle-more.co.uk)

[www.recyclenow.com](http://www.recyclenow.com)

# PRODUCT FEATURES
 
## 1. OFF/VOLUME SWITCH

To turn the unit **ON** or adjust the volume, slide the switch to **LOW** () / **HIGH** (). To turn the unit **OFF**, slide the switch to **OFF** ()

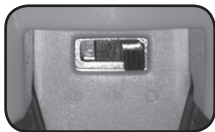

## 2. TALK BUTTON

Press the **TALK BUTTON** to hear cool phrases and dinosaur facts.



## 3. SOUND EFFECT BUTTON

Press the **SOUND EFFECT BUTTON** to hear cool sound effects.

 


## 4. AUTOMATIC SHUT OFF


To preserve battery life, **Thunder the Spinosaurus** will automatically shut off after about one minute without input. **Thunder** can be turned on again by pressing any button.

**Note:** If **Thunder** repeatedly shuts off, or has abnormal responses when switched on, please install brand new batteries and try switching **Thunder** on again.


# HOW TO SWITCH THUNDER

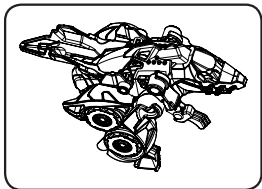

 
1. Dino mode.

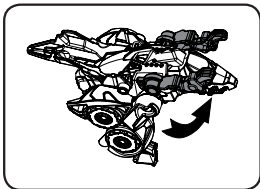

 
2. Rotate the claws up above the head.

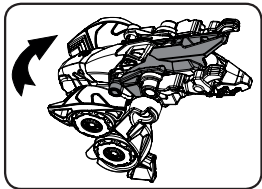

 3. Fold the tail.

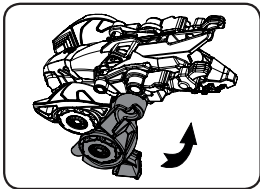

 4. Turn the legs towards the head as illustrated.

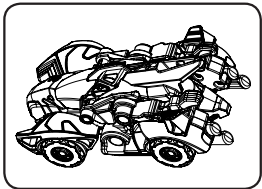

5. Vehicle mode.

**Note:** To change the super car back into a dino, repeat the steps above in reverse order.



# CARE & MAINTENANCE

1. Keep the dino clean by wiping it with a slightly damp cloth.
2. Keep the dino out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the dino will not be in use for an extended period of time.
4. Do not drop the dino on hard surfaces and do not expose the dino to moisture or water.

# TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the dino **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the dino stand for a few minutes, then replace the batteries.
4. Turn the dino **ON**. The dino should now be ready to play with again.
5. If the dino still does not work, install a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.



CLASS 1  
LED PRODUCT

## CONSUMER SERVICES

Creating and developing VTech products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

### **UK Customers:**

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)  
Website: [www.vtech.co.uk/support](http://www.vtech.co.uk/support)

### **Australian Customers:**

Phone: 1800 862 155  
Website: [support.vtech.com.au](http://support.vtech.com.au)

### **NZ Customers:**

Phone: 0800 400 785  
Website: [support.vtech.com.au](http://support.vtech.com.au)

## PRODUCT WARRANTY/ CONSUMER GUARANTEES

### **UK Customers:**

Read our complete warranty policy online at [vtech.co.uk/warranty](http://vtech.co.uk/warranty).

### **Australian Customers:**

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –  
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to [vtech.com.au/consumerguarantees](http://vtech.com.au/consumerguarantees) for further information.

**Visit our website for more  
information about our products,  
downloads, resources and more.**

***www.vtech.co.uk***  
***www.vtech.com.au***

