

vtech[®]

Instruction Manual

Pop & Spin Mower



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school


4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Maintain pretend lawns with the **Pop & Spin Mower**! This make-believe mowing machine introduces gardening basics, lawn mower safety and colours while building motor skills.

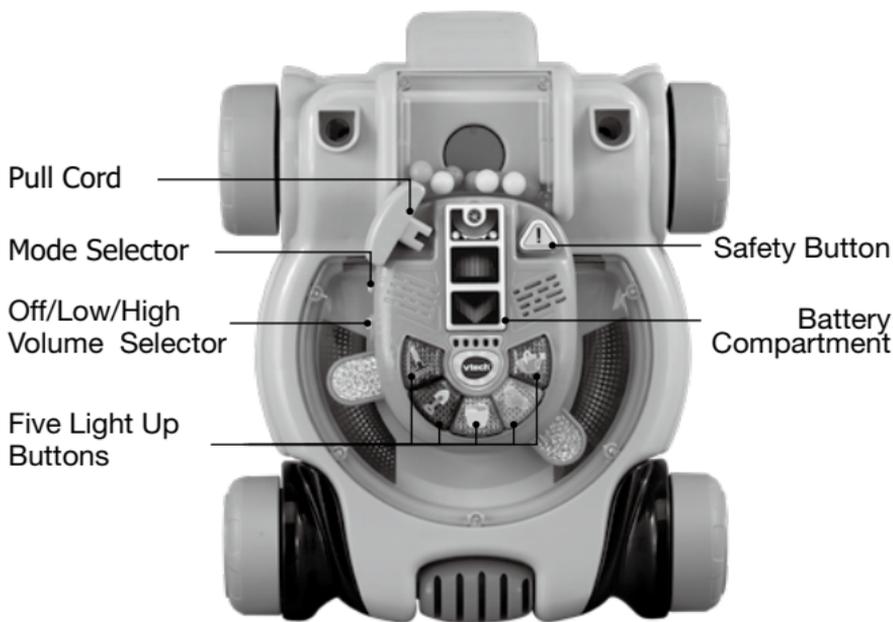


INCLUDED IN THIS PACKAGE

- Pop & Spin Mower



- 4 screws

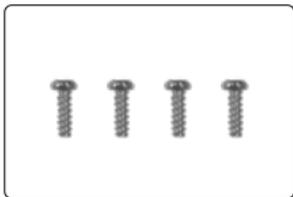

- Upper handle



- Lower handle



- 2 wheels



- 1 sticker sheet




- Quick Start Guide

NOTE

Not water safe. Do not expose to moisture or water.

LABEL APPLICATION

Please securely stick the labels to the toy as indicated below:

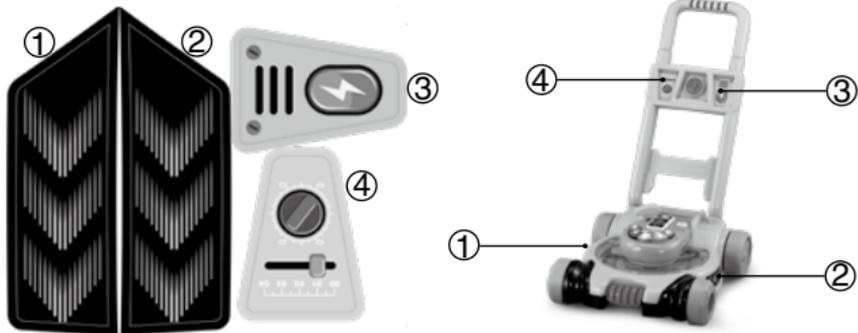

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.


NOTE

Please save this Instruction Manual as it contains important information.

INSTRUCTIONS

BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the top of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

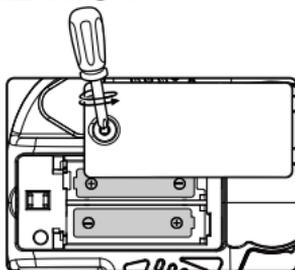

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

VTech® cares for the planet.

Care for the environment and give your toy a second life by disposing of it at a small electricals collection point so all its materials can be recycled.

In the UK:

Visit www.recyclenow.com to see a list of collection points near you.

In Australia & New Zealand:

Check with your local council for kerbside collections.

ASSEMBLY INSTRUCTIONS




CAUTION:

With the **Pop & Spin Mower**, safety comes first. Adult assembly required. This package contains small screws. For your child's safety, do not let your child play with the toy until it is fully assembled.

1. Align and connect the **Upper Handle** with the **Lower Handle**.



2. Insert two **Screws** on each side of the **Handle** and use a screwdriver to secure.

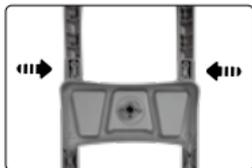

3. Insert the **Wheels** on both sides of the mower's body and press them in firmly.



4. Align the bottom of the **Handle** with the slots on the mower body.



5. Insert the **Handle** into the slots and press it down firmly.



PRODUCT FEATURES

1. Off/Low/High Volume Selector

Slide the **Off/Low/High Volume Selector** to the Low or High position to turn the unit on.



2. Mode Selector

Slide the **Mode Selector** to choose a mode of play. The two modes include a Learning and Music mode.



3. Five Light Up Buttons

Press the **Five Light Up Buttons** to learn facts about gardening tools and colours or hear fun songs.



4. Safety Button

Press the **Safety Button** to hear helpful lawnmower safety tips and songs about mowing.



5. Pull Cord

Pull to start the mower and hear engine and fun sounds.



6. Push the Mower

Push the mower along to hear realistic mowing sounds and different fun melodies.



7. Automatic Shut-Off

To preserve battery life, the **Pop & Spin Mower** will shut off automatically after several minutes without input. The unit can be turned on again by sliding the **Off/Low/High Volume Switch** or **Mode Selector**. The unit will also automatically turn off when the batteries are low.

ACTIVITIES

1. Learning Mode 🔍

- Press the **Five Light Up Buttons** to learn about colours and facts about gardening tools.
- Press the **Safety Button** to learn safety rules about mowing.
- Pull the **Pull Cord** twice to hear engine sounds. The sounds will end after 10 seconds if the mower doesn't move.
- To continue the engine sounds, push the mower and keep it moving. The engine sounds will stop five seconds after the mower stops. The faster the mower moves, the faster the engine sounds.

2. Music Mode 🎵

- Press the **Five Light Up Buttons** and **Safety Button** to hear sing-along songs.
- Pull the **Pull Cord** to hear sounds and push the mower to hear melodies.

SONG LYRICS

Song 1

A hand rake is good for breaking up the soil
It can help make the soil smooth
Which helps make planting seeds smooth,
Rake the weeds away and wait for flowers to bloom!

Song 2

The sky is blue and the sun is bright
Perfect time to mow the lawn.
The grass is long, and ready for a trim
Let's mow until we're done!

Song 3

Did you ever see a mower, a mower, a mower?
Did you ever see a mower go this way and that?
Go this way and that way? That way and this way?
Did you ever see a mower go this way and that?

Song 4

A spade is good for digging holes,
Making room for plants and flowers
Of different colours.
Like a red rose bush!

Song 5

Let's put the grass clip clip clippings,
in the garden tub.
oh yeah in the garden tub.
Sticks and weeds can go in too
in the garden tub
Oh yeah in the garden tub

Song 6

Reduce, reuse, recycle.

Reduce! Throwing away grass clippings.

Reduce, reuse, recycle.

Reuse! Grass clippings to keep your soil fresh.

Reduce, reuse, recycle

Recycle! It will make a difference in your garden.

Song 7

People say a good gardener

has a green thumb.

Even though their thumb

Isn't really green.

Grass is green. Leaves are green.

Grass is green. Leaves are green.

Good gardeners have green thumbs.

Song 8

Gardening gloves

are good to wear in the garden.

Dirt is a big part of lawn work

And gardening gloves help

keep your hands clean

and protected from scratches.

Song 9

When the plants are planted

And seeds are sewn

Fill up the watering can,

Be sure to sprinkle water

Over your garden.

Some plants like a little, some like a lot

Especially when it's hot!

Song 10

One child went to mow, went to mow a meadow
One child and their dog
Went to mow a meadow
Two children went to mow
Went to mow a meadow
Two children, one child and their dog
Went to mow a meadow
Three children went to mow,
Went to mow a meadow.

Song 11

For he's a jolly good mower,
For she's a jolly good mower,
For they're jolly good mowers!
Which nobody can deny.

Song 12

When it comes to mowing
Be safe and pick up sticks.
Watch where you're going.
Being outside mowing is so much fun,
Watch out for animals and everyone.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

If the problem persists, please contact our Consumer Services Department, and a service representative will be happy to help you.

CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au

