



Instruction Manual

DJ Jams Puppy



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

 
I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months

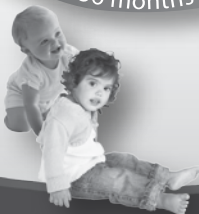

Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the **DJ Jams Puppy**. Move the microphone to get Puppy to groove to the music. Play musical instruments and add scratch disc sound effects for DJ play. Have a pup-tacular dance party!



INCLUDED IN THE PACKAGE

- DJ Jams Puppy
- Quick Start Guide

 
WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

Unlock the Packaging Locks

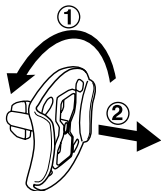

- ① Rotate the packaging locks 90 degrees anticlockwise.
- ② Pull out the packaging locks and discard.

 
GETTING STARTED

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Locate the battery cover on the bottom of the unit, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AA batteries (AM-3/LR6) following the diagram inside the battery box. (The use of new, alkaline batteries is recommended for maximum performance.)
5. Replace the battery cover and tighten the screw to secure.

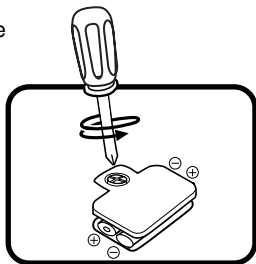

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

NOTE

This product is in try-me mode in the packaging. To activate normal play, turn the unit **Off**, then turn the unit back **On**. If the unit powers down or if the light fades out during play, please install a new set of batteries.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:


www.vtech.co.uk/recycle


www.vtech.com.au/sustainability

 
* Visit www.recyclenow.com to see a list of collection points near you.

PRODUCT FEATURES

1. On/Off Switch

To turn the unit **On**, slide the **On/Off Switch** to the **On**  position. You will hear fun sounds, a short tune, phrases and songs in the selected modes.

To turn the unit **Off**, slide the **On/Off Switch** to the **Off**  position.

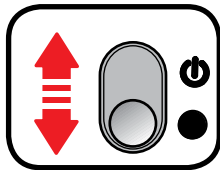

2. Mode Switch

Slide the **Mode Switch** to Music mode 🎵 , Learn mode 🔍 or Play mode 🎮 , you will hear an opening sequence of sounds, phrases and a song in each mode.



3. Automatic Shut-Off

To preserve battery life, the **DJ Jams Puppy** will automatically shut-off after approximately 30 seconds without input. The unit can be turned on again by pressing any button, moving the joystick or turning the disc.

NOTE

If the unit shuts-off or if the light fades out during play, please install a new set of batteries.

ACTIVITIES

1. Light Up Instrument Buttons

Press the **Light Up Instrument Buttons** to hear short instrument songs, tunes and melodies in Music mode, learn the names and sounds of instruments in Learn mode and hear how the melodies change sound with each instrument button in Play mode. The lights will flash with the sounds.



 
2. Microphone Joystick

Move the **Microphone Joystick**, up and down, or side to side to hear music with puppy sounds in Music mode, cute sing-along songs in Learn mode and melodies and phrases in Play mode. Moving the **Joystick** will make puppy swing and dance. The lights will flash with the sounds.



3. Turning Disc

Slide the **Turning Disc** to hear fun DJ scratch sounds, music and cute phrases depending on the selected mode.

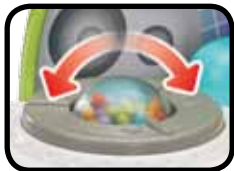

MELODIES

1. Where Has My Little Dog Gone?
2. Row, Row, Row Your Boat
3. Wheels on the Bus
4. Chopsticks
5. Bingo
6. Aiken Drum
7. Yankee Doodle
8. Little Robin Redbreast
9. Pussy Cat, Pussy Cat
10. MacNamara's Band
11. Do You Know the Muffin Man?
12. Rockin' Robin
13. Give My Regards to Broadway
14. Mulberry Bush
15. Daring Young Man on the Flying Trapeze

SONG LYRICS

Song 1

Play a little jazz on the saxophone,
Glide your fingers across the strings!
Tip-tap, tip-tap on the keys,
Tap the xylophone with all of your might!

Song 2

Did you ever see a puppy, a puppy, a puppy?
Did you ever see a puppy bop and dance to the beat?

Song 3

Get this musical party started!
Hit the keys and groove!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
5. If the unit stops working or malfunctions, install a new set of batteries.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to play with again.
5. If the product still does not work, install a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help.

CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)
Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155
Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785
Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au

