



Instruction Manual

7-in-1 Grow with Baby Sensory Gym



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

 
4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Make every day a gym day with the **7-in-1 Grow with Baby Sensory Gym!** We've got your little one covered from birth to toddler with activities to strengthen their muscles, minds and senses. Built in features are designed to nurture each developmental stage, and the guide explains just how to use each play zone and accessory to support your baby's growth.

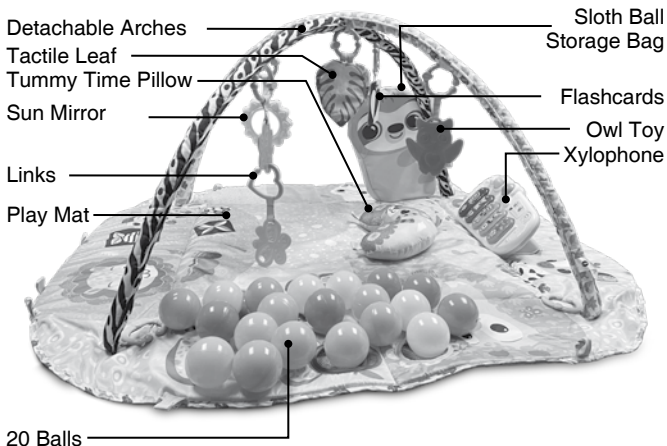

Developmental Guide

 


On/Off/Volume Switch




Mode Switch

INCLUDED IN THE PACKAGE

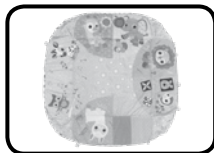

Play Mat

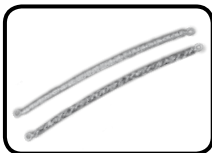 


2 Arch Pieces



Xylophone



 Xylophone/Card
Stand

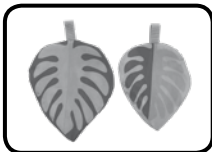

2 Crinkle Leaves



Sun Mirror



Owl Toy



Sloth Ball Storage Bag



 
Tummy Time Pillow




2 Linking Toys



4 Flashcards

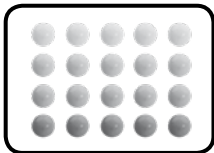

20 Balls

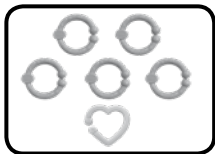 

6 Links



Developmental Guide

- Quick Start Guide

WARNING

All packing materials, such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

 
NOTE

Please save this Instruction Manual as it contains important information.

GETTING STARTED

Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the back of the xylophone, use a screwdriver to loosen the screw, and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 3 new AA batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

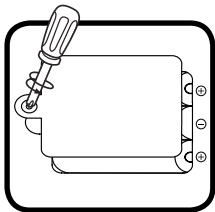

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

VTech® cares for the planet.

Care for the environment and give your toy a second life by disposing of it at a small electricals collection point so all its materials can be recycled.

In the UK:

Visit www.recyclenow.com to see a list of collection points near you.

In Australia & New Zealand:

 
Check with your local council for kerbside collections.

ASSEMBLY INSTRUCTIONS

With the **7-in-1 Grow with Baby Sensory Gym**, safety comes first. To ensure your child's safety, adult assembly is required. For your child's safety, do not let your child play with the toy until it is fully assembled.

Gym Assembly


1. Lay the two arches criss-crossed with the black and white arch over the top of the colourful arch. Slide the c-ring at the end of the black and white arch through the middle loop on the colourful arch, then guide the fabric portion of the arch through the middle loop until the two arches are even.
2. Lay the arches on top of the **Play Mat**.
3. Connect the c-rings at the end of each of the arches to the fabric loops on each corner of the **Play Mat**.

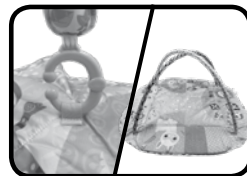

NOTE

Install arches carefully. Keep arches away from children until the gym is fully assembled. Until secured, arches may spring out of place.

 
4. Attach the sensory toys to the activity links, then attach them to the fabric loops on the arches.

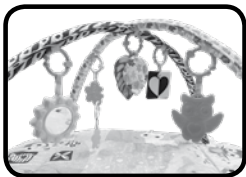

5. You can attach the **Sloth Ball Storage Bag** to the side of one of the arches. Secure the hook and loop material together on the sloth's paws to attach the bag to the arch.





 6. Attach the **Xylophone** to the **Play Mat**. Feed the two attachment tabs on the **Play Mat** through the slots on the back of the **Xylophone**.

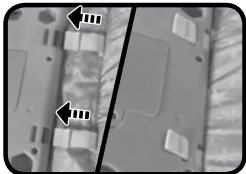


Kicking Play Assembly

  1. To prop up the **Xylophone** for kicking play, attach the **Xylophone** to the **Play Mat** following the instructions in the section above. Take the xylophone/card stand and insert it through the holes on the **Play Mat** and into the slots on the back of the **Xylophone**. The flat part of the xylophone/card stand should prop the **Xylophone** up at a 90 degree angle.
2. Fold up the side of the **Play Mat** to prop up the **Xylophone**. Connect the fabric loops and tabs on the arches and **Play Mat** to secure.

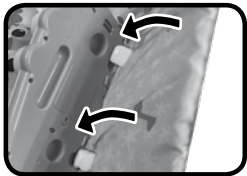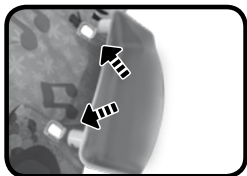

Tummy Time Play

 1. Remove the **Xylophone** from the **Play Mat** by removing the attachment tabs that secure the **Xylophone** to the **Play Mat**.
2. Place the xylophone/card stand attachment with the rounded side facing up. Insert the two tabs on the back of the **Xylophone** into the slots on the xylophone/card stand attachment.

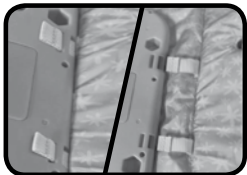

3. The xylophone/card stand attachment can also be used to prop up the sun mirror and the flashcards.



 
Floor Play

1. The **Play Mat** can be used for tummy time play or seated play. Detach the sensory toys from the arches, then remove the arches by detaching the rings from the fabric loops on the **Play Mat**. Attach the sensory toys to the fabric loops on the **Play Mat** and prop up the flashcards in the xylophone/card stand.



Ball Pit/Play Space

1. Fold up each side of the **Play Mat** to create the ball pit. Connect the four corners by inserting the fabric tabs through the fabric loops.
2. Remove the 20 **Balls** from the **Sloth Ball Storage Bag** and put them into the assembled ball pit.
3. Play with or without the arches attached.

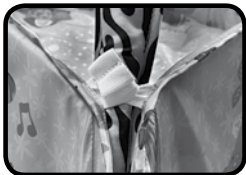
 
 


NOTE

We recommend supervising your baby during playtime with the **7-in-1 Grow with Baby Sensory Gym**.




PRODUCT FEATURES

1. On/Off/Volume Switch

To turn the unit **On**, slide the **On/Off/Volume Switch** to the Low Volume  or the High Volume  position. To turn the unit **Off**, slide the **On/Off/Volume Switch** to the **Off**  position.



2. Mode Switch

Slide the **Mode Switch** to the Music Mode , Animal Mode  or Explore Mode  position.



3. Automatic Shut Off

To preserve battery life, the **7-in-1 Grow with Baby Sensory Gym** will automatically shut off after approximately 50 seconds without input. The unit can be turned on again by pressing any button.

NOTE

If the unit powers down or if the light fades out during play, please install a new set of batteries.

ACTIVITIES

1. Light Up Xylophone Buttons

Press the xylophone buttons to hear fun sounds and melodies in Music Mode, learn about animals and their sounds in Animal Mode and learn numbers, shapes and colours in Explore Mode. The lights will flash with the sounds.



MELODIES

1. Pat-a-Cake
2. Little Miss Muffet
3. A-Tisket, A-Tasket
4. Old MacDonald Had a Farm
5. Jack Be Nimble
6. Pussy Cat, Pussy Cat
7. Little Boy Blue
8. One, Two, Buckle My Shoe
9. Humpty Dumpty
10. London Bridge

SONG LYRICS

Song 1

Come and play,
With your friends,
Colours and shapes,
They're so much fun!

Song 2

Tap the xylophone, hear fun sounds.
Sounds are bouncing all around.

Song 3

Little one, come here with your friends,
They'll sing their songs and play with you,
They're from the jungle, they run and roar,
Explore and fly and laugh with you.

Song 4

Lion loves running.

Song 5

Giraffe has lots of spots.

Song 6

Zebra has fun stripes.

Song 7

Sloth crawls slowly.

Song 8

Owl glides through the sky.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **ON**. The unit will now be ready to play again.
5. If the unit still does not work, replace with an entire set of new batteries.
6. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
7. The play mat and tummy time pillow are machine washable. The arches and leaves are surface washable only. Please remove the electronic module before cleaning and follow the care instructions on the tags.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.

CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.auPRODUCT WARRANTY/

CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED – CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au

