

vtech®

Instruction Manual

SWITCH&GO[®] DiNOS

Armour Up Velociraptor Helicopter



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school


4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

This **Switch & Go Dinos® Armour Up Velociraptor Helicopter** is an exciting 2 into 1 toy which combines the Velociraptor with the Helicopter to form an Armoured Up Velociraptor. Press the Sound Button to hear fun phrases and cool sound effects with lights.

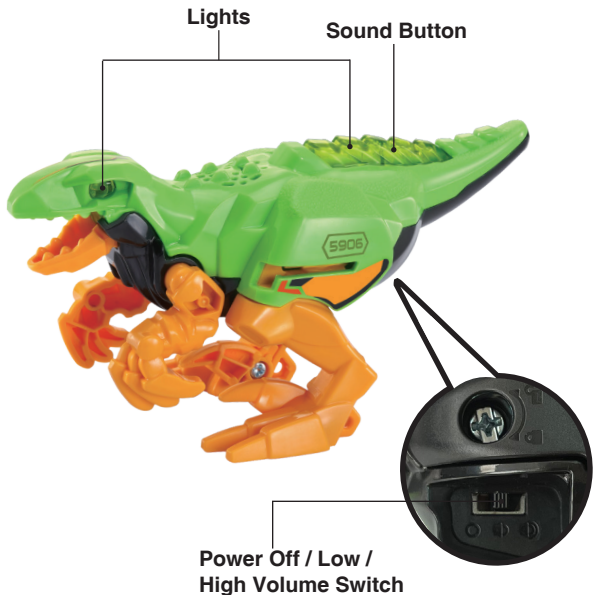

INCLUDED IN THE PACKAGE

- One Velociraptor
- One Helicopter
- One Quick Start Guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE:

Please save this Instruction Manual as it contains important information.


INSTRUCTIONS

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

Battery Removal and Installation

1. Make sure the unit is turned OFF.
2. Locate the battery cover on the bottom of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. If a used battery is present, remove it from the unit by pulling up on one end of the battery.
4. Install 1 new AAA (LR03/AM-4) battery following the diagram inside the battery box. (For best performance, alkaline batteries or fully Ni-MH charged rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

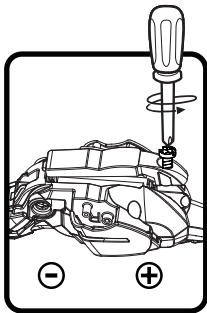

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.

 Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

www.vtech.co.uk/recycle

www.vtech.com.au/sustainability

* Visit www.recyclenow.com to see a list of collection points near you.

PRODUCT FEATURES

1. Power Off / Low / High Volume Switch

To turn the unit **On** or to adjust the volume, slide the **Power Off / Low / High Volume Switch** to the **Low** (🔊) or **High** (🔊) Volume position. To turn the unit **Off**, slide the switch to the **Off** (🔌) position.



2. Sound Button

Press the **Sound Button** to learn fun Dino facts, hear fun phrases and cool dinosaur sounds in Velociraptor mode and Armoured Up Velociraptor mode.



3. Lights

The **Lights** flash along with the sounds in Velociraptor mode and Armoured Up Velociraptor mode.




4. Automatic Shut-Off

To preserve battery life, **Switch & Go Dinos® Armour Up Velociraptor Helicopter** will automatically power down after several seconds without input. The unit can be turned on again by pressing the **Sound Button**. The unit will also automatically turn off when battery power is very low.


Note: If the unit repeatedly powers down or has abnormal responses when the unit is switched on, please install a new battery and try switching it on again.

Combination


Combine to form an Armoured Up Velociraptor

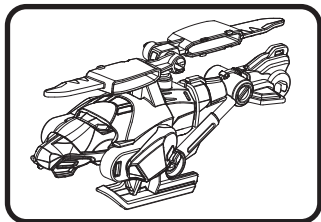


1. Begin with the Helicopter.

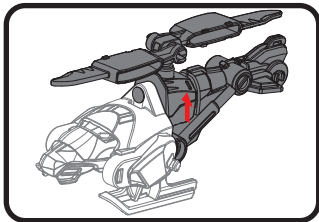


2. Lift the tail section upwards.

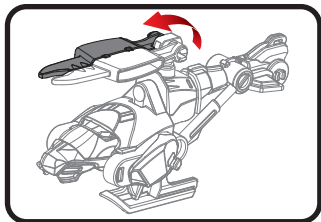


3. Flip one rotor blade over to the other.

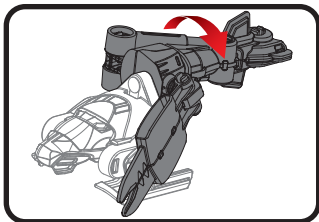


4. Turn the tail section over to the left. Then, secure the rotor blades to the clip.

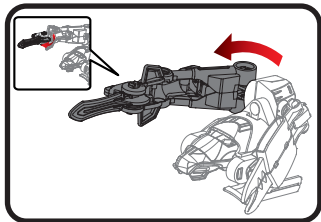


5. Flip the inner wing out and then flip the tail to the front.

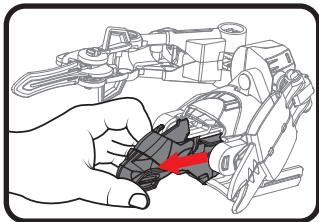

6. Pull the nose outwards.

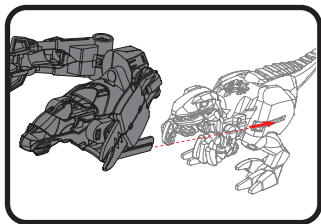


7. Slide the Helicopter onto the Velociraptor. Make sure the front of the Helicopter connects with the Velociraptor's head.

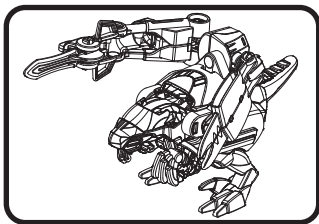


8. The release button on the side of the Velociraptor is triggered when the Helicopter slides towards the Velociraptor's head. The Helicopter and Velociraptor have now been combined into an Armoured Up Velociraptor.


Switch back to Velociraptor

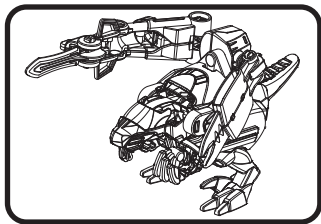


1. Begin with the Armoured Up Velociraptor.

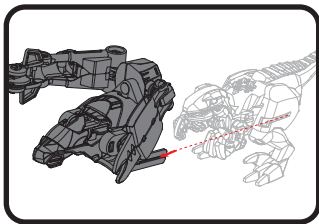


2. Hold the tail of the Velociraptor tightly and then pull the Helicopter out.

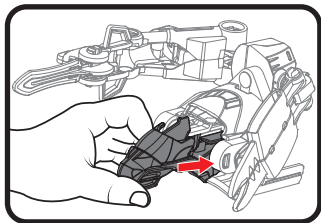


3. Push the nose inwards.

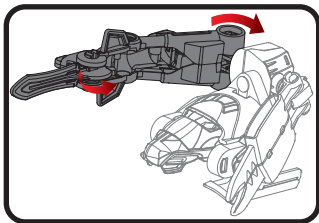


4. Flip the wing back.

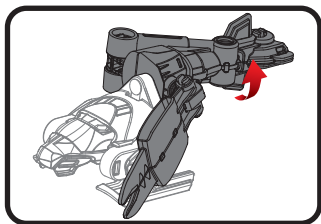


5. Turn the tail section of the Helicopter back.

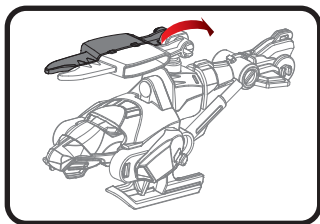

6. Flip one of the rotor blades back.

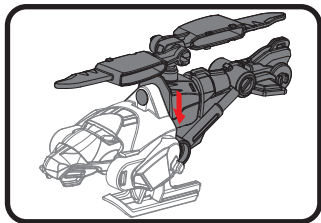

7. Pull the tail section down.

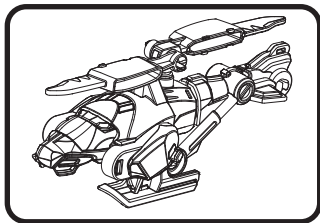

8. You have now switched the Helicopter back to normal.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the battery when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the battery.
3. Let the unit stand for a few minutes, then replace the battery.
4. Turn the unit **ON**. The unit should now be ready to play with again.
5. If the product still does not work, install a brand new battery.

If the problem persists, please call our Consumer Services Department, and a service representative will be happy to help you.

CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au

