

Instruction Manual

Peek-a-Boo Surprise



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

Interactive toys to develop their imagination and encourage language development

Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

vtech Bally

Toys that will stimulate their interest in different textures. sounds and colours

lam...

- ...responding to colours, sounds and textures
- ...understanding cause and effect
- ...learning to touch, reach, grasp, sit-up, crawl and toddle

I want...

- ...to get ready for school by starting to learn the alphabet and counting
- ...my learning to be as fun, easy and exciting as can be
- ...to show my creativity with drawing and music so my whole brain develops

I need...

- ...challenging activities that can keep pace with my growing mind
- ...intelligent technology that adapts to my level of learning
- ...National Curriculum based content to support what I'm learning at school


Birth-36 months



INTRODUCTION

Thank you for purchasing the Peek-a-Boo Surprise.

Playtime is on a roll with this interactive toy! Six fabric handles are easy to hold and provide different textures, colours and patterns to delight your baby's senses. As it rolls, the sloths spin while music and phrases play, encouraging little ones to crawl and walk after it.

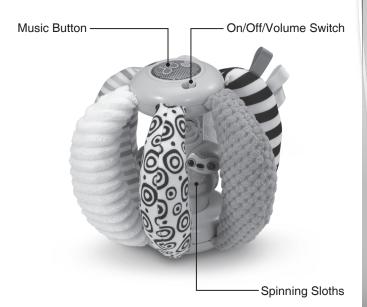

INCLUDED IN THE PACKAGE

- · Peek-a-Boo Surprise
- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.


NOTE

Please save this Instruction Manual as it contains important information.

GETTING STARTED

Battery Removal and Installation

- 1. Make sure the unit is turned OFF.
- Locate the battery cover on the bottom of the unit, use a screwdriver to loosen the screw and then open the battery cover.
- If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
- Install 2 new AAA (AM-4/LR03)
 batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
- 5. Replace the battery cover and tighten the screw to secure.

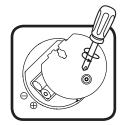

WARNING:

Adult assembly required for battery installation. Keep batteries out of reach of children.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- · Remove batteries during long periods of non-use.
- · Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheelie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

VTech® cares for the planet.

Care for the environment and give your toy a second life by disposing of it at a small electricals collection point so all its materials can be recycled.

In the UK:

Visit www.recyclenow.com to see a list of collection points near you.

In Australia & New Zealand:

Check with your local council for kerbside collections.

PRODUCT FEATURES

1. On/Off/Volume Switch

To turn the unit **On**, slide the **On/Off/ Volume Switch** to the Low volume

↑) or the High volume
↑) position.

You will hear a playful song, a phrase and a short tune. To turn the unit **Off**, slide the **On/Off/Volume Switch** to the **Off** position.



2. Automatic Shut-Off

To preserve battery life, the **Peek-a-Boo Surprise** will automatically shut off after approximately 25 seconds without input. The unit can be turned on again by pressing the light up button or by triggering the motion sensor.

NOTE

If the unit powers down or if the light fades out during play, please install a new set of batteries.

ACTIVITIES

1. Music Button

Press the **Music Button** to learn about the sloths and hear sing-along songs, fun sounds and melodies. The light will flash with the sounds.



2. Motion Sensor

Shake, spin and roll the toy to hear a variety of playful sounds. The light will flash with the sounds.



MELODIES

- 1. Humpty Dumpty
- A-Tisket, A-Tasket
- 3. Hey Diddle, Diddle
- 4. Frère Jacques
- 5. Diddle, Diddle Dumpling
- 6. Little Boy Blue
- 7. Bingo
- 8. Here We Go 'Round the Mulberry Bush
- 9. Hickory, Dickory, Dock
- 10. Old King Cole
- 11. Polly, Put the Kettle On
- 12. Jack Be Nimble
- 13. Skip to My Lou
- 14. Teddy Bears' Picnic
- 15. Yankee Doodle

SONG LYRICS

Song 1

Wiggle, giggle, roll, roll, roll! Wibble, wobble on the floor!

Song 2

Sleepy baby sloth, do you want to play? We can wobble and roll through the day.

Song 3

Peek-a-boo, sweet mummy sloth, We see you hiding inside of the ball.

Song 4

Roll, roll, roll the ball, roll it 'round and 'round. Roll it up, roll it down, roll it all around.

CARE & MAINTENANCE

- 1. Keep the unit clean by wiping it with a slightly damp cloth.
- Keep the unit out of direct sunlight and away from any direct heat sources.
- Remove the battery if the unit will not be in use for an extended period of time.
- Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

- 1. Turn the unit Off.
- 2. Interrupt the power supply by removing the batteries.
- 3. Let the unit stand for a few minutes, then replace the batteries.
- 4. Turn the unit **On**. The unit should now be ready to use again.
- 5. If the unit still does not work, install a new set of batteries. If the problem persists, please contact our Consumer Services

Department, and a service representative will be happy to help you.

CONSUMER SERVICES

Creating and developing VTech® products is accompanied by a responsibility that we at VTech® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED – CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

Visit our website for more information about our products, downloads, resources and more.

www.vtech.co.uk www.vtech.com.au

