 




Instruction Manual

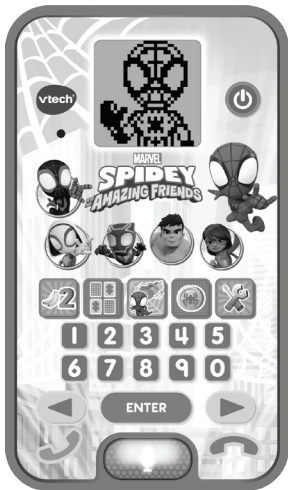

Spidey Learning Phone



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years

 


To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the **Spidey Learning Phone**.

The **Spidey Learning Phone** includes 6 exciting activities and features that help to test your skill with counting, memory, matching and more! You can also receive fun virtual voice messages from Spidey, and use voice activated play to make role-play phone calls!

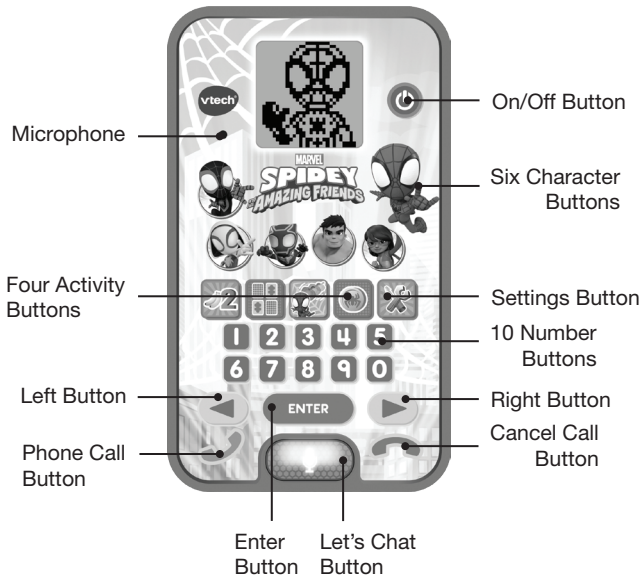

INCLUDED IN THIS PACKAGE

- One Spidey Learning Phone
- One Instruction Manual

 
WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE:

Please save this Instruction Manual as it contains important information.

Removing the packaging locks:

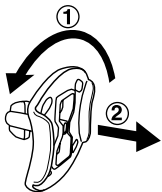


- ① Rotate the packaging locks 90 degrees anti-clockwise
- ② Pull out the packaging locks.

GETTING STARTED

BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is OFF.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw.

 - If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
- Install 2 new 'AA' (AM-4/LR03) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
- Replace the battery cover and tighten the screw to secure.

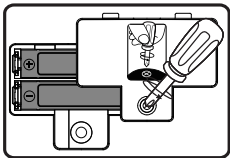

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

VTech® cares for the planet.

Care for the environment and give your toy a second life by disposing of it at a small electricals collection point so all its materials can be recycled.

In the UK:

Visit www.recyclenow.com to see a list of collection points near you.

In Australia & New Zealand:

Check with your local council for kerbside collections.

PRODUCT FEATURES

1. On/Off Button

To turn the unit on, press the **On/Off Button**. Press the **On/Off Button** again to turn the unit off.

2. Character Buttons



Press one of the six **Character Buttons** (Spin, Ghost-Spider, Black Panther, Hulk, Ms. Marvel or Spidey) to hear about the Spidey team and view their fun animations.

3. Activity Buttons



Press the **Activity Buttons** directly to play one of the four activities.

4. Settings Button

Press the **Settings Button** to turn background music on/off, adjust screen contrast, or select a ringtone.

5. Number Buttons



Press the **Number Buttons** to learn numbers or to answer number-related questions.

6. Let's Chat Button



Press the **Let's Chat Button** to enter the Let's Chat activity. This activity uses the voice activation feature. The LED will light up when the button is activated.

7. Enter Button



Press the **Enter Button** to confirm your choice.

8. Left/Right Buttons



Press the **Left/Right Buttons** to make a selection in activities or menus.

9. Phone Call Button



Press the **Phone Call Button** to make role-play calls to the Spidey Team. You will hear the phone ringing and will then be able to leave a virtual voice message.

10. Cancel Call Button



Press the **Cancel Call Button** at any time to exit the current activity.

11. Microphone

The **Microphone** is used for the voice activation feature. The suggested distance to keep between the **Microphone** and your mouth is about 10-12cm.

12. Automatic Shut Off

To preserve battery life, the **Spidey Learning Phone** will automatically turn off after several minutes of inactivity. The unit can be turned on again by pressing the **On/Off Button**. The unit will also automatically turn off when the batteries are very low. A warning will be displayed on screen as a reminder to change the batteries.

NOTE:

If the unit powers down while playing, we suggest changing the batteries.

 
ACTIVITIES

1. Voice Message

Press any of the six **Character Buttons** (Spin, Ghost-Spider, Black Panther, Hulk, Ms. Marvel or Spidey) on the phone to play an animation of that character with a brief introduction or to play some fun phrases related to the characters.


2. Count Bananas

Spidey and Ms. Marvel try to toss some bananas to lure and catch the monkeys. Count how many bananas there are. Press a **Number Button** to answer, or press the **Left** or **Right Button** to choose, then press the **Enter Button** to confirm.

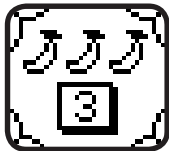


3. Matching Pairs

 Spin sneaks into Doc Ock's secret hideout to stop her evil plan. Help Miles match the simple patterns or numbers to deactivate the security lasers and defeat Doc Ock. Press the **Left** or **Right Button** to choose, then Press the **Enter Button** to confirm.

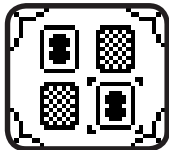

4. Avoid the Pumpkins

 Help Spidey avoid the pumpkins as he pursues Green Goblin. Press the **Left** or **Right Button** to avoid the pumpkins. Then blow into the **Microphone** to make bubbles Spidey can use to flip Green Goblin's glider!

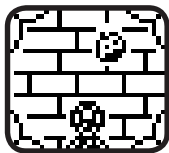

5. Matching Coins

Help Ghost-Spider find the matching coins to track down Rhino. Press the **Left** or **Right Button** to choose, then press the **Enter Button** to confirm.



 
6. Settings

Press the **Settings Button** to turn background music on/off, adjust screen contrast, or choose one of the five ringtones.



7. Let's Chat

Let's call Spidey! Press the **Let's Chat Button** to auto-dial the Spidey Webquarters' virtual phone number. After the ring tone, the narrator will ask some fun questions. Speak into the **Microphone** to answer.

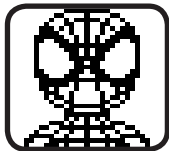

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to excess moisture.

TROUBLESHOOTING

If for some reason the program/activity stops working, then please follow these steps:

1. Turn the unit OFF.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **ON**. The unit will now be ready to play with again.
5. If the unit still does not work, install a brand new set of batteries.

CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au

