

vtech[®]

Instruction Manual

 
Pop-a-balls[™]

Pop & Count Ball Pit[™]



INTRODUCTION

Thank you for purchasing the **Pop-a-Balls™ Pop & Count Ball Pit™!** Playtime gets a boost with thirty balls and over three feet of space to play in. This interactive, animal-themed ball pit engages little ones in play and learning. Count, pop, slide and sing!

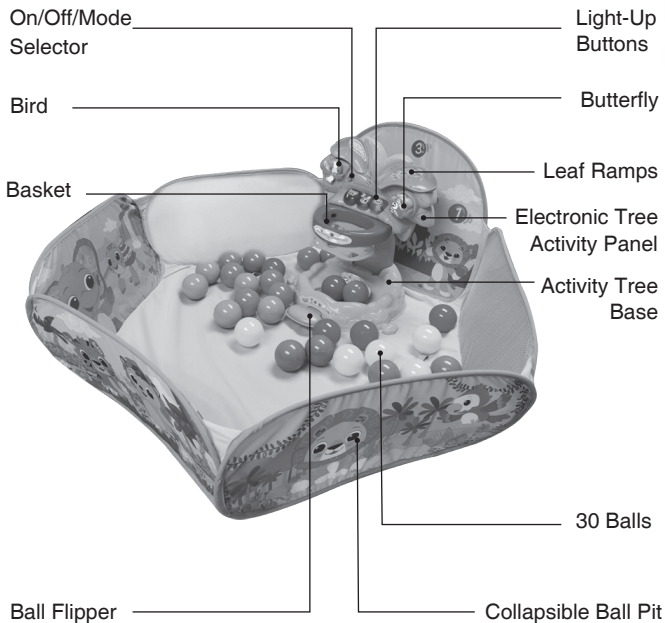

INCLUDED IN THE PACKAGE

- Pop-a-Balls™ Pop & Count Ball Pit™

- One activity tree base



 
- One electronic tree activity panel



- One basket




- One attachment clip

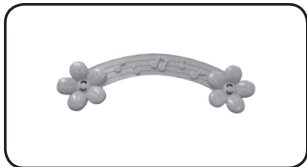

- One collapsible ball pit



 - One sheet of labels

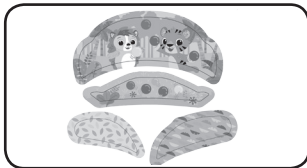

- 30 balls
- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

 
ATTENTION

Pour la sécurité de votre enfant, débarrassez vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE

Il est conseillé de sauvegarder ce manuel d'utilisation car il comporte des informations importantes.


Please stick the labels to the product securely as indicated below:

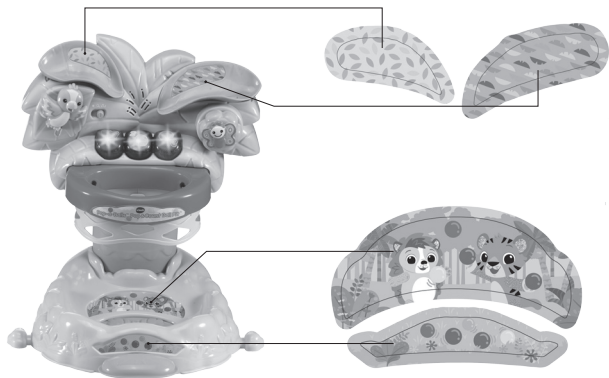

GETTING STARTED

Battery Removal and Installation

 1. Make sure the unit is turned **Off**.
2. Locate the battery cover on the back of the electronic tree activity panel. Use a screwdriver to loosen the screw and open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 3 new AAA batteries following the diagram inside the battery box. Replace the battery cover and tighten the screw to secure.

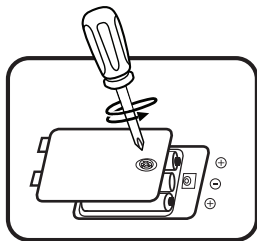

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.



ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.
Tenir les piles ou accumulateurs hors de portée des enfants.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

IMPORTANT : INFORMATIONS CONCERNANT LES PILES

- Mettre en place les piles ou les accumulateurs en respectant les polarités + et -.
- Ne pas mélanger des piles ou des accumulateurs neufs avec des usagés.
- Ne pas mélanger différents types de piles : alcalines, zinc-carbone et rechargeables.
- Seules des piles du type recommandé doivent être utilisées.
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le -).
- Retirer les piles ou les accumulateurs en cas de non-utilisation prolongée.
- Enlever les piles ou les accumulateurs usagés du jouet.
- Ne les jeter ni au feu ni dans la nature.


PILES RECHARGEABLES

- Enlever, lorsque c'est possible, les accumulateurs du jouet pour les recharger.
- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.
- Ne pas tenter de recharger des piles non rechargeables.


ASSEMBLY INSTRUCTIONS

With the **Pop-a-Balls™ Pop & Count Ball Pit™**, safety comes first. To ensure your child's safety, adult assembly is required.

 1. Attach the Basket to the Electronic Tree Activity Panel. You will hear the pieces snap together to indicate the parts are connected. Once the parts have been connected, they cannot be separated.

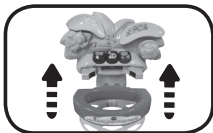

 2. Insert the Electronic Tree Activity Panel to the Activity Tree Base. You will hear the pieces snap together to indicate the parts are connected. Once the parts have been connected, they cannot be separated.

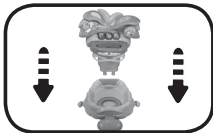

3. Place the Activity Tree Base in the ball pit. Hook the two straps on either side of the Activity Panel Base.



4. Slide the Electronic Tree Activity Panel against the fabric wall. Locate the two slots on the back of the Electronic Tree Activity Panel and fasten it to the fabric wall using the Attachment Clip. You will hear the Attachment Clip snap into place when inserted correctly.






5. To fold up the collapsible ball pit for storage, remove the Activity Tree and put the Balls in the middle of the ball pit. Fold the panel opposite the tallest panel over the Balls then fold in the two sides. Tie the two Ties together.



PRODUCT FEATURES

1. On/Off/Mode Selector

To turn the unit **On**, slide the **On/Off/Mode Selector** to the Explore mode  or the Music mode  position. You will hear a song, phrase and sounds. To turn the unit **Off**, slide the **On/Off/Mode Selector** to the **Off**  position.



2. Automatic Shut-Off

To preserve battery life, the **Pop-a-Balls™ Pop & Count Ball Pit™** will automatically shut off after approximately 50 seconds without input. The unit can be turned on again by sliding the **On/Off/Mode Selector**, pressing the **Light-Up Buttons**, twisting the **Butterfly** or sliding the **Bird**.



 
NOTE

If the unit powers down or the light fades out during play, please install a new set of batteries.

ACTIVITIES

1. Basket

Drop the **Balls** into the **Basket** to hear the balls counted up to ten in Explore mode or hear fun sounds in Music mode. The lights will flash with the sounds.

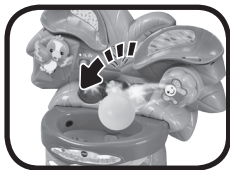


NOTE

The infrared light sensors in the basket are sensitive to sunlight. The sensors may not perform properly in brightly lit, sunny rooms or under direct sunlight.


2. Light-Up Buttons

 Press the three **Light-Up Buttons** to learn about animals and colors and follow simple instructions in Explore mode. In Music mode, you will hear melodies and sing along songs and follow simple instructions. The lights will flash with the sounds.

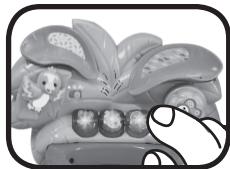

3. Bird

 Slide the **Bird** to hear playful sounds, phrases and music. If there is a ball on the **Leaf Ramp**, slide the **Bird** to see the ball slide down the **Leaf Ramp** and through the basket. The lights will flash with the sounds.

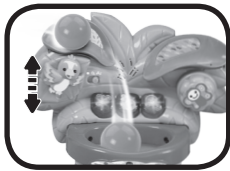

4. Butterfly

Twist the **Butterfly** to hear playful sounds and phrases in Explore mode. In Music mode you will hear short tunes and melodies. If there is a ball on the **Leaf Ramp**, twist the **Butterfly** to see the ball slide down the **Leaf Ramp** and through the basket. The lights will flash with the sounds.



MELODY LIST

1. Aiken Drum
2. Alphabet Song
3. A-Tisket, A-Tasket
4. The Bear Went Over the Mountain
5. Bicycle Built for Two
6. Bingo
7. The Entertainer
8. Girls and Boys Come Out to Play
9. Glow Worm
10. Humpty Dumpty
11. London Bridge
12. Mulberry Bush
13. Oats, Peas, Beans, and Barley Grow
14. Old MacDonald Had a Farm
15. One Man Went to Mow a Meadow
16. Pease Porridge Hot
17. Row, Row, Row Your Boat
18. Skip to My Lou
19. Teddy Bears' Picnic
20. Toyland

SONG LYRICS

Song 1

Balls are popping up and down,
Bouncing and rolling around.
Red and blue, and yellow and green.
Poppity, poppity pop!

Song 2

Drop a blue ball in.
Pop and red ball up.
Launch a green ball in the air,
The balls all bounce around.

Song 3

Join the fun and count with me.
One, two, three.
Four, five, six.
Seven, eight, nine, ten!

Song 4

Turtle, turtle, where are you?
Are you hiding in your shell?
Peek-a-boo, we see you!

Song 5

Elephant's trunk is oh so long,
Oh so long, oh so long.
Elephant's like to wiggle their ears,
All day long!

Song 6

Lion is so fast and strong,
Running through the jungle, bounding along.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.

4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

IMPORTANT NOTE:

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S., **1-877-352-8697** in Canada, or by going to our website **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

CAUTION

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment

generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Supplier's Declaration of Conformity

47 CFR § 2.1077 Compliance Information

Trade Name: VTech®
Model: 5336
Product Name: Pop-a-Balls™ Pop & Count Ball Pit™
Responsible Party: VTech Electronics North America, L.L.C.
Address: 1156 W. Shure Drive, Suite 200
Arlington Heights, IL 60004
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com
vtechkids.ca

Read our complete warranty policy online at
vtechkids.com/warranty
vtechkids.ca/warranty

