

vtech®


Instruction Manual

Kidi Superstar Jr. DJ Mixer™



INTRODUCTION

Thank you for purchasing the **Kidi Superstar Jr. DJ Mixer™**! Get the party started with 9 musical friends, a mini keyboard, DJ sound effects, fun phrases and 4 different activities. Record your creations to play back later.

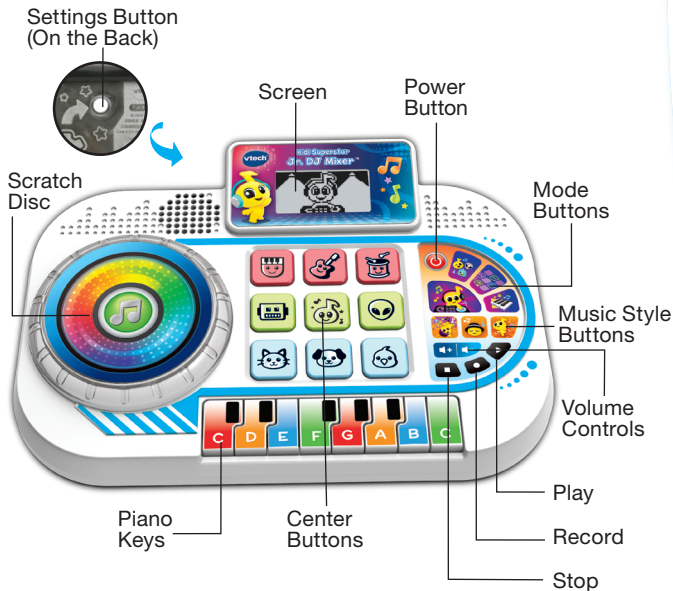

INCLUDED IN THE PACKAGE

- Kidi Superstar Jr. DJ Mixer™
- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.


ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE

Il est conseillé de sauvegarder ce manuel d'utilisation car il comporte des informations importantes.

Unlock the Packaging Locks

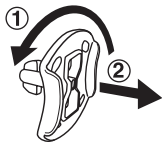

- ① Turn the packaging locks counterclockwise several times.
- ② Pull out and discard the packaging locks.

ACTIVATING NORMAL PLAY MODE


This product is in Try-Me mode in the packaging. Turn **On** the **Kidi Superstar Jr. DJ Mixer™**, turn the unit over and press the **Settings Button** on the back. You will hear 3 short beeps and the unit will restart. The **Kidi Superstar Jr. DJ Mixer™** is now ready for Normal Play! If the unit powers down during play, please install a new set of batteries.



GETTING STARTED

Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the bottom of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 3 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

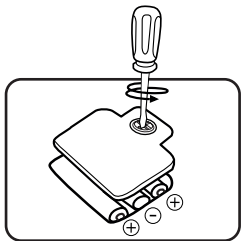



WARNING:

Adult assembly required for battery installation.

Keep batteries out of reach of children.



ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.

Tenir les piles ou accumulateurs hors de portée des enfants.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

NOTE:

If the unit repeatedly powers down while playing or the light fades out, we suggest changing the batteries.

PRODUCT FEATURES

1. Power Button

Press the **Power Button** to turn the unit **On**. Press the button again to turn the unit **Off**.



2. Mode Buttons

Press one of the four **Mode Buttons** to choose an activity.



3. Piano Keys

Press the **Piano Keys** to play notes in **Mix**, **Create** and **Trio Mode**.



4. Scratch Disc

Spin the **Scratch Disc** to add fun sound effects to your music. Lights will flash with the sounds.



5. Center Buttons

Press the **Center Buttons** to choose instrument and character sounds. The buttons will illuminate.



6. Music Style Buttons

Press a **Music Style Button** to choose Hip Hop, Chill, or Dance music. Press the button again to choose another track in the same style.



7. Stop Button

Press the **Stop Button** ■ to stop the music or finish your recording in **Mix** or **Create Mode**.




8. Record Button

Press the **Record Button** ● to record your music in **Mix** or **Create Mode** 🎧. When you are finished, press the **Stop Button** ■ to save your mix. The toy will record 2 minutes of music.

Note: When recording a new mix, your previous recording will be overwritten.





9. Play Button

After recording, press the **Play Button**  to playback your mix.







10. Volume Buttons

Press the **Volume Controls**  |  to adjust the sound.



13. Settings Button

- Use the **Settings Button**  to exit Try-me mode. *See page 2.*
- To adjust screen contrast, press the **Settings Button**  to enter the menu. Spin the **Scratch Disc**  to make a selection and press the **Play Button**  to confirm.



14. Automatic Shut-Off

To preserve battery life, the unit will automatically turn **Off** after several minutes without input. The unit can be turned **On** again by pressing the **Power Button**. The unit will also automatically turn **Off** when battery power is low.







Note: If the **Kidi Superstar Jr. DJ Mixer™** powers down repeatedly, please install a brand new set of batteries.

Modes

1. Mix Mode







Create your own unique music combinations!

- Press the  **Center Buttons** to mix up to four tracks and change them as you play.
- Press the  **Note Character** to add or remove vocals.
- Press a  **Music Style Button** to change tunes.
- Press the  **Mix Mode Button** to add fun DJ phrases.
- Spin the  **Scratch Disc** for fun scratching sound effects.
- Use the  **Piano Keys** to add your own melodies.

2. Trio Mode



Form your own trio!

- Press the  **Center Buttons** to add instruments and characters to your trio. Change them while you play.
- Press a  **Music Style Button** to change tunes.
- Spin the  **Scratch Disc** to jam in fun sound effects.
- Use the  **Piano Keys** to add your own melodies.

3. Memory Mode










Follow the lights and sounds to match the pattern. Each game features a total of 6 rounds. Complete 6 rounds to win.

4. Create Mode



Create a melody using the instrument & character sounds in the **Center Buttons**.

- Press a  **Center Button** to apply special character or instrument sounds to the  **Piano Keys** &  **Scratch Disc**.
- Use the  **Piano Keys** to play the chosen sounds.
- Spin the  **Scratch Disc** to hear your selected sound effects.
- Press a  **Music Style Button** to change your backing track.
- Press the  **Create Mode Button** again to jam in fun DJ phrases.

SONG LYRICS

Hip-hop

Song 1

A - B - C - D - E - F - G,
H - I - J - K - L - M - N - O - P,
Q - R - S,
T - U - V,
W - X,
Y and Z!

Now I know my A B Cs!
Next time won't you sing with me?
(Hey! Yeah! Ready? C'mon)

Song 2

One, two, three,
c'mon and move with me!
Four, five, six,
scratch that disc and mix!
Seven, eight, nine and ten,
Let's play that song again!

Song 3

The rhythm will move us.
The beat will groove us.
As we sing our song,
as we sing our song.
The rhythm will move us.
The beat will groove us.
Won't you sing along?
Won't you sing along?

Chill

Song 1

You are special,
like a snowflake!
One of a kind,
special in your way!
Like no one else, just be yourself,
and let your light shine through!

Song 2

R, Red, music's swirlin' in my head.
G, Green, I'm a rhythm machine.
B, Blue, Now I'm feeling the groove.
Headphones on, just the music and me!

Song 3

Hey diddle diddle,
the cat in the fiddle.
The cow jumped over the moon.
The little dog laughed to see such fun,
and the dish ran away with the spoon!

Dance

Song 1

We love the music,
and let it move us, (Move your body!)
as we run and play,
as we run and play! (3, 2, 1, go!)
We love the music,
and let it move us, (Hey! Hey!)
as we run and play,
as we run and play! (3, 2, 1, go!)

Song 2

Hickory, dickory, dock,
the mouse ran up the clock.
The clock struck one,
the mouse ran down.
Hickory, dickory, dock.
Hickory, dickory, dock,
the mouse ran up the clock.
The clock struck two,
the mouse ran down.
Hickory, dickory, dock.

Song 3

Let's clap our hands,
and dance with our friends!
We'll rock to the beat,
jump and move our feet!
Hop Hop Hop Hop - Move!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

IMPORTANT NOTE:

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S., **1-877-352-8697** in Canada, or by going to our website **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Supplier's Declaration of Conformity

47 CFR § 2.1077 Compliance Information

Trade Name: VTech®
Model: 5814
Product Name: Kidi Superstar Jr. DJ Mixer™
Responsible Party: VTech Electronics North America, L.L.C.
Address: 1156 W. Shure Drive, Suite 200
Arlington Heights, IL 60004
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

CAN ICES-3(B)/NMB-3(B)

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com
vtechkids.ca

Read our complete warranty policy online at
vtechkids.com/warranty
vtechkids.ca/warranty

