 


**vtech**<sup>®</sup>

Parent's Guide

# Safari Sounds Guitar

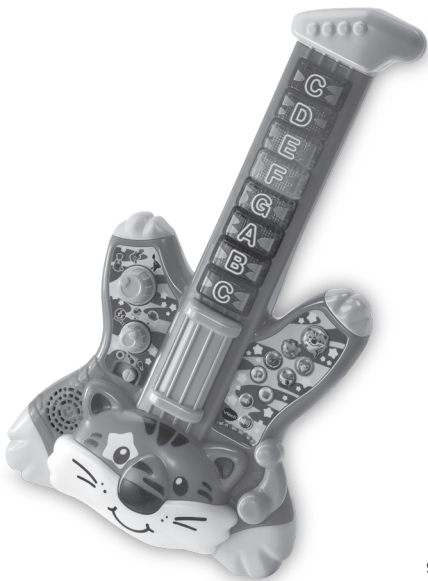

91-003913-000 

**VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...**

## **vtech** Baby

**Toys that will stimulate their interest in different textures, sounds and colours**

### **I am...**

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

**Birth-36 months**



## **Pre-School**

**Interactive toys to develop their imagination and encourage language development**

### **I want...**

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

**3-6 years**



## **Electronic Learning Computers**

**Cool, aspirational and inspiring computers for curriculum related learning**

### **I need...**

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

**4-10 years**

 


To learn more about this and other VTech® products, visit [www.vtech.co.uk](http://www.vtech.co.uk)

# INTRODUCTION

Thank you for purchasing the **Safari Sounds Guitar** by **VTech®**!

The **Safari Sounds Guitar** is an entertaining musical toy guitar which is themed like a tiger! The guitar can switch between acoustic, clean electric or distorted electric sounds at the push of a button! It plays Rock, Blues and Country genre melodies and sing-along songs about the tiger, bear, elephant, frog and parrot. Much more is just waiting to be discovered and explored with the **VTech® Safari Sounds Guitar**!

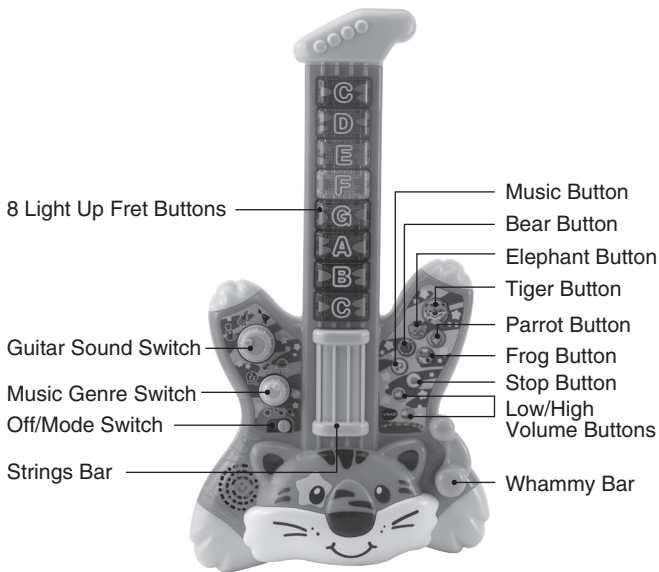

# INCLUDED IN THIS PACKAGE

 
- One VTech® Safari Sounds Guitar
- One Parent's Guide

## WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

**NOTE:** Please keep this parent's guide as it contains important information.

## Removing the packaging locks:

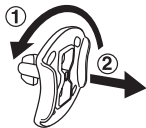


- ① Rotate the packaging locks anticlockwise 90 degrees.
- ② Pull out the packaging locks and discard.

# GETTING STARTED
 
## Battery Removal and Installation

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover at the back of the unit. Use a screwdriver to loosen the screw and remove the cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AA (LR6/AM-3) batteries into the main unit following the diagram inside the battery box. (The use of new, alkaline batteries is recommended for maximum performance).
5. Replace the battery cover and tighten the screw to secure.

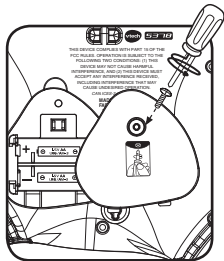

## **BATTERY NOTICE**

- Alkaline Batteries are recommended.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc), rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity (+ and -).
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

### **WARNING:**

Adult assembly required for battery installation. Keep batteries out of reach of children.

## Disposal of batteries and product



The crossed-out wheelee bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

VTech® cares for the planet.

Care for the environment and give your toy a second life by disposing of it at a small electricals collection point so all its materials can be recycled.

In the UK:

Visit [www.recyclenow.com](http://www.recyclenow.com) to see a list of collection points near you.

In Australia & New Zealand:

Check with you local council for kerbside collections.

## PRODUCT FEATURES



### 1. Off/Mode Switch



Slide the **Off/Mode Switch** to either **Guitar Fun** or **Animal Band** mode to power on the unit or to change mode. Slide the switch back to the **OFF** position to turn the unit off.



 
## 2. Low/High Volume Buttons

Press the **Low Volume Button**  to lower the volume. Press the **High Volume Button**  to increase the volume. After powering the unit off and on again, you may need to adjust the volume.






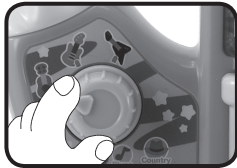 
## 3. 8 Light Up Fret Buttons

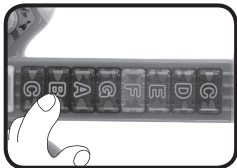Press the **8 Light Up Fret Buttons** to create your own music with acoustic, clean electric, distorted electric guitar or animal sounds. The lights will flash with the music and sing-along songs.



## 4. Guitar Sound Switch

Switch the **Guitar Sound Switch** to select acoustic , clean electric  or distorted electric guitar  sounds.



 
## 5. Music Genre Switch

Switch the **Music Genre Switch** to choose between Rock , Blues  or Country  music genre.




## 6. Strings Bar

Move the **Strings Bar** to play sound effects and the melodies.

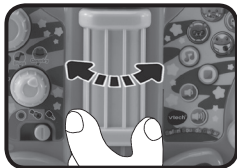


## 7. Whammy Bar

 Move the **Whammy Bar** to hear special guitar sound effects.

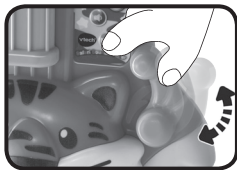


## 8. Music Button

 Press the **Music Button** to play the melodies.

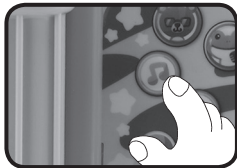


## 9. Stop Button

 Press the **Stop Button** to stop the current responses.

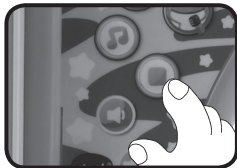

## 10. Tiger Button

 In **Guitar Fun** mode, press this button to hear Tiger's roar and to play guitar sounds on the **8 Light Up Fret Buttons**. In **Animal Band** mode, press this button to jam the Tiger's roar over the melody, or to hear sing-along songs about the Tiger.

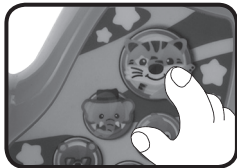




## 11. Elephant, Bear, Parrot and Frog Buttons



 In **Guitar Fun** mode, press these buttons followed by the **8 Light Up Fret Buttons** to create music with animal sounds. In **Animal Band** mode, press these buttons to play the melodies in animal sounds, or to hear sing-along songs about the animals.

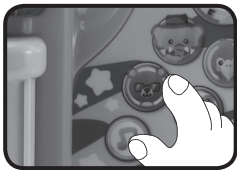

### AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Safari Sounds Guitar** will automatically power down after several minutes without input. The unit can be turned on again by moving the **Off/Mode Switch** to any mode.

### NOTE

If the unit powers down or if the light fades out during play, please install a new set of batteries.

## MODES:

### 1. Guitar Fun

Move the **Off/Mode Switch** to the second position to enter this mode. Press the **8 Light Up Fret Buttons** to create your own music. Switch the **Guitar Sound Switch** or press an animal button to select the guitar or animal sound you would like to use to create music. If no melody or song is playing, move the **Strings Bar** to play a few seconds of music. Keep moving the bar to keep the music playing. Move the **Whammy Bar** to hear fun sounds.



## 2. Animal Band

Move the **Off/Mode Switch** to the third position to enter this mode. Press any animal button to hear sing-along songs. After pressing an animal button, press the **Music Button** to hear the melody played in the selected animal sound. If no melody or song is playing, move the **Strings Bar** to play a few seconds of music in the selected animal's sound. Keep moving the bar to keep the music playing. Move the **Whammy Bar** to hear fun sounds.



# SING-ALONG SONG LYRICS

### Tiger Song 1:

My stripes are black and they're unique.  
A group of tigers is called a streak.  
I play the guitar and roam the land.  
I like to make music with my friends in a band.  
We're all different and that's pretty cool.  
We play with everyone, it's our only rule.

### **Tiger Song 2:**

Oh do you know how tigers roar?  
How tigers roar? How tigers roar?  
Oh do you know how tigers roar?  
Come on and roar with me!  
ROAR!

Oh yes, I know how tigers roar.  
How tigers roar. How tigers roar.  
Oh yes, I know how tigers roar.  
Because I'm a tiger!  
ROAR!

### **Elephant Song 1:**

The elephant joined the band,  
The elephant joined the band,  
The elephant joined the band,  
To play her trumpet trunk.

Her trumpet goes Brrr Brrr!  
Her trumpet goes Brrr Brrr!  
She gives her ears a shake, shake, shake,  
And then stomps on the ground.

### **Elephant Song 2:**

Elephants are really big!  
Elephants are really strong!  
Elephants are the biggest,  
Animals on land!

Elephants are really big!  
Elephants are really strong!  
Elephants are the biggest,  
Animals on land!

**Parrot Song 1:**

Parrots have many colours,  
Red, green, yellow and blue.  
Some parrots like to talk,  
(Hello! How are you?)  
Well I'm feeling fine, and hope you are too.  
Oh! Parrots have many colours,  
(What colours do you like?)  
Red, green, (Woo!) yellow and blue! Yeah!

**Parrot Song 2:**

My friend is a parrot named Perry.  
His mum is a parrot named Mary.  
His brother is a parrot named Harry.  
His dad is a parrot named Barry.  
Perry, Mary, Harry, Barry.  
A Feathery Parrot Family.

**Frog Song 1:**

Jump, Jump, Jump,  
Went the frog, went the frog, went the frog.  
Jump, Jump, Jump,  
Went the frog,  
From branch, to tree, to stump.

Jump, Jump, Jump,  
Went the frog, went the frog, went the frog.  
Jump, Jump, Jump,  
Went the frog,  
From branch, to tree, to stump.

**Frog Song 2:**

Ribbit Ribbit says Froggy Frog.  
Ribbit Ribbit says Frog from a log.  
Frog can live both in water or on land.  
Frog likes to ribbit at the music stand.

Ribbit Ribbit says Froggy Frog.  
Ribbit Ribbit says Frog from a log.  
Frog's tongue catches food better than his hand.  
Frog likes to ribbit at the music stand.

**Bear Song 1:**

The bear went over the mountain,  
The bear went over the mountain,  
The bear went over the mountain,  
To see what she could see.  
The other side of the mountain,  
The other side of the mountain,  
The other side of the mountain,  
Was all that she could see.

**Bear Song 2:**

Big brown bear,  
Big brown bear,  
Bears have lots of fur,  
Lots of furry fur,  
Bears really like to eat a lot,  
Fruit, grass, and fish, why not?  
Seeds and berries for dessert,  
Oh big brown bear.

## CARE & MAINTENANCE

1. Keep the product clean by wiping them with a slightly damp cloth.
2. Keep the product out of direct sunlight and away from any direct heat sources.
3. Remove the batteries when the product is not in use for an extended period of time.
4. Do not drop the product on a hard surface and do not expose the product to excess moisture or water.

## TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.

## CONSUMER SERVICES

Creating and developing **VTech**<sup>®</sup> products is accompanied by a responsibility that we at **VTech**<sup>®</sup> take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

**UK Customers:**

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: [www.vtech.co.uk/support](http://www.vtech.co.uk/support)

**Australian Customers:**

Phone: 1800 862 155

Website: [support.vtech.com.au](http://support.vtech.com.au)

**NZ Customers:**

Phone: 0800 400 785

Website: [support.vtech.com.au](http://support.vtech.com.au)

## **Product Warranty / Consumer Guarantees**

**UK Customers:**

Read our complete warranty policy online at [vtech.co.uk/warranty](http://vtech.co.uk/warranty).

**Australian Customers:**

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –  
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to [vtech.com.au/consumerguarantees](http://vtech.com.au/consumerguarantees) for further information.

**Visit our website for more  
information about our products,  
downloads, resources and more.**

***www.vtech.co.uk***  
***www.vtech.com.au***



TM & © 2020 VTech Holdings Limited.  
All rights reserved.  
**Printed in China.**  
91-003913-000 (UK)