

vtech[®]
Baby

Instruction Manual

Little Friendlies Starlight Sounds Polar Bear



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the **VTech® Little Friendlies Starlight Sounds Polar Bear**. This soft and cuddly soothing bear is the perfect companion to help soothe baby. Featuring a squishy body, soft furry feet & paws for tactile stimulation and a soft glowing light with two settings that help calm baby. 3 press buttons on the bear's tummy play loving phrases, white noise and nature sounds. Includes 2 sing-along songs and 40 melodies to help relax baby.

4 MODE BUTTONS

VOLUME
CONTROL
DIAL

TIMER SWITCH

LIGHT CONTROL
BUTTON

ON/OFF SWITCH



INCLUDED IN THIS PACKAGE

- One VTech® Little Friendlies Starlight Sounds Polar Bear
- One Quick Start Guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE:

Please save this Instruction Manual as it contains important information.

 
WARNING:

Keep this soft toy out of the sleeping environment for babies under twelve months to avoid suffocation risk.

GETTING STARTED

BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned OFF.
2. Locate the battery cover on the bottom of the polar bear. Use a screwdriver to loosen the screw, then remove the cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 2 new AA batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

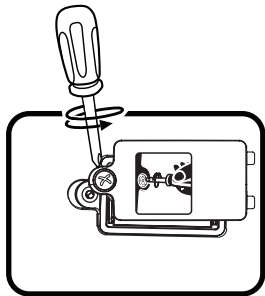

WARNING:

Adult assembly required for battery installation.

Keep batteries out of reach of children.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheeie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

www.vtech.co.uk/recycle

www.vtech.com.au/sustainability

* Visit www.recyclenow.com to see a list of collection points near you.

PRODUCT FEATURES

1. ON/OFF SWITCH

To turn the unit **ON**, slide the **ON/OFF SWITCH** to the **ON** (⏻) position.
To turn the unit **OFF**, slide the **ON/OFF SWITCH** to the **OFF** (⏻) position.

2. TIMER SWITCH

 
 
Slide the **TIMER SWITCH** to select the length of time the unit will play for. When the time is up the unit will automatically shut down.

3. VOLUME CONTROL DIAL

Turn the **VOLUME CONTROL DIAL** to select the desired volume.

4. LIGHT CONTROL BUTTON

Press the **LIGHT CONTROL BUTTON** to select one of 6 light effects. Press the button until you find the desired setting.

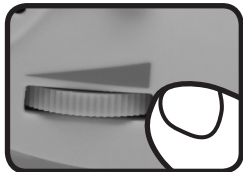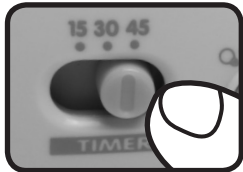

5. MODE BUTTONS

Press one of the four **MODE BUTTONS** to choose a mode of play.



6. AUTOMATIC SHUT OFF

 
To preserve battery life, the **VTech® Little Friendlies Starlight Sounds Polar Bear** will automatically shut down after the selected time. The unit can be turned on again by pressing any button or when the sound sensor detects baby's cry.

7. SOUND SENSOR

The **VTech® Little Friendlies Starlight Sounds Polar Bear** is equipped with a special sound sensor. Once the selected time setting has ended, the unit will automatically shut down. The sensor will reactivate the program when it detects baby's cry for approximately 4 seconds without interruption. The unit will reactivate and play lullabies and nature sounds.




NOTE:

This product is in “try me” mode in the packaging. After opening the package, remove the “try me” tag from the bottom of the product, and then turn the unit off and on again to proceed with normal play.

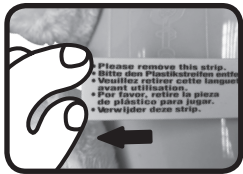

ACTIVITIES

   1. Slide the **On/Off Switch** to turn the unit on. You will hear a soothing song, two short stories and ten melodies with nature sounds. The light will fade in and fade out slowly with the sounds, if the light control button has not been pressed.
2. Press the **Story Button** to hear seven stories with fun sounds followed by soft melodies. Press the story button again to hear the next story or melody. The light pattern will fade in and fade out slowly with the sounds, if the light control button has not been pressed.
3. Press the **Lullaby Button** to hear three soothing songs followed by soft melodies. Press the lullaby button again to hear the next song or melody. The light pattern will fade in and fade out slowly with the sounds, if the light control button has not been pressed.
4. Press the **Nature Sound Button** to hear a combination of soothing nature sounds. Press the nature sound button again to hear the next sound pattern. The light pattern will fade in and fade out slowly with the sounds, if the light control button has not been pressed.

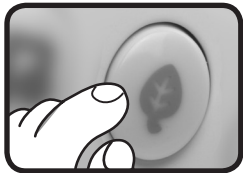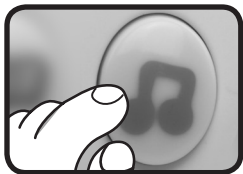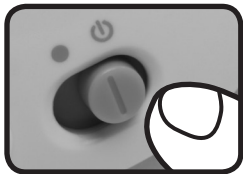

5. Press the **Lullaby and Nature Sound Button** to hear soothing melodies with nature sounds. Press the lullaby and nature sound button again to hear the next melody. The light pattern will fade in and fade out slowly with the sounds, if the light control button has not been pressed.



SING-ALONG SONG LYRICS

SONG 1

Row, row, row your boat,
Gently down the stream.
Merrily, merrily, merrily, merrily,
Life is but a dream.

SONG 2

Rock-a-bye baby,
On the treetop.
When the wind blows,
The cradle will rock.

SONG 3

Twinkle, twinkle, little star,
How I wonder what you are.
Up above the world so high,
Like a diamond in the sky.
Twinkle, twinkle, little star,
How I wonder what you are.

MELODY LIST:

1. Diddle Diddle Dumpling
2. To Market, To Market
3. Roses Are Red
4. Lavender's Blue
5. Polly Put the Kettle On
6. Hickory Dickory Dock
7. Ring Around the Rosy
8. Frère Jacques
9. Water Music - Handel
10. Oh Where Has My Little Dog Gone?
11. Riddle Song
12. Good Morning Merry Sunshine
13. Teddy Bears' Picnic
14. Toyland
15. Bicycle Built For Two
16. Go Tell Aunt Rhody
17. Ride a Cock Horse to Banbury Cross
18. Sailing, Sailing
19. See Saw Margery Daw
20. Oranges and Lemons
21. All the Pretty Little Horses
22. Little Bo Peep
23. Beautiful Dreamer
24. Au Claire de la Lune
25. Home Sweet Home - Bishop
26. Serenade - Haydn
27. Minuet - Mozart
28. All Through the Night
29. Glow Worm
30. Sing a Song of Sixpence
31. New World Symphony - Dvorak
32. Rondo a Capriccio - Beethoven
33. To a Wild Rose - MacDowell

34. Canon in D - Pachelbel
35. Happy Farmer - Schumann
36. Lullaby - Brahms
37. Hush Little Baby
38. Sleep, Baby, Sleep
39. Alouette
40. Jesu, Joy Of Man's Desiring - Bach
41. Fur Elise - Beethoven
42. Shoo Fly Don't Bother Me
43. Four Seasons - Winter - Vivaldi
44. Four Seasons - Fall - Vivaldi
45. Four Seasons - Spring - Vivaldi
46. Four Seasons - Summer - Vivaldi
47. Twinkle, Twinkle Little Star
48. Rock-a-bye-Baby
49. Air on the G String - Bach
50. Shenandoah
51. Piano Sonata in C, K545, 1st Movement - Mozart
52. Minuet in G - Beethoven
53. ABC Tumble Down D
54. Mary Had a Little Lamb
55. Spring Song
56. Waltz of the Flowers
57. Sleeping Beauty Waltz
58. Row, Row, Row Your Boat
59. Moonlight Sonata - Beethoven
60. Ode To Joy - Beethoven

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working, please follow these steps:

1. Please turn the unit OFF.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit ON. The unit should now be ready to play with again.
5. If the product still does not work, install a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department.

CONSUMER SERVICES

Creating and developing **VTech**[®] products is accompanied by a responsibility that we at **VTech**[®] take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)
Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155
Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785
Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

**VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES**

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au



TM & © 2017 VTech Holdings Limited.
All rights reserved.
Printed in China.
91-003334-004 (UK)