



vtech®

Quick Start Guide



GRWM
GET READY WITH ME
FASHION
JOURNAL

By reducing the quantity of paper used for our Manuals, we aim to reduce our environmental impact and contribute to the preservation of the environment. The full version of the Instruction Manual is available online through the following links or by scanning the QR code.



For UK
vtech.co.uk/manuals



For AUS/NZ
vtech.com.au/support/product_manuals

© 2026 VTech. All rights reserved. Printed in China.

91-004868-006 (UK) (AUS)

INCLUDED IN THIS PACKAGE

- One **GRWM Fashion Journal**
- One Quick Start Guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE:

 
Please keep this Quick Start Guide as it contains important information.

Environmental Phenomena

Static electricity may cause the **GRWM Fashion Journal** to malfunction. In cases where the **GRWM Fashion Journal** is malfunctioning due to static electricity, remove the battery and reinstall it, and wait for 5 seconds. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

Removing the packaging locks:

- ① Turn the packaging lock anticlockwise several times.
- ② Pull out and discard the packaging lock.

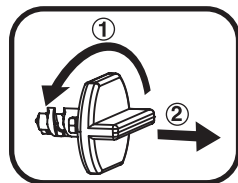

INSTRUCTIONS

 
 
WARNING:

Adult assembly required for battery installation.

Keep batteries out of reach of children.

Battery Removal and Installation

1. Make sure the unit is turned OFF.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 4 new 1.5V AA (LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).

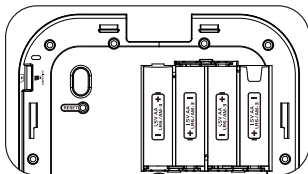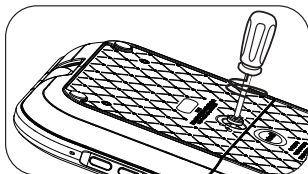

5. Replace the battery cover and tighten the screw to secure.

NOTE: This product is in 'Try me' mode in the packaging. To activate normal play mode, please refer to the 'Activating Normal Mode' section of this guide.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.

In the UK, dispose of this toy at a small electricals collection point* so its materials can be processed for recycling.

Learn more at:

 
www.vtech.co.uk/recycle

www.vtech.com.au/sustainability

* Visit www.recyclenow.com to see a list of collection points near you.

MEMORY CARD INSTALLATION

- The **GRWM Fashion Journal** is compatible with microSD/microSDHC memory cards up to 32 GB.
- Make sure the journal is turned OFF.
- Locate the memory card slot inside the battery compartment.
- Insert the memory card (not included).
- Once the memory card is detected it will be used as the default memory source of the journal.
- Push the card once to eject.

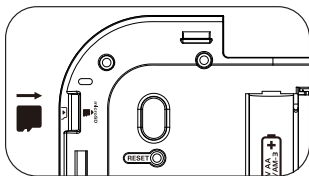


Note: To prevent accidental data loss, make sure you have backed up all important data from your memory card before using it.

Activating Normal Play Mode:

When you first use the **GRWM Fashion Journal**, you will need to activate normal play mode.

 - 1) Open the battery cover. Then, find the **RESET Button** located next to the word **RESET**.
- 2) Press the **Unlock Button** to turn on the journal.
- 3) Press the **RESET Button** after the VTech logo screen.
- 4) The screen will display the message "**Normal Mode**". The cover will then open and you can begin using the journal.
- 5) If you turn off the journal, you will be asked to setup the face unlock option once the **Unlock Button** has been pressed and the cover is open.

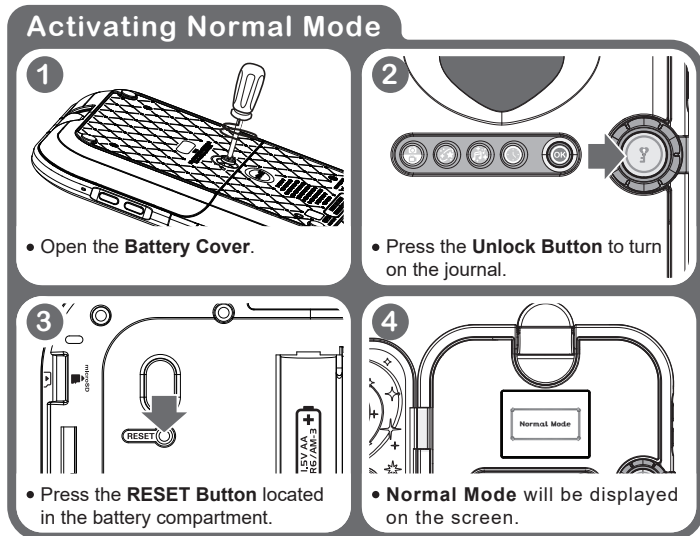

PRODUCT FEATURES

1. Unlock Button

5

When you first set up the journal, you can enable face recognition for quick and secure access. Simply press the **Unlock Button** and look at the screen, following the on-screen instructions while holding the journal about 30 cm away so your face fits inside the circle. Once set up, you can unlock the journal just by showing your face. If you prefer, you can turn **Face Unlock OFF** anytime by going to **Tools & Settings** and selecting **Face Unlock OFF**. When **Face Unlock** is turned on, your face is required to open the journal. If it is turned off but a number password is enabled, pressing the **Unlock Button** will open the cover so you can enter your password. If both **Face Unlock** and the number password are turned off, pressing the **Unlock Button** will simply open the cover and turn on the journal.

 
Note: To turn the journal off, close the cover or hold down the **Unlock Button** for over one second any time.

2. RESET Button

When you first use the journal, you will need to activate normal mode. Press **Unlock button** to turn on the journal and then press the **RESET Button** until the screen shows the message “Normal Mode”.

Press this button to reset both the face unlock and number password. First, press **Unlock button** to turn on the journal and then press the **RESET Button**. The message “Face unlock and number password cleared” will be displayed on the screen. The journal will then turn on. The next time you turn the journal on, you will be asked to set the face unlock and number password again.

NOTE: A small tool, such as a paperclip, may be required to press the **RESET Button**.

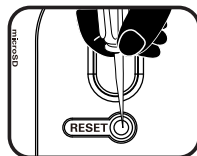

CARE & MAINTENANCE

1. Keep the journal clean by wiping it with a slightly damp cloth.
2. Keep the journal out of direct sunlight and away from any direct heat sources.
3. Remove the batteries when the journal is not in use for an extended period of time.
4. Do not drop the journal on a hard surface and do not expose the journal to excess moisture.
5. If the journal does not work, install a brand new set of batteries.

CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)
Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155
Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785
Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED – CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

Contact VTech

Tel: 0330 678 0149 (from UK)
+44 330 678 0149 (outside UK)
1800 862 155 (Aus) / 0800 400 785 (NZ)
www.vtech.co.uk
www.vtech.com.au