



## Instruction Manual

# Secret Safe Diary



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

## **vtech** Baby

Toys that will stimulate their interest in different textures, sounds and colours

### I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



## **Pre-School**

Interactive toys to develop their imagination and encourage language development

### I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



4-10 years



## **Electronic Learning Computers**

Cool, aspirational and inspiring computers for curriculum related learning

### I need...

...challenging activities that can keep pace with my growing mind

 
...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

To learn more about this and other VTech® products, visit [www.vtech.co.uk](http://www.vtech.co.uk)

# INTRODUCTION

Thank you for purchasing the **Disney Stitch Secret Safe Diary** by **VTech®**! Protect your notebook and treasures with your very own four-digit passcode and a secret compartment! A 60-page notebook and pen are included for you to start your journaling! Record up to 10 voice entries, try out the voice changing effects, play fun maths games and select from a swinging choice of melodies that Stitch would love to Hula dance to!

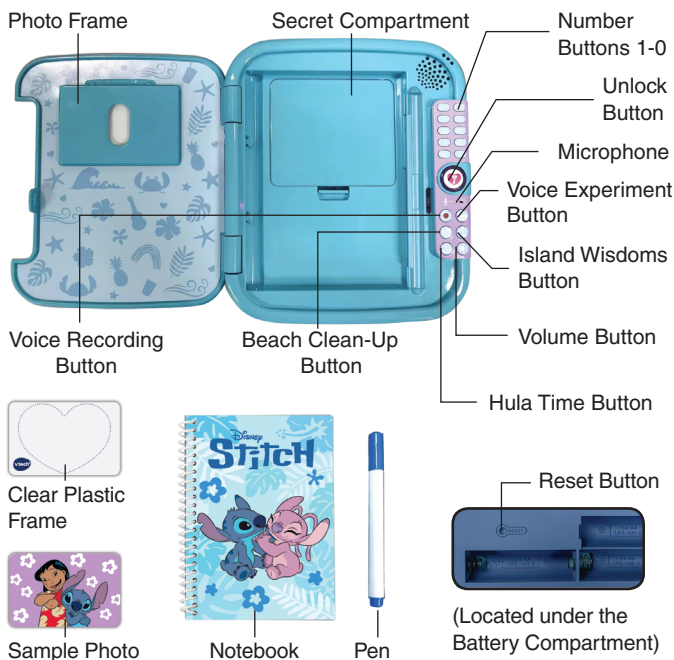


## INCLUDED IN THE PACKAGE

- One **Disney Stitch Secret Safe Diary**
- One 60-page notebook
- One felt-tip pen
- One clear plastic frame
- One sample photo
- One secret compartment cover
- Quick Start Guide

### WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

 **NOTE:** Please save this Instruction Manual as it contains important information.

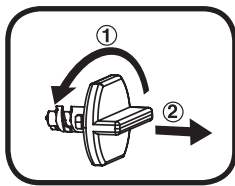

### Unlock the packaging locks

- ① Turn the packaging lock several times anticlockwise.
- ② Pull out and discard the packaging locks.

# GETTING STARTED

 
## Exit Try-me Mode:

The product will be in Try-me mode in the packaging. To exit Try-me mode, press the **Unlock button** to turn on the unit, then press the **Reset Button** (located under the battery compartment) for about 1 second to exit to normal play mode. If the operation is successful, you will hear three beep sounds and the LED will light-up. You will then be asked to create a passcode.

**NOTE:** You may need to use a small tool such as a paper clip to press the **Reset Button**.

## BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw and then slide the battery cover down to remove it.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 3 new AA batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

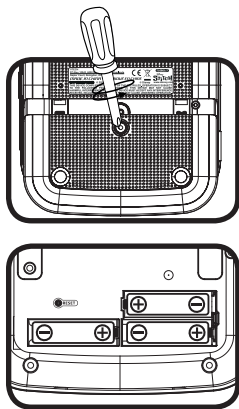

## WARNING:

Adult assembly required for battery installation.

Keep batteries out of reach of children.

## IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

### RECHARGEABLE BATTERIES:

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

### Disposal of batteries and product



The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.



In the UK, give this toy a second life by disposing of it at a small electricals collection point\* so all of its materials can be recycled.

Learn more at:

[www.vtech.co.uk/recycle](http://www.vtech.co.uk/recycle)

[www.vtech.com.au/sustainability](http://www.vtech.com.au/sustainability)

\* Visit [www.recyclenow.com](http://www.recyclenow.com) to see a list of collection points near you.

# PRODUCT FEATURES

## 1. Unlock Button



Press the **Unlock Button** and then enter your four-digit passcode to open the cover. Close the cover to turn off the unit. When the unit is on, press this button again to turn off the unit.

## 2. Reset Button



Press the **Reset Button** before entering any game to reset the passcode and exit from Try-me mode. The passcode will be removed and you will be asked to create a new passcode.



## 3. Voice Recording button



Press the **Voice Recording Button** to enter Voice Recording mode, then press a **Number Button** to record a voice entry. If the unit is locked, you'll be asked to enter your passcode before entering this mode.

## 4. Voice Experiment Button



Press the **Voice Experiment Button** to enter Voice Experiment mode. Say anything and then hear your voice played back to you in a different style. Have fun with the silly effects!

## 5. Beach Clean-Up Button



Press the **Beach Clean-up Button** to enter Beach Clean-up mode. Count how many pieces of trash you can hear and subtract the number of trash pieces that Stitch destroys.

## 6. Island Wisdoms Button



Press the **Island Wisdoms Button** to enter Island Wisdoms mode. Listen to the hints and try to guess the correct number.

## 7. Hula Time Button

Press the **Hula Time Button** to listen to the 10 built-in melodies.

## 8. Volume Button

Press the **Volume Button** to toggle between low and high volume.

## 9. Number Buttons

Press the **Number buttons** to enter your number passcode or to input numbers in certain activities.



## 10. Microphone

The **Microphone** is located under the **Unlock Button** and is used for the voice activation feature.



## 11. Automatic Shut-Off

 
To preserve battery life, the **Disney Stitch Secret Safe Diary** will automatically turn itself off after several seconds without input. The unit can be turned on again by pressing the **Unlock Button** or any of the mode buttons.

The unit will also automatically turn off when the batteries are low on power.

**Note:** If the unit repeatedly switches off while playing, please insert new batteries and try turning it on again.

## 12. Notebook Replacement

You can replace the included notebook with a standard 4x6" spiral-bound notebook. The maximum recommended page count of a replacement notebook is 100 pages (50 sheets). There are two book holders to secure the replacement notebook. Please make sure that the replacement notebook has been inserted into the two book holders when replacing the notebook.

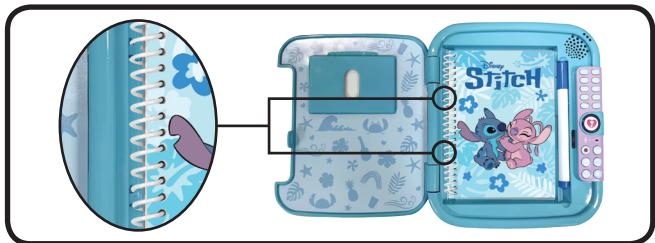

## 13. Felt-Tip Pen Holder

Keep your Felt-Tip Pen in this holder.



## 14. Secret Compartment

 
Store your small items in the compartment to keep them secret and safe.



## 15. Clear Plastic Frame

You can customise your notebook by replacing the included photo with one of your own. To make sure your photo is the right size, place the Clear Plastic Frame on top of your photo, trace the outline, and then cut it out with scissors.

**NOTE:** Adult supervision required

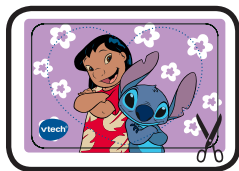

## TO BEGIN PLAY

### If No Passcode Exists

- Press the **Unlock Button** and follow the voice prompts to set a four-digit passcode. After you enter your passcode once, it will ask you to enter it again to confirm.
- If your passcode is stored successfully, a voice will say "OK! Your passcode has been set." The cover will then open and you can begin using the **Disney Stitch Secret Safe Diary**.
- If the passcode does not set successfully, you will hear "Oh! There's no passcode." Press the **Unlock Button** to try setting a passcode again.

### If a Passcode Exists

- Press the **Unlock Button**. If you entered your four-digit passcode correctly, the cover will open automatically.
- If you enter the passcode incorrectly twice, you will hear "Sorry, This isn't your diary." and the unit will shut off.

### Reset Passcode

- To change the passcode, press the **Reset Button** before entering any game. The passcode will then be removed. The next time your **Disney Stitch Secret Safe Diary** turns on, you will be asked to create a new passcode.



# ACTIVITIES

## 1. Voice Recording

Record your adventure story! In this mode, you can record up to 10 voice entries. Each number button will store one voice entry. You can record up to approximately 40 seconds per recording. The light will flash when the recording time is about to finish. You can also review the voice entries that you've recorded. Press a Number Button to review the recording saved to that number.

## 2. Voice Experiment

Change your voice to different styles to help Angel break the evil effect caused by her singing! In this mode, say anything into the microphone and it will be repeated back to you with a fun voice effect! The voice effects are as follows: high pitch, low pitch, slow voice, fast voice, echo and robot voice.

## 3. Beach Clean-Up



People have been dumping trash all over the beach and have made a horrible mess. In this mode, listen for the trash sounds and count how many pieces of trash you need to collect. Every time you hear Stitch eating some trash you can subtract it from your total and then use the Number Buttons to answer. Let's help to protect the environment with Stitch!



## 4. Island Wisdoms

Some messages are hidden! In this mode, you will need to listen to the hints to find out what the secret number is, then press the corresponding number buttons. If the answer is a two-digit number, enter the two numbers quickly. A hidden message will be unlocked each time you find the secret number!

## 5. Hula Time

Enjoy the playful music and start your Hula dance with Stitch! In this mode, you can listen to 10 built-in melodies. The melodies will play randomly until they have all played once. You can also press any number button to select a melody to play.

## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
5. If the unit stops working or malfunctions, install a new set of batteries.

## TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Turn the unit OFF.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back ON. The unit should now be ready to use again.
5. If the unit still does not work, insert a new set of batteries.

## CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

### **UK Customers:**

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)  
Website: [www.vtech.co.uk/support](http://www.vtech.co.uk/support)

### **Australian Customers:**

Phone: 1800 862 155  
Website: [support.vtech.com.au](http://support.vtech.com.au)

### **NZ Customers:**

Phone: 0800 400 785  
Website: [support.vtech.com.au](http://support.vtech.com.au)

## PRODUCT WARRANTY/ CONSUMER GUARANTEES

### **UK Customers:**

Read our complete warranty policy online at [vtech.co.uk/warranty](http://vtech.co.uk/warranty).

### **Australian Customers:**

**VTech ELECTRONICS (AUSTRALIA) PTY LIMITED – CONSUMER GUARANTEES**

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to [vtech.com.au/consumerguarantees](http://vtech.com.au/consumerguarantees) for further information.



**Visit our website for more  
information about our products,  
downloads, resources and more.**

***[www.vtech.co.uk](http://www.vtech.co.uk)***  
***[www.vtech.com.au](http://www.vtech.com.au)***



© 2025 VTech.  
All rights reserved.  
IM-586200-001  
Version:1