


# **User's Manual**

# **Baby Peek-a-Boo**



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

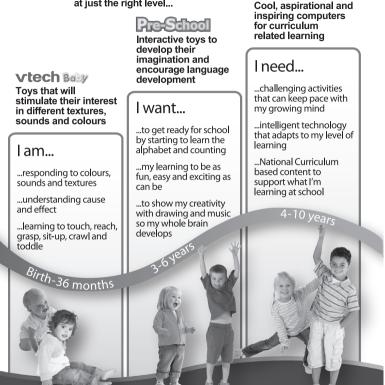


Electronic Learning

Computers

To learn more about this and other VTech® products, visit www.vtech.co.uk

### INTRODUCTION

Thank you for purchasing the **VTech® Little Love Baby Peek-a-Boo** learning toy. Play Peek-a-Boo with your baby! Your little one can hide and uncover baby's eyes for adorable reactions and interactive play. Baby Peek-a-Boo introduces numbers, counting, foods, feelings and more through over 60 cute phrases and realistic sounds effects.

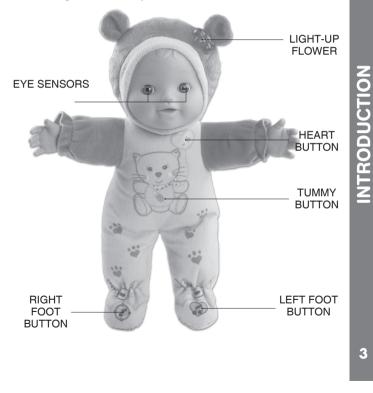

# INCLUDED IN THIS PACKAGE

- One VTech<sup>®</sup> Baby Peek-a-Boo
- One User's Manual

#### WARNING:

All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

NOTE: Please keep instruction manual as it contains important information.

### **GETTING STARTED** BATTERY INSTALLATION

- 1. Make sure the unit is turned OFF.
- 2. Locate the battery cover in the back of the baby doll.
- 3. Install 2 new "AA" size (LR6/AM-3) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
- 4. Replace the battery cover and tighten the screw to secure.

### How to install the battery box:

- 1. Remove the battery box and fabric pocket from the back of the doll.
- 2. After changing the batteries push the fabric pocket back inside the doll followed by the battery box.









#### 403 IM UK indd 5

### **BATTERY NOTICE**

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbonzinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

#### Disposal of batteries and product

The crossed-out wheelie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to

the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

X

For more information, please visit:

www.recycle-more.co.uk

www.recyclenow.com

10/08/2014 9:46:5

# **PRODUCT FEATURES**

### 1. OFF/VOLUME CONTROL SWITCH

Locate the electronic box inside the back of your baby doll. To turn the unit **ON**, slide the **OFF/ VOLUME CONTROL SWITCH** to the low volume or high volume position. To turn the unit **OFF**, slide the **OFF/VOLUME CONTROL SWITCH** to the **OFF** position.



### 2. PEEK-A-BOO SENSOR

The **VTech® Baby Peek-a-Boo** is equipped with sensors around the eyes. Cover the eyes with one hand or both hands to activate these sensors.

### 3. VOLUME SWITCH 🗄

Slide the VOLUME SWITCH to select a high or low volume setting.

### 4. LIGHT-UP FLOWER

The **LIGHT-UP FLOWER** will flash with the sounds.

### 5. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Baby Peek-a-Boo** will automatically power-down after several minutes without input.The unit can be turned on again by pressing any button.







PRODUCT FEATURES

403 IM UK.indd 6

## ACTIVITIES

#### 1. Peek-a-Boo

To play peek-a-boo with baby cover the doll's eyes with both hands or one hand, then remove to play peek-a-boo and learn body parts and counting.

#### 2. Heart Button 🕔

Press the heart button to learn feelings, nursing phrases and hear fun phrases and sounds.

#### 3. Tummy Button 🐚

Press the Tummy Button to learn food, body parts and feelings, also sing-along with adorable songs.

### 4. Left Foot Button

Press the Left Foot Button to learn counting, daily life concepts and listen to fun melodies.

### 5. Right Foot Button

 


Press the Right Foot Button to learn body parts and enjoy up to 15 minutes of continuous soft lullables.







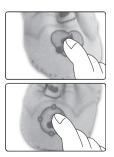

ACTIVITIES

## **MELODY LIST**

- 1. Hey Diddle Diddle
- 2. Humpty Dumpty
- 3. Hickory Dickory Dock
- 4. Hot Cross Buns
- 5. London Bridge
- 6. Skip to my Lou
- 7. Three Little Kittens
- 8. Polly put the Kettle On
- 9. Bingo
- 10. Row, Row, Row your Boat
- 11. Brahms Lullaby
- 12. Lavenders Blue
- 13. Moonlight Sonata Beethoven
- 14. Clair De Lune Debussy
- 15. Ode to Joy Beethoven
- 16. Nocture Borodin
- 17. To a Wild Rose MacDowell
- 18. Canon in D Pachelbel
- 19. Willian Tell Overture Rossini
- 20. Prelude 9 Chopin

# SING-ALONG SONG LYRICS

#### Sing-Along Song 1

Peek-a-boo, I see you, let's play peek-a-boo...

#### Sing-Along Song 2

Peek-a-boo, I see you! Peek-a-boo, let's play peek-a-boo One ,two, three, four, where are you? One, two, three, four I see you. Peek-a-boo, I see you! Peek-a-boo, you see me! I love peek-a-boo

Sing-Along Song 3 One, two, three, four, five let's play peek-a-boo.

#### Sing-Along Song 4

One, two, three, four, five clap your hands with me...

#### Sing-Along Song 5

Clap with my two hands, left and right. Left and right

#### Sing-Along Song 6

Step with my two feet, left and right. Left and right

# **CARE & MAINTENANCE**

- 1. Keep the unit clean by wiping it with a slightly damp cloth.
- 2. Keep the unit out of direct sunlight and aways from any direct heat source or electromagnetic wave.
- 3. Remove the batteries when the unit is not in use for an extended period of time.
- 4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

# TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

- 1. Turn the unit OFF.
- 2. Interrupt the power supply by removing the batteries.
- 3. Let the unit stand for a few minutes, then replace the batteries.
- 4. Turn the unit back ON. The unit will now be ready to play again.
- If the product still does not work, replace with a new set of batteries.

 
If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.

#### **IMPORTANT NOTE:**

Creating and developing **VTech**<sup>®</sup> products is accompanied by a responsibility that we at **VTech**<sup>®</sup> take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK), or +44 1235 546810 (outside UK) with any problems and/or suggestions that you might have. A service representative will be happy to help you



NOTE

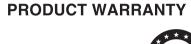

Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

vtech®



- 1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
- The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
- VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
- 4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
- 5. This warranty is personal to the original purchaser and is not transferable.
- 6. Breakages to the LCD screen are not covered by the warranty.
- Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
- Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor).

Please include details of the fault together with your name and address.

VTech Electronics Europe plc, c/o Tablogix Limited, 200 Milton Park, Abingdon, Oxon OX14 4TA

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.