

vtech®

Instruction Manual

KidiMaGic® Galaxy Light



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the **VTech® KidiMagic® Galaxy Light!**

KidiMagic® Galaxy Light is a wonderful alarm clock with an atmospheric soft glowing mood light and a projection light that changes colour! Tune into your favourite radio station with the FM radio or plug in an external music player (not included) to listen to your own music. There is also different style of melodies built-in with rhythmic light effects to create a wonderful atmosphere. Wave your palm above the magic sensor to change the colour of the flower light and interact with the games! The caring heart activates add to the wonder by reading your mind and predicting your fortune! It's magic!

INCLUDED IN THIS PACKAGE

- One **VTech® KidiMagic® Galaxy Light**
- One Audio Cable
- 4 AA batteries for demo purposes only
- One Quick Start Guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.


NOTE:

Please save this Instruction Manual as it contains important information.

This toy is only to be connected to equipment bearing either of the following symbols: □ or ◻


Removing the packaging locks:

- ① Rotate the packaging lock anticlockwise several times.
- ② Pull out the packaging locks and discard.

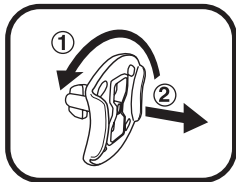





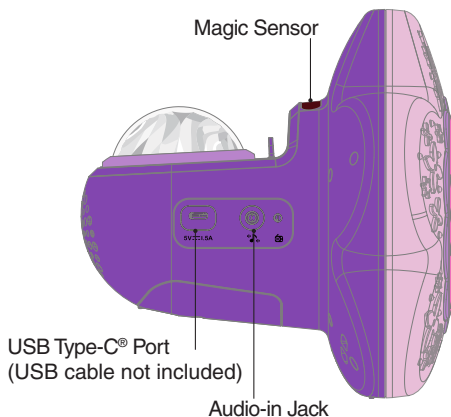

PRODUCT FEATURES

Product Layout and Buttons



Screen Icons

Indicate the current status of each mode.

	Magic Sensor		Game		Caring Heart
	Music		FM Radio		Alarm

Buttons Description

- **Clock** 

Press this button to enter Clock mode or to go to sleep mode.

When the clock is not in use, sleep mode will activate to save power.

- **Games** 

Press this button to enter Games & Settings mode.

Choose a game, set the alarm or adjust system settings.

- **Caring Heart** 

Press this button to enter Caring Heart mode.

- **Music** 

Press this button to enter Music mode.

Listen to the different types of built-in music. If an external music player (not included) is connected, you can listen to your own music.

- **FM Radio** 

Press this button to enter FM Radio mode.

- **Light Button** 

Press this button to adjust the light settings.

- **Volume Button** 

Press this button to adjust the volume.

- **Direction Buttons** 

Press these buttons to make a selection.

- **OK Button** 

Press this button to confirm your selection.

If in Clock mode, pressing this button tells the current time.


- **Audio-in Jack** 

Plug in an external music player (not included) using the supplied audio cable to listen to music.

- **USB Type-C® Port**

Plug in a 5V 1.5A USB adaptor (not included) here.



- **Magic Sensor**

Works only when the magic sensor icon  is shown on the screen. Wave your palm above the magic sensor to see magic effects.

WARNING

- Please keep your **KidiMagic® Galaxy Light** away from strong light or direct sunlight, as it will interfere with the magic sensor.
- To avoid poor operation, please ensure there are no obstacles, such as a shelf, close to the top of the device.
- If the sensor detects an obstacle that impedes the performance of the device, you will see a warning icon on the screen.

SPECIAL WARNING ICON

	Low Battery	This icon will appear when the battery power is low. Please replace the batteries.
	Bad Signal	The animation will appear when an object is obstructing the sensor's operational range for an extended time, reducing the sensor's performance.

INSTRUCTIONS



WARNING:

Adult assembly required for battery installation.

Keep batteries out of reach of children.

BATTERY REMOVAL AND INSTALLATION

1. Locate the battery cover on the bottom of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
2. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery. (We suggest removing the battery in the first or third position, and then taking out the others from the battery box).
3. Install 4 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
4. Replace the battery cover and tighten the screw to secure.

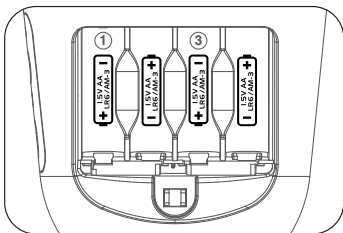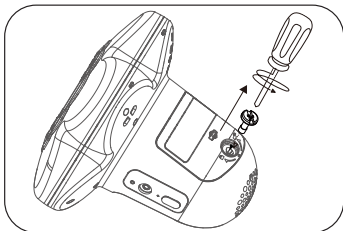

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.

- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

www.vtech.co.uk/recycle

www.vtech.com.au/sustainability



* Visit www.recyclenow.com to see a list of collection points near you.

Safety information when using power supply for toys



Warning: Not suitable for children under 3 years. Misuse of power supply can cause electrical shock hazard.

- USB charger or AC-DC Adaptor is referred to power supply for toys in the manual.
- The power supply used with the electric toy shall be regularly examined for damage to the supply cord, plug, enclosure or other parts, and in the event of damage, it shall not be used until the damage has been repaired.
- The toy is not to be connected to more than the recommended number of power supply where such connection is possible without the aid of tool or breaking the toy.
- This toy shall only be used with a power supply for toys.
- The power supply is not a toy, and the use of these products by children shall be under the full supervision of parents.
- Toys liable to be cleaned with liquids are to be disconnected from power supply before cleaning.

Only plug this device using a Class II  or Class III  power supply with 5V (1.5A or higher) USB Type-C® output and with applicable country regulations, international and regional safety standards. Before use, inspect the cable to confirm that it is in good condition and that there are no breaks or exposed wires. Ensure there are no particles or liquid (water, juice, etc.) in either of the connectors before plugging in either end of the cable. The device should be completely dry with no debris in the cable connectors when plugging into this device. Plug in the cable securely and in the correct orientation. It is important to keep the device, the cable, and the power supply in a well-ventilated area when plugging into this device. Do not plug your device on soft surfaces, such as on bed or sofa, or cover by clothes as they can trap heat around the device.

USB Type-C® and USB-C® are registered trademarks of USB Implementers Forum.

TO BEGIN USING KIDIMAGIC® GALAXY LIGHT

HOW TO EXIT TRY ME MODE

If you've just taken the **KidiMagic® Galaxy Light** out of the packaging for the first time, you need to disable Try Me Mode before playing.

To disable Try Me Mode, press the OK Button to turn on the unit and then plug in the included audio cable to the audio-in jack.

Note: The included batteries are for demo use only. We recommend to use an adaptor or replace the included batteries with new batteries before using **KidiMagic® Galaxy Light**.

INITIAL SETUP

Press any button to turn the unit on. When the unit is first turned on, you will be asked to set the time and date.

TIME SETUP

The default time is 8:00 in 12 hour mode.

- Press the OK Button to highlight the next item: Time Format, Time Input and Confirmation icon.
- Press the ◀/▶ buttons to adjust the value of the highlighted item.
- To save the current settings, press the OK Button while highlighting the tick icon [✓]. Otherwise, press the ◀/▶ buttons to choose this icon [↶] to set the time again.



DATE SETUP

The default date format is DD/MM/YY.

- Press the OK Button to highlight the next item: Date Format, Date Input and Confirmation icon.
- Press the ◀/▶ buttons to adjust the value of the highlighted item.
- To save the current settings, press the OK Button while highlighting the tick icon [✓]. Otherwise, press the ◀/▶ buttons to choose this icon [↶] to set the date again.




Note: The Time and Date setup can be found in the Settings menu after pressing the Games Button.

POWER SAVING AND STANDBY MODE


To preserve battery life, **KidiMagic® Galaxy Light** will automatically enter standby mode if there is no operation for a period of time. You can also press the Clock Button to go to standby mode if you are already in clock mode. The current time will be displayed, even in standby mode. Press any button to wake up the unit.

MAGIC SENSOR CONTROL



The magic sensor detects palm movement above it. Wave your palm left or right to activate the sensor. You will be able to select different light effects and play games using it.

The magic sensor is available only if the magic sensor icon  is shown at the top of the screen.

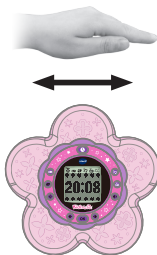

Note: Keep the **KidiMagic® Galaxy Light** away from anything above the sensor that could block it (e.g. wall, ceiling, shelf, cabinet, etc.) as this will reduce the sensor's performance.



LIGHT CONTROL


Press the Light Button for the below light settings, use the  /  buttons to choose between Light Mode, Brightness, Flower Light and Projection.

- **Light Mode**

Press the  /  buttons to switch between flower light, screen display light and projection on or off status, as well as the motion speed of the projection light if the projection is set to on.



- **Brightness**

Press the  /  buttons to control the brightness.

- **Flower Light**

Press the  /  buttons to change the flower light effect.

- **Projection**

Press the  /  buttons to change the projection light effect.

VOLUME CONTROL

Press the Volume Button to adjust the volume. Use the ◀••/••▶ buttons to decrease or increase the volume.



LONG-TIME LIGHT ON FEATURE (When using a power supply)

There is a long-time light on feature for **KidiMagic® Galaxy Light**. You can set the light to stay on for a long time in some modes when an adaptor is being used. We recommend the use of an adaptor whenever possible. If you are using batteries, the long-time light on feature will not be available.

ACTIVITIES

1. Clock and Tell Time 🕒

Press the Clock Button to go to the clock mode, the current time will be displayed on screen. The light will turn on for a short time with it.


- Wave your palm to the left or right above **KidiMagic® Galaxy Light** to change the flower light effect.
- Press the ◀••/••▶ buttons to change the style for the time display.
- Press the OK Button to listen to the time spoken aloud.



2. Games and Settings 🎮


Bumblebee Adventure

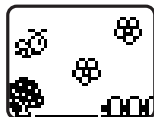

Bumblebee is going on an adventure to get honey from the flowers; it will constantly drift toward the bottom of the screen. Press the OK Button to control the bee to fly up slightly press-by-press. Help bumblebee avoid obstacles and fly to as many flowers as possible.



Hide and Seek

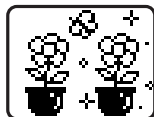

The butterfly likes playing hide and seek, it will hide behind a flower. Then the flowerpots will keep swapping positions a few times and stop. After the flowerpots stop, can you find which flower the butterfly is hidden behind?



Press the   buttons or wave your palm to choose a different flowerpot, and press the OK Button to confirm your selection.

Mushroom Bunny

Bunny is picking mushrooms in the forest, but the forest is full of obstacles, can you help bunny to avoid obstacles and pick more mushrooms?

Press the   buttons or wave your palm to move the bunny to the left or right.





Magic Garden

Let's plant and grow the best flowers in the magic garden. Collect different ingredients to create a magic seed. Plant them to discover different magic flowers.

Press the OK Button or wave your palm to collect the target ingredients.





Settings

A total of four settings can be found in this mode. Press the   buttons to choose between Alarm, Auto off Timer, Time Setting and Date Setting.

• Alarm

There are 2 alarms that can be set.

To set the alarm

- Choose the desired alarm by pressing the   buttons and then the OK Button.



- When in the alarm time setting screen, press the ◀•/▶ buttons to change the value and to set the alarm on/off.
- Press the OK Button to go to the next item: Alarm Time, Alarm Once Tme / Alarm On Everyday / Alarm Off, Ring Tone, Confirmation icon.
- Once you have selected an alarm tone, press the OK Button to pop out the ring tone setting menu. You can choose a different alarm tone and adjust the alarm volume by pressing the ◀•/▶ buttons.
- To save the current settings, press the OK Button while highlighting the tick icon [✓]. Or you can press the ◀•/▶ buttons to choose this icon [↶] to set the alarm again.



Stop the Alarm Ringing

- When the alarm is ringing, to turn the alarm off, choose the [⏏] icon and press the OK Button.
- When the alarm is ringing, press any activity button or wave your palm above the device to enter snooze mode. The alarm will ring again after 5 minutes for a maximum of 3 times.



Auto-off Timer

You can set the amount of time the light is on in clock mode, and the auto-off timer for Projection, FM Radio and External Music Connection.



Clock Light

- Press the ◀•/▶ buttons to select the desired length of time: 1 minute, 30 minutes, 60 minutes or disable auto off. The disable auto-off option is only available when an adaptor is in use.

Projection

- Press the ◀•/▶ buttons to select the desired length of time: 15 minutes, 30 minutes, 60 minutes or disable auto off. The disable auto-off option is only available when an adaptor is in use.

FM Radio

- Press the ◀•/•▶ buttons to select the desired length of time: 60 minutes, 120 minutes, 240 minutes or disable auto off. The disable auto-off option is only available when an adaptor is in use.

External Music Connection

- Press the ◀•/•▶ buttons to select the desired length of time: 30 minutes, 60 minutes, 120 minutes or disable auto off. The disable auto-off option is only available when an adaptor is in use.

Time Set-up

The default time is 8:00 in 12 hour mode.

- Press the OK Button to highlight the next item: Time Format, Time Input and Confirmation icon.
- Press the ◀•/•▶ buttons to adjust the value of the highlighted item.
- To save the current settings, press the OK Button while highlighting the tick icon [✓]. Otherwise, press the ◀•/•▶ buttons to choose this icon [↶] to set the time again.



Date Set-up

The default date format is DD/MM/YY.

- Press the OK Button to highlight the next item: Date Format, Date Input and Confirmation icon.
- Press the ◀•/•▶ buttons to adjust the value of the highlighted item.
- To save the current settings, press the OK Button while highlighting the tick icon [✓]. Otherwise, press the ◀•/•▶ buttons to choose this icon [↶] to set the date again.



Note: The time and date will be reset if there is no power supplied to the unit. The time and date will also reset after installing new batteries or when powering on with an adaptor.

3. Caring Heart

Fortune Teller

Let **KidiMagic® Galaxy Light** tell your fortune by asking it a yes or no question.


Place your palm above **KidiMagic® Galaxy Light** or hold the OK Button to ask a yes or no question. Your question will be answered when you move your palm away or release the OK Button.

Note: This activity is just for fun only.



Mystical Mind Reading

There are 9 cards with different symbols. Choose a symbol from one of the 9 cards. Remember the card and its position, and then press the OK Button to start playing. Make selections by following the instructions. Then you will be asked to pick up a card from 9 cards, and see if your memorised card is shown at the end!

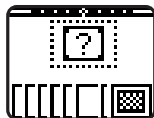

Magic Scanner



Let **KidiMagic® Galaxy Light** reveal which magical elf you are! Place your palm above **KidiMagic® Galaxy Light** to scan it and have your magic elf revealed!




My Feelings

How do you feel today? Share your feelings with **KidiMagic® Galaxy Light**, and store your happiness into your emotion bank.

If you are happy, you can get a happy token stored in the emotion bank.

If you are not happy, **KidiMagic® Galaxy Light** will try and help you, press the   buttons to choose a way to help comfort yourself.

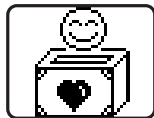


Clean Heart

To help drive away negative feelings, this activity is here to help clean your heart! Wave your palm above **KidiMagic® Galaxy Light** to clean your heart shown on screen, scrubbing it clean to reveal a bright shining heart.



Calm Breathing

Having a slow and calm breathing exercise helps us relax and care for our mental wellbeing. Enter this activity and follow the instructions to soothe and relax.

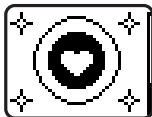

4. Music 🎵

In this mode, you can listen to different styles of music, even your own music via plugging in an external music player (not included) to **KidiMagic® Galaxy Light**.

• Built-in Music

There are different styles of built-in melodies with mood lighting for you to enjoy!

- Press the ◀•/•▶ buttons and OK Button to choose between Relaxing music, Dance music, or Classical music. Press the ◀•/•▶ buttons to cycle through and select a melody.
- Wave your palm left and right above **KidiMagic® Galaxy Light** to change the flower light effect.
- In Relaxing Music, there are additional soothing sounds you can turn on or off. When listening to the Relaxing Music, press the OK Button to pop out the selection menu.



• External Music Connection

Plug in an external music player (not included) to **KidiMagic® Galaxy Light** and listen to your own music!

Note: Please disconnect your external music player (not included) and the audio cable from **KidiMagic® Galaxy Light** if you do not want to listen to music.







Note:

The Volume Controls on the **KidiMagic® Galaxy Light** cannot control the volume of an external music player (not included).

The Auto-off timer that can be adjusted in Settings under Games mode only works to bring the **KidiMagic® Galaxy Light** into standby mode and does not control or turn off any external devices.

5.FM Radio

Let's listen to your favourite FM Radio stations. The frequency range is 87.5 - 108 MHz.

- Press the  /  buttons to search through the frequency range manually.
- Hold the  /  buttons to auto-search a channel.
- Press the OK Button to select different radio stations.

**Note:**


- To get good radio reception, adjust the position of the antenna. The antenna is situated on the left side of the unit.
- In FM Radio mode, all lights will be turned off except for the screen light. The screen light will dim after a short time to save the power consumption. To make it brighter, press any button.
- The light effect cannot be changed in FM Radio mode to help increase the reception.

CARE & MAINTENANCE

1. Handle the device carefully.
2. Keep the device out of dusty or dirty areas.
3. Keep the device out of moisture or extreme temperature.
4. Do not disassemble the device. If a problem occurs, remove and replace the batteries to reset the device, or try new batteries.
5. Do not drop the device on a hard surface and do not expose it to or immerse it in water.

TROUBLESHOOTING

Check this section if you experience difficulty with operating **KidiMagic® Galaxy Light**.

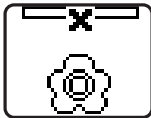Problem	Possible cause	Correction
KidiMagic® Galaxy Light has stopped working or does not turn on.	Incorrect battery polarities	Ensure that the batteries are installed correctly.
	Weak batteries	Replace with new batteries.
	Adaptor connection issue	Ensure that the adaptor connection is ok.
FM Radio unclear, gritty interference.	Weak batteries	Replace with new batteries.
	Weak radio reception	Take out the antenna from cabinet on the back of the unit.
	Weak radio reception	Place the unit nearer to a window that has an open and unobstructed view.
Magic sensor not functioning properly.	Weak batteries	Replace with new batteries.
	Strong light disturbance	Keep unit away from strong light.
	Interference by other objects, e.g. wall, ceiling, book shelf, cabinet, etc.	Keep unit away from anything blocking the sensor located above or close to KidiMagic® Galaxy Light . 

EPILEPSY WARNING

A very small percentage of the public, due to a pre-existing condition, may experience epileptic seizures or momentary loss of consciousness when viewing certain types of flashing colours or patterns. Please consult your doctor if you have an epileptic condition or experience any unusual symptoms while playing. Turn off the light if you do not feel comfortable.

While the **KidiMagic® Galaxy Light** does not contribute to any additional risks, we do recommend that parents supervise their children while they play games. If your child experiences dizziness, altered vision, disorientation, or convulsions, discontinue use immediately and consult your doctor. Please note that focusing on the **KidiMagic® Galaxy Light** at close range or using it as a game controller for a prolonged period of time may cause fatigue or discomfort. We recommend that children take a 15-minute break for every hour of play.

DECLARATION OF CONFORMITY

Hereby, VTech Electronics Europe BV declares that the radio equipment type 5727 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

www.vtech.com/re-directive

Frequency Band: 87.5 MHz – 108 MHz

DECLARATION OF CONFORMITY

Hereby, VTech Electronics Europe Plc declares that the radio equipment type 5727 is in compliance with The Radio Equipment Regulations 2017 (2017 No.1206). The full text of the Declaration of conformity is available at the following internet address:

www.vtech.com/re-directive

Frequency Band: 87.5 MHz – 108 MHz

CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)
Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155
Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785
Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED – CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

Contact VTech

Tel: 0330 678 0149 (from UK)
+44 330 678 0149 (outside UK)
1800 862 155 (Aus) / 0800 400 785 (NZ)
www.vtech.co.uk
www.vtech.com.au

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au



TM & © 2024 VTech Holdings Limited.
All rights reserved.
IM-572700-000
Version:0