

**vtech®**

# Instruction Manual

## Hoppin' Boppin' Froggy



**VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...**

## **vtech** Baby

**Toys that will stimulate their interest in different textures, sounds and colours**

### **I am...**

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

**Birth-36 months**



## **Pre-School**

**Interactive toys to develop their imagination and encourage language development**

### **I want...**

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

**3-6 years**



## **Electronic Learning Computers**

**Cool, aspirational and inspiring computers for curriculum related learning**

### **I need...**

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

**4-10 years**




To learn more about this and other VTech® products, visit [www.vtech.co.uk](http://www.vtech.co.uk)

# INTRODUCTION

Thank you for purchasing the **VTech® Hoppin' Boppin' Froggy!** **Hoppin' Boppin' Froggy** is a fun and interactive bouncing frog that your child is sure to love playing with! Enjoy the up-beat music as Froggy bounces across the floor and encourages your child to bounce along too! Are you ready? Let's bounce!

On/Off / Mode  
Switch

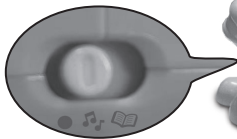

Light Up Button

# INCLUDED IN THE PACKAGE

- **Hoppin' Boppin' Froggy**
- Quick Start Guide

## WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

## NOTE

Please save this Instruction Manual as it contains important information.

## NOTE

Please cut and discard the cords that attach **Hoppin' Boppin' Froggy** to the box. The cords are not part of this toy and should be discarded for your child's safety.


## NOTE

This product is in Try-Me mode in the packaging. After opening the package, please turn **Hoppin' Boppin' Froggy** off and on again to proceed with normal play.

# GETTING STARTED

## Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Locate the battery cover located on the bottom of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. Remove used batteries by pulling up on one end of each battery.
4. Install 4 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

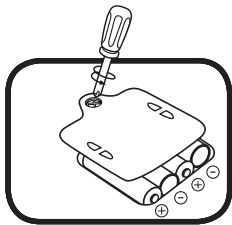

### **WARNING:**

Adult assembly required for battery installation.  
Keep batteries out of reach of children.

## **IMPORTANT: BATTERY INFORMATION**

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

## RECHARGEABLE BATTERIES:

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

## Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.

 Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point\* so all of its materials can be recycled.

Learn more at:

[www.vtech.co.uk/recycle](http://www.vtech.co.uk/recycle)


[www.vtech.com.au/sustainability](http://www.vtech.com.au/sustainability)

\* Visit [www.recyclenow.com](http://www.recyclenow.com) to see a list of collection points near you.

# PRODUCT FEATURES

## 1. On/Off/Mode Switch

To turn the unit **On**, slide the **On/Off/Mode Switch** to the **Bounce Mode** ( 🎵 ) or the **Learning Mode** ( 📖 ) position. You will hear a song, phrases and sounds. To turn the unit **Off**, slide the **On/Off/Mode Switch** to the **Off** ( ● ) position.

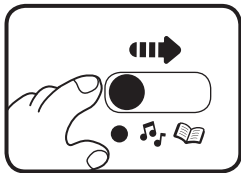

## 2. Automatic Shut-Off

To preserve battery life, the **Hoppin' Boppin' Froggy** will automatically power down after approximately 35 seconds without input. The unit can be turned on again by pressing the **Light Up Button** or by sliding the **On/Off/Mode Switch** to the **Bounce Mode** or the **Learning Mode** position.

## NOTE

If the unit powers down or if the light fades out during play, please install a brand new set of batteries.

# ACTIVITIES

## 1. Light Up Button

Press the **Light Up Button** to hear songs, phrases, melodies and sound effects! In **Bounce Mode**, Froggy will invite your child to play the Bounce and Freeze game! In **Learning Mode**, Froggy introduces animals! The light will flash with the sounds.



# MELODIES

1. Glow Worm
2. Toy Land
3. MacNamara's Band
4. Can Can
5. Dill Pickles Rag
6. Rossini - William Tell Overture
7. Looby Loo
8. Funiculi, Funicula
9. The Entertainer
10. My Pony Boy
11. Schumann - The Happy Farmer
12. Mozart - Turkish March

# SONG LYRICS

## Song 1

Bounce, bounce, bounce with me!  
Bounce, bounce, bounce and sing with me!  
Bouncing left and bouncing right,  
Let's bounce, alright!

## Song 2

I like to swim, swim, swim and to play all day!  
Would you like to sing, sing, sing with me every day!

### **Song 3**

Hop! Hop! Hop, hop, hop!

One, two, freeze!

Jump! Jump! Jump, jump, jump!

One, two, freeze!

## **CARE & MAINTENANCE**

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

## **TROUBLESHOOTING**

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to play with again.
5. If the unit still does not work, install a new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you

# CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

## **UK Customers:**

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)  
Website: [www.vtech.co.uk/support](http://www.vtech.co.uk/support)

## **Australian Customers:**

Phone: 1800 862 155  
Website: [support.vtech.com.au](http://support.vtech.com.au)

## **NZ Customers:**

Phone: 0800 400 785  
Website: [support.vtech.com.au](http://support.vtech.com.au)

# PRODUCT WARRANTY/ CONSUMER GUARANTEES

## **UK Customers:**

Read our complete warranty policy online at [vtech.co.uk/warranty](http://vtech.co.uk/warranty).

## **Australian Customers:**

**VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –  
CONSUMER GUARANTEES**

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to [vtech.com.au/consumerguarantees](http://vtech.com.au/consumerguarantees) for further information.

**Visit our website for more  
information about our products,  
downloads, resources and more.**

***www.vtech.co.uk***  
***www.vtech.com.au***

