


vtech®

Parent's Guide

Sparklings<sup>+</sup> Mia<sup>+</sup>



91-003822-017 

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

### vtech *Baby*

Toys that will stimulate their interest in different textures, sounds and colours

#### I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



### Pre-School

Interactive toys to develop their imagination and encourage language development

#### I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



### Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

#### I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years



 
To learn more about this and other VTech® products, visit [www.vtech.co.uk](http://www.vtech.co.uk)



## INTRODUCTION

Thank you for purchasing **Sparklings Mia!**

Hi, I'm Mia, welcome to my colourful world of magic! Press my charm to choose a colour, then touch my horn, eyes or wings to decorate them with that colour. Let's have fun together!

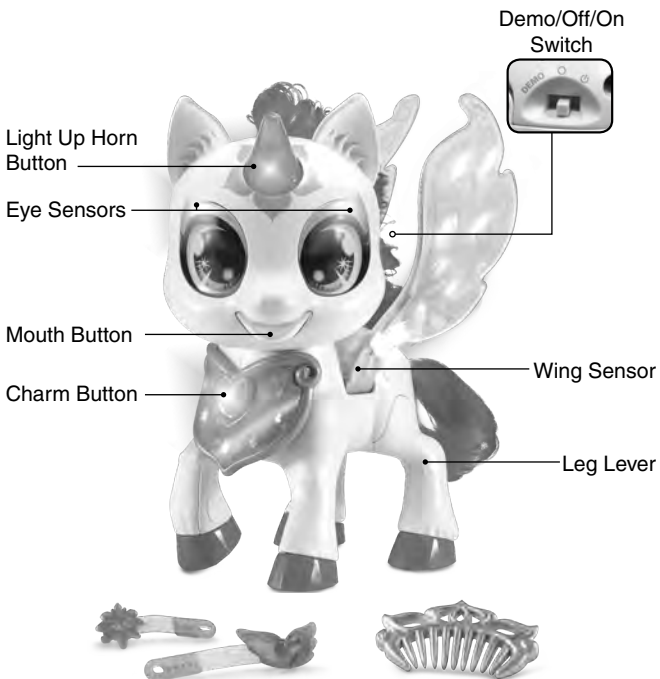

Hair Clips and Comb



## INCLUDED IN THIS PACKAGE

- **Sparklings Mia**
- Two hair clips
- One comb
- Parent's guide

### WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy and should be discarded for your child's safety.

### NOTE:

 
Please keep this Parent's Guide as it contains important information.

 
### WARNING:

This toy produces flashes that may trigger epilepsy in sensitised individuals.

### Unlock the Packaging Locks


- ① Rotate the packaging lock anticlockwise several times.
- ② Pull out the packaging lock and discard.

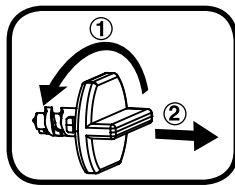



**NOTE:**

 There are two cable ties at the bottom of the wings, the neck and hair are also tied by a transparent rubber band. These ties and rubber band are packaging materials and should be discarded for your child's safety.

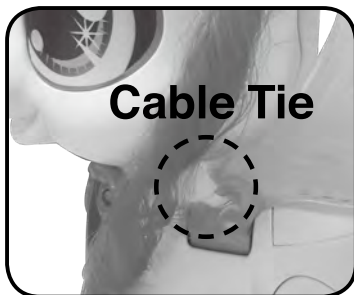

## GETTING STARTED

 
The batteries included are for demo purposes only. Please replace the low capacity Try Me batteries with new batteries for the best performance. Slide the **Demo/Off/On Switch** to the **ON** position to start.

### NOTE:

Playing at close range for a prolonged period of time may cause fatigue or discomfort. We recommend that children take a 15-minute break for every hour of play.


### Battery Removal and Installation

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the unit, use a screwdriver to loosen the screw and open the battery box.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 AAA (LR03/AM-4) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance).
5. Replace the battery cover and tighten the screw to secure.

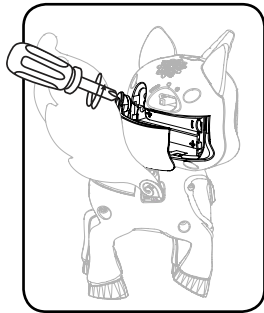

### WARNING:

 Adult assembly required for battery installation.  
Keep batteries out of reach of children.



## **IMPORTANT: BATTERY INFORMATION**

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

### **RECHARGEABLE BATTERIES:**

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.



## Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

VTech® cares for the planet.

Care for the environment and give your toy a second life by disposing of it at a small electricals collection point so all its materials can be recycled.

 
In the UK:

Visit [www.recyclenow.com](http://www.recyclenow.com) to see a list of collection points near you.

In Australia & New Zealand:

Check with you local council for kerbside collections.





## PRODUCT FEATURES

### 1. Demo/Off/On Switch

To turn the unit **ON**, slide the **Demo/Off/On Switch** to the **ON** position. To turn the unit **OFF**, slide the **Demo/Off/On Switch** to the **OFF** position.

### 2. Automatic Shut Off

 
To preserve battery life, Mia will automatically power down after several seconds without input. The unit can be turned on again by pressing the horn button, mouth button or charm button.

 
**NOTE:** If the unit powers down while playing, please install a new set of batteries.

## ACTIVITIES

### 1. Colour Mia

Mia lights up in the colours you choose for her. Press Mia's **Charm Button** to choose a colour. Then, touch her eyes, horn and wings to add the selected colour to them.

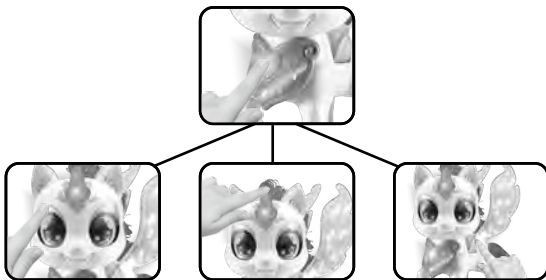



## 2. Mia's Mood

Mia expresses her mood through colour. Press her **Light Up Horn Button** to see how she feels. Then, touch her eyes or wings for some additional colour phrases.



## 3. Colour Fun

Mia likes to pick a lucky colour for you. Press her **Wing Sensor** and she'll select a lucky colour and tell you how that colour makes her feel.



## 4. Tell Mia Your Wishes

Mia wants you to share your wishes and dreams with her. Cover and hold one of Mia's **Eye Sensors** and she'll ask you to tell her your wishes. Keep her **Eye Sensor** covered as you tell her. Uncover her **Eye Sensor** and she'll tell you how much she loves your wishes.



## 5. Musical Mia

Mia loves to sing. Tap Mia's **Mouth Button**, and she will sing, hum or even surprise you with a kiss! Careful, sometimes she even burps!



## 6. Flying Fun

Mia loves to fly! Help her flap her wings by pressing her **Leg Lever**. She'll make magical sounds and cheer as she pretends to zoom through the sky.





## 7. Cuddle and Care

Every unicorn needs love. Stroke Mia's **Eye Sensors** or **Wing Sensor** to take care of her and get some fun surprises.



## CARE & MAINTENANCE

 
1. Keep Mia clean by wiping her with a slightly damp cloth.
2. Keep Mia out of direct sunlight and away from any direct heat sources.
3. Remove the batteries when Mia is not in use for an extended period of time.
4. Do not drop Mia on a hard surface and do not expose her to excess moisture.

## TROUBLESHOOTING

If for some reason Mia stops working, please follow these steps:

1. Please turn Mia OFF.
2. Interrupt the power supply by removing the batteries.
3. Let Mia stand for a few minutes, then replace the batteries.
4. Turn Mia ON. Mia should now be ready to play with again.
5. If Mia still does not work, install a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department, and a service representative will be happy to help you.



## CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

### **UK Customers:**

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)  
Website: [www.vtech.co.uk/support](http://www.vtech.co.uk/support)

### **Australian Customers:**

Phone: 1800 862 155  
Website: [support.vtech.com.au](http://support.vtech.com.au)

### **NZ Customers:**

Phone: 0800 400 785  
Website: [support.vtech.com.au](http://support.vtech.com.au)

## PRODUCT WARRANTY/ CONSUMER GUARANTEES

 
### **UK Customers:**

Read our complete warranty policy online at [vtech.co.uk/warranty](http://vtech.co.uk/warranty).

### **Australian Customers:**

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –  
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to [vtech.com.au/consumerguarantees](http://vtech.com.au/consumerguarantees) for further information.

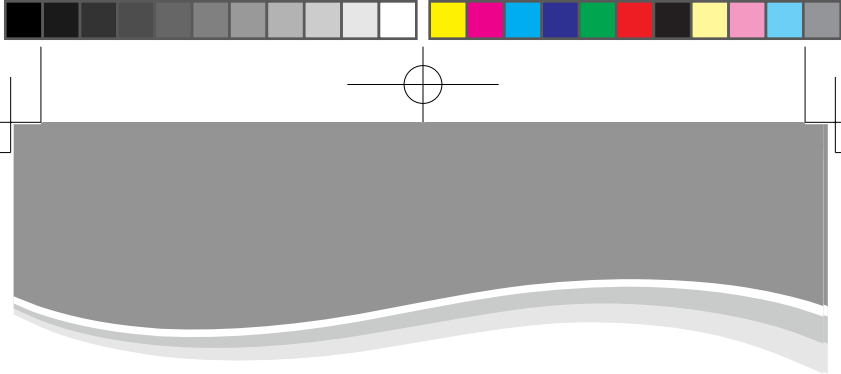

**Visit our website for more  
information about our products,  
downloads, resources and more.**

***[www.vtech.co.uk](http://www.vtech.co.uk)***  
***[www.vtech.com.au](http://www.vtech.com.au)***



TM & © 2020 VTech Holdings Limited.  
All rights reserved.  
**Printed in China.**  
91-003822-017 (M)