



Instruction Manual

Big Business Baby Desk



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

Pre-School

Interactive toys to develop their imagination and encourage language development

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

 
I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months

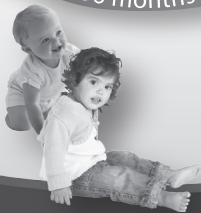

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the **Big Business Baby Desk**.

With the **Big Business Baby Desk** kids can type, take a call and enjoy some tunes while keeping learning at an all-time high. Turn the page of the book, give the coffee a stir, move the mouse and open the webcam. Clock in and play the workday away!



1	Pop-Up Plant	8	Magnifying Glass Button
2	Star Button	9	Mode Switch
3	Notebook	10	Stirring Cup
4	Call Button	11	Telephone Base Button
5	Number Button	12	Rolling Pen
6	Alphabet Button	13	Mouse
7	Off/Low/High Volume Switch		

INCLUDED IN THE PACKAGE

- Big Business Baby Desk



Top of Desk



Removable Phone



4 Legs

- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

WARNING

Adult assembly required.

 
INSTRUCTIONS

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned off.
2. Locate the battery cover on the back of the unit, use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery
4. Install 3 new 1.5V AA (LR6) batteries following the diagram inside the battery box (for best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

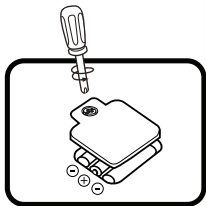

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



The solid bar indicates that the product was placed on the market after 13th August, 2005.

 Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

www.vtech.co.uk/recycle

www.vtech.com.au/sustainability

* Visit www.recyclenow.com to see a list of collection points near you.

ASSEMBLY INSTRUCTIONS

With the **Big Business Baby Desk** safety comes first. Adult assembly is required. For your child's safety, do not let them play with this toy until it is fully assembled.

1. Insert each table leg into the sockets on the bottom of the desk. Press firmly until each leg is secure. Check that all legs are stable before use.



2. To use the desk as a tabletop, gently pull the legs away from the desk. It can then be placed on any flat surface for the child to use.

PRODUCT FEATURES

1. Off/Low/High Volume Switch

To turn the unit **On**, slide the **Off/Low/High Volume Switch** to the **Low Volume**  or **High Volume**  position. You will hear fun sounds, a song and a phrase. To turn the unit **Off**, slide the **Off/Low/High Volume Switch** to the **Off**  position.



2. Automatic Shut-Off

To preserve battery life, the **Big Business Baby Desk** will automatically power down after approximately 16 seconds of inactivity. To turn the unit back on, press any button on the keyboard, the star button on the book, or the telephone base.

NOTE

If the unit powers down or if the light fades out during play, please install a new set of batteries.

ACTIVITIES

1. Call Button

Press the **Call Button** on the keyboard to introduce phone and video calls. Fun sounds and songs will play to encourage the child to pretend to call. The light will flash with the sounds.



2. Number Button

Press the **Number Button** on the keyboard to introduce numbers. Fun sounds and songs will play to encourage the child to count. The light will flash with the sounds.



3. Alphabet Button

Press the **Alphabet Button** on the keyboard to introduce letters. Fun sounds and songs will play to encourage the child to learn and play. The light will flash with the sounds.



4. Magnifying Glass Button

Press the **Magnifying Glass Button** on the keyboard to play fun sounds and songs and to encourage the child to explore the desk. The light will flash with the sounds.



5. Star Button

Press the **Star Button** to hear fun sounds and songs. The light will flash with the sounds.



6. Mode Switch

Slide the **Mode Switch** to choose between **Music Mode**, **Learn Mode** or **Explore Mode**. The light will flash with the sounds.



 
7. Mouse

Slide the **Mouse** to hear fun sounds and a phrase. The light will flash with the sounds.



8. Telephone Base

Press the **Telephone Base** to hear fun sounds and songs. The light will flash with the sounds.

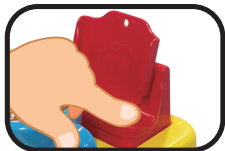

MELODIES

1. Bingo
2. Do You Know the Muffin Man?
3. Glow Worm
4. There is a Tavern in the Town
5. Hickory Dickory Dock
6. London Bridge
7. Cello Suite No.1 in G (Bach)

8. Oh Where, Oh Where Has My Little Dog Gone?
9. One, Two, Buckle My Shoe
10. Skip to My Lou
11. Swan Lake Waltz (Tchaikovsky)
12. Good Morning, Merry Sunshine
13. Looby Loo
14. Dance of the Sugar Plum Fairy (Tchaikovsky)
15. Three Little Kittens

SONG LYRICS

Song 1

Work's all done, yay!
Now it's time to play,
Tap the keys, sing along, hip-hip hooray!

Song 2

Ring-ring, hi! When the screen shines bright.
Wave, bye-bye to soft twilight.

Song 3

Count one, two, three, come and play with me,
Four, and five make numbers we see!

Song 4

Ah, Buh, Cuh, Duh, type with me,
Letter sounds for you and me!

Song 5

Click and tap, look and play,
Discover magic every day!

Song 6

Open up, open up, what will you see?
A world full of colours and shapes for me!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.

CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)
Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155
Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785
Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

**VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES**

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au

