

**vtech**<sup>®</sup>  
baby

# Instruction Manual

## 5-in-1 Baby Booster Seat



**VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...**

## **vtech** Baby

**Toys that will stimulate their interest in different textures, sounds and colours**

### **I am...**

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

*Birth-36 months*



## **Pre-School**

**Interactive toys to develop their imagination and encourage language development**

### **I want...**

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

*3-6 years*



## **Electronic Learning Computers**

**Cool, aspirational and inspiring computers for curriculum related learning**

### **I need...**

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

*4-10 years*




To learn more about this and other VTech® products, visit [www.vtech.co.uk](http://www.vtech.co.uk)

# INTRODUCTION


Join your animal friends on the **5-in-1 Baby Booster Seat!** Filled with developmental activities with 3 detachable play zones, this seat grows with your baby in their first three years.

1 Roller Ball  
Button


Off/Low/ High  
Volume Control  
Switch

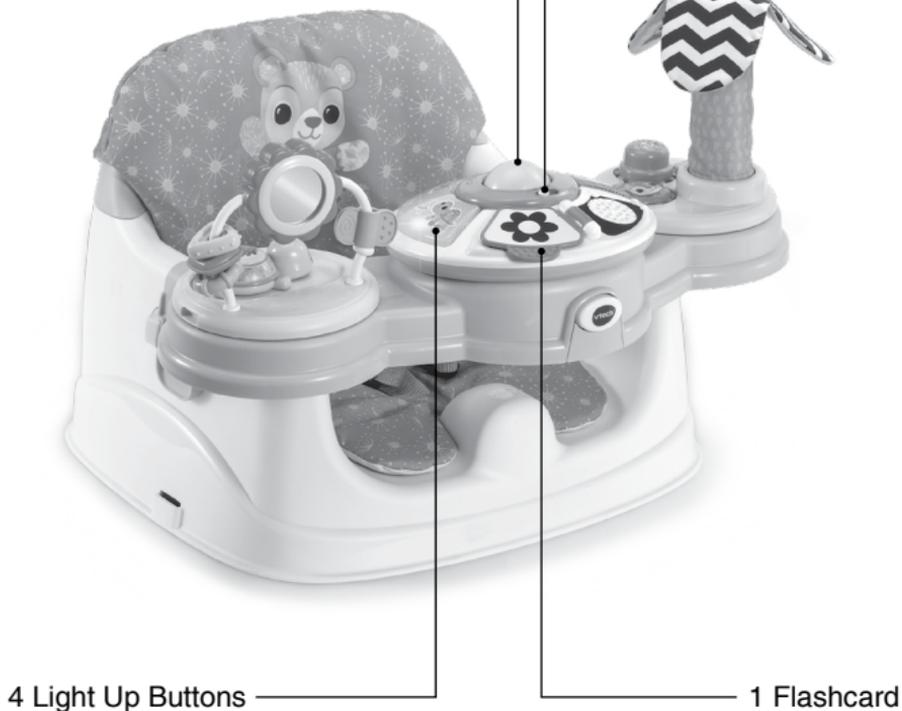


# INCLUDED IN THE PACKAGE

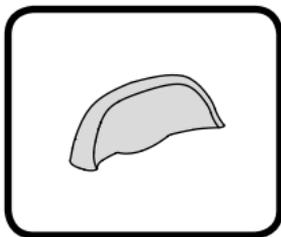

Backrest

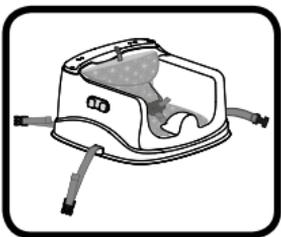


Booster Body with Seat Pad, Adult Chair Straps and Child Restraints

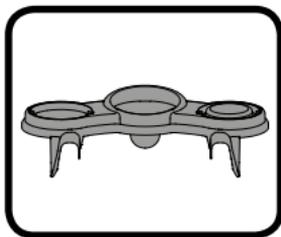


Snack Tray




Soft Tree

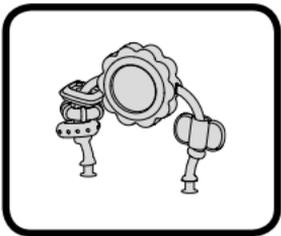


Mirror Arch

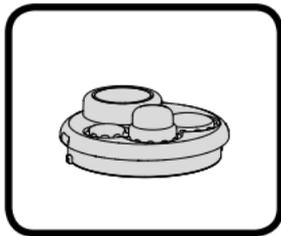

Gear Play Zone (Left)

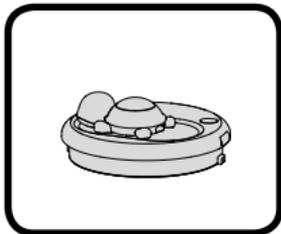

Turtle Play Zone (Right)

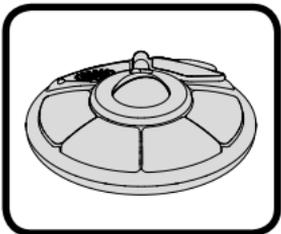

Musical Play Zone (Middle)



4 Screws


- Quick Start Guide

**WARNING:**

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

**NOTE:**

Please save this Instruction Manual as it contains important information.

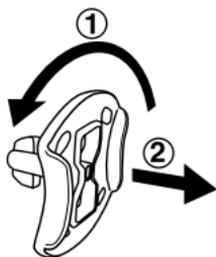**Removing the Packaging Locks:**

- ① Rotate the packaging locks anticlockwise 90 degrees.
- ② Pull out the packaging locks and discard.

# **IMPORTANT! KEEP FOR FUTURE REFERENCE WARNING**

## **Adult assembly required.**

**This package contains small parts. For your child's safety, do not let your child play with the 5-in-1 Baby Booster Seat until it is fully assembled.**

**To prevent serious injury or death from sliding out, falling or tipping over:**

- Never leave the child unattended.
- Always use the restraint system and ensure it is correctly fitted.
- Always use the chair attachment system and ensure it is correctly fitted before use.
- Always check the security and the stability of the product on an adult chair before use.
- Do not use this product on stools or benches that do not have a seat back. Attach this product to an adult chair using the bottom and back attachment straps.
- Ensure that the adult chair with the booster seat is placed in a position where the child is not able to use their feet to push against the table or any other structure as this can cause the adult chair, which is supporting the booster seat to tip over.

**To prevent serious injury or death:**

- Do not use in motor vehicles.

## **IMPORTANT:**


Before assembly, setup and each use, inspect this product for damaged hardware, loose joints, missing parts or sharp edges. Do not use the product if any part is broken, torn or missing. Do not use accessories or replacement parts other than those approved by the manufacturer. Never substitute parts.

- Adult assembly and setup is required.
- Use only with a child who has enough upper body control to sit up unassisted.
- Age: 6 - 36 months.
- Maximum weight: 15kg.

# GETTING STARTED

## BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 3 new AAA (LR03/AM-4) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

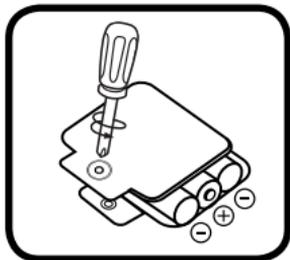

### **WARNING:**

Adult assembly required for battery installation.  
Keep batteries out of reach of children.

### **IMPORTANT: BATTERY INFORMATION**

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

### **RECHARGEABLE BATTERIES:**

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

## Disposal of batteries and product



The crossed-out wheelee bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

### **VTech® cares for the planet.**

Care for the environment and give your toy a second life by disposing of it at a small electricals collection point so all its materials can be recycled.

#### **In the UK:**

Visit [www.recyclenow.com](http://www.recyclenow.com) to see a list of collection points near you.

#### **In Australia & New Zealand:**



Check with your local council for kerbside collections.

# ASSEMBLY INSTRUCTIONS

Safety comes first with the **5-in-1 Baby Booster Seat**. To ensure your child's safety, adult assembly is required. This package contains four screws. Do not let your child play with the toy until it is fully assembled.

## A. Seat Pad



1. Insert the backrest into the top of the booster body, then flip over the booster body, use four of the screws to secure the pieces together.

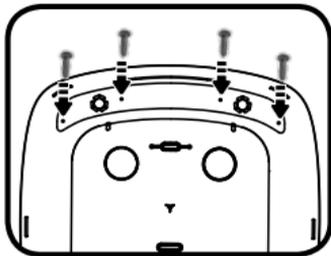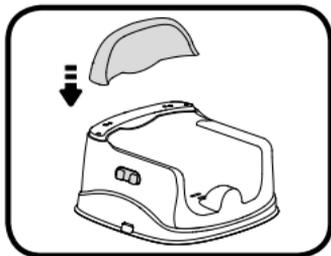



### Note

The screws are for assembly only and are not toys. Please keep screws away from children.

2. To attach the seat pad to the booster, locate the T end of the seat pad and insert it through the hole in the backrest, as shown below. Pull back to make sure it is secure.

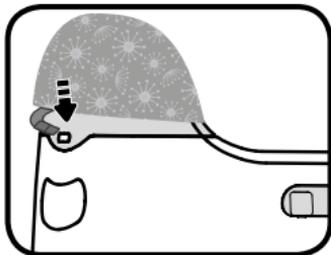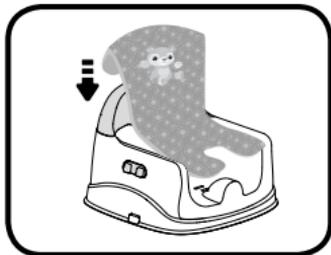


3. Insert the two elastic rings through the holes on the bottom of the seat, tighten them via the pillars, as shown below. (These are already in place when you take it out of the packaging).

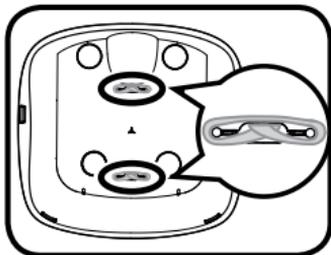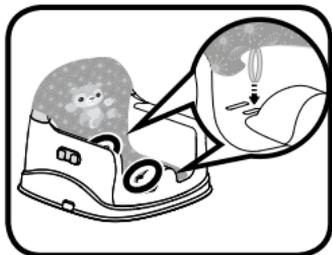




## B. Child Restraints

1. Locate the three T-ends (A,B,C) of the child restraints, insert them through the holes of the seat pad, then into the booster, as shown below. Pull back to make sure they are secure. (These are already in place when you take it out of the packaging).

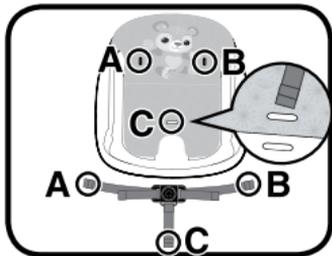


### C. Snack Tray & Play Zones

1. Insert the mirror arch into the turtle play zone (right), and insert the soft tree into the gears play zone (left). Then insert the play zone (right) & play zone (left) into the snack tray, rotate the play zones (following the diagram on the snack tray), as shown below. You will hear a “click” sound to indicate the two play zones are secure.

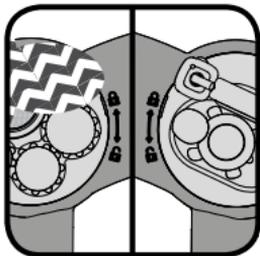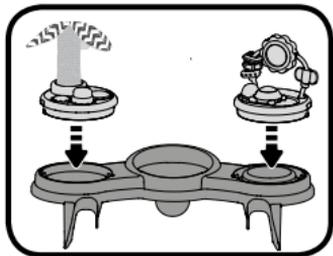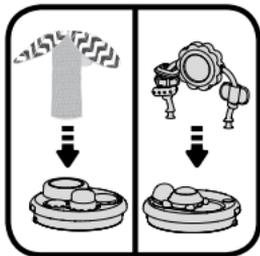


2. Attach one end of the musical play zone (middle) into the snack tray (following the arrow), then push to attach the other end, as shown below. You will hear a “click” sound to indicate the pieces are secure.

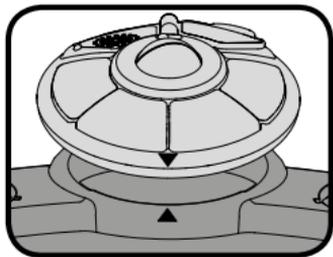


**To remove the play zone (left) & play zone (right) from the snack tray:**

Rotate the play zones (following the diagram on the snack tray), then pull them up, as shown below.

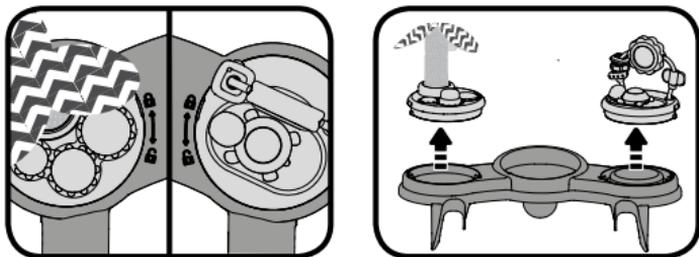

**To remove the musical play zone (middle) from the snack tray:**


Press the button on the snack tray, then pull up on one end of the musical play zone (middle), as shown below.

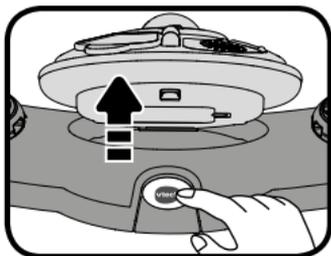


#### **D. Adult Chair Straps**

(These are already in place when you take it out of the packaging).


1. Unlock the buckles by pushing both sides of the buckles, as shown below.

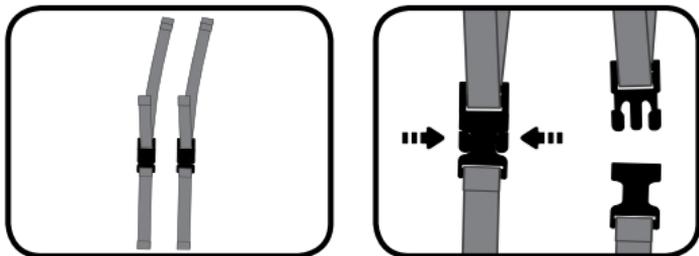

2. Locate the four T-ends (A, B, C, D) of the straps and insert them through the holes of the booster, as shown below. Pull back to make sure they are secure.

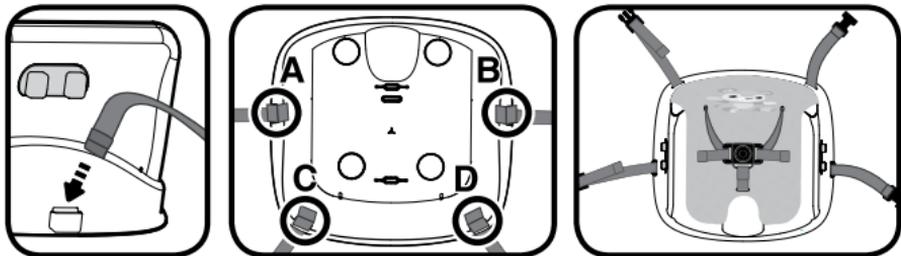



## PRODUCT SET-UP

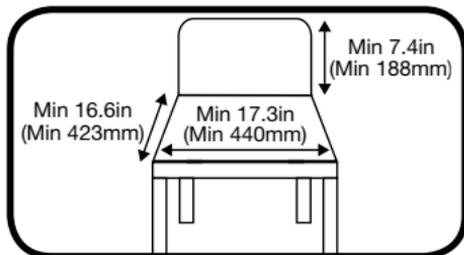

### A. Seat Attachment


Before attaching this product to an adult chair, make sure the chair meets the dimensions shown above.

- Place the booster seat on the chair.
- Wrap the bottom straps around the bottom of the chair. Buckle the straps. You will hear a “click” sound to indicate the straps are secure. Pull the free end of the strap to tighten.
- Wrap the back straps around the back of the chair. Buckle the straps. You will hear a “click” sound to indicate the straps are secure. Pull the free end of the strap to tighten.
- Check the restraint system is securely attached by pulling it away from the chair. The restraint system should remain firmly attached.

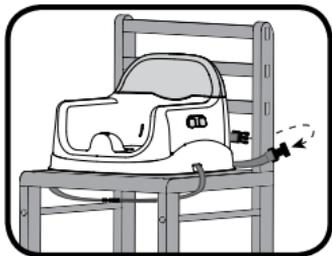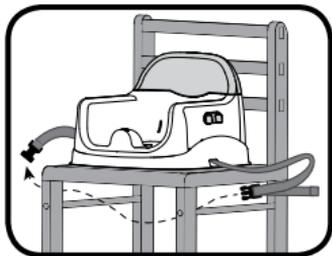

## B. Securing Your Child

- Place your child in the booster seat. Position the crotch belt between your child's legs.
- Buckle the restraint belts to the crotch belt. You will hear a “click” sound to indicate the straps are secure.
- Check to be sure the restraint system is securely attached by pulling it away from your child. The restraint system should remain attached.

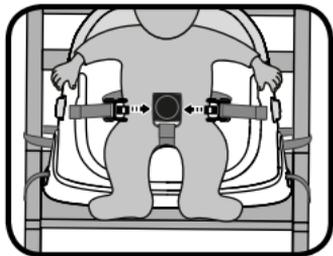



### To tighten the restraint belts:

- Feed the anchored end of the restraint belt up through the buckle to form a loop.
- Pull the free end of the restraint belt.

### To loosen the restraint belts:

- Feed the free end of the restraint belt up through the buckle to form a loop.
- Enlarge the loop by pulling on the end of the loop toward the buckle.



- Pull the anchored end of the restraint belt to shorten the free end of the restraint belt.

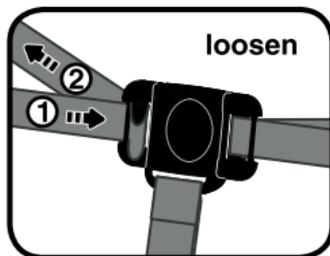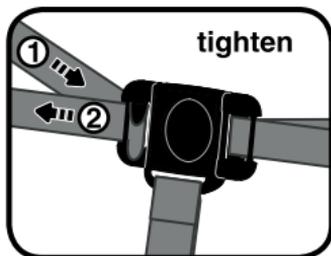

### C. Tray Use

Before use, thoroughly wash all parts (the tray) that may be in contact with food. The trays are not microwave or dishwasher safe.

- Make sure your child is properly restrained in the booster seat.
- The snack tray can be attached to the booster seat armrest in any of the 2 slots. (There are 2 adjustable slots to cater for baby as they grow).
- Fit and snap the tray onto the slots on the armrest, you will hear a click sound. Then press the handles of the tray again, you will hear another click sound and see the little locks pop out, this ensures a secure connection.

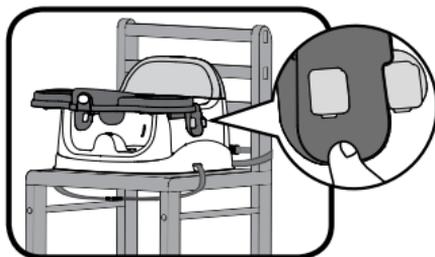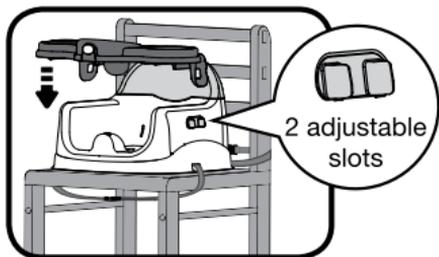

### WARNING:

Be careful not to trap your child's fingers on the gap between the snack tray and the booster seat.


### To remove the snack tray:

- Simply lift the tabs on each side of the snack tray.

# PRODUCT FEATURES

## 1. Off/Low/High Volume Control Switch

To turn the unit **On**, slide the **Off/Low/High Volume Control Switch** to the Low (🔊) or High (🔊🔊) volume position. You will hear a song and welcoming phrase. To turn the unit **Off**, slide the **Off/Low/High Volume Control Switch** to the **Off** (●) position.

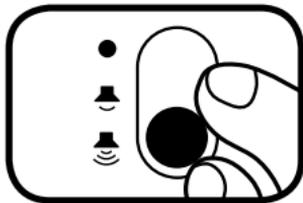

## 2. Automatic Shut-Off

To preserve battery life, the **5-in-1 Baby Booster Seat** will automatically shut off after approximately 45 seconds without input. The unit can be turned on again by pressing any light up button, roller ball button or flipping the flashcard.


### NOTE

If the unit repeatedly powers down while playing, please install a new set of batteries.

# ACTIVITIES


## 1. Light Up Buttons

Press the **Light Up Buttons** to learn animals, colours, numbers and counting and hear animal songs, melodies and music. The lights will flash with the sounds.

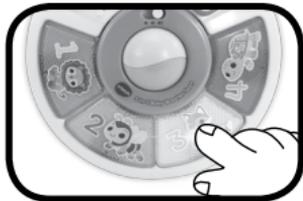

## 2. Rollerball Button

Press the **Rollerball Button** to hear playful sounds and music. When a melody is playing, press the **Rollerball Button** again to hear fun sounds play over the top of the melody. The lights will flash with the sounds.

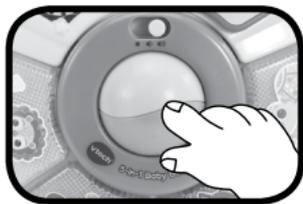

## 3. Flashcard

Flip the **Flashcard** to hear fun sounds and melodies. The lights will flash with the sounds.



## 4. 5-in-1 Features

### 4.1. Seated Positioner (6 months+)



### 4.2. Floor Seat (9 months+)



#### 4.3. Snack Time Booster (9 months+)



#### 4.4. Sit & Play (12 months+)



#### 4.5. Table Booster Seat (18 months+)



# SONG LYRICS

## Song 1

Animal pals are here to play,  
Explore and learn and sing all day!

## Song 2

Lion swishes his furry red mane,  
As he dashes through the wind.

## Song 3

Little darling say hello,  
Busy Bee is buzzing free.

## Song 4

Little Fox flaps his furry ears,  
As he dashes through the wind.

## Song 5

Little darling say hello,  
To tiny Turtle smiling at me.

# MELODY LIST

1. Polly Put the Kettle On
2. Ring Around the Rosies
3. Teddy Bears' Picnic
4. Wheels on the Bus
5. Skip to My Lou
6. Oranges and Lemons
7. Little Bo Peep
8. Jack and Jill
9. Incy Wincy Spider
10. London Bridge
11. Humpty Dumpty
12. Hot Cross Buns
13. Frère Jacques
14. The Entertainer
15. Mary Had A Little Lamb
16. Girls and Boys Come Out to Play

# CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
5. The booster seat with attached straps and belts may be wiped clean using a mild cleaning solution and a damp cloth. Do not use bleach. Do not use harsh or abrasive cleaners. Rinse clean with water to remove residue.
6. The snack tray is not machine washable.
7. Wash the snack tray thoroughly before use.

# TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit On. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.

VTech Electronics Europe B.V., Fahrenheitstraat 22, 6003 DC Weert,  
THE NETHERLANDS.

VTech Electronics Europe plc, Napier Court, Abingdon Science Park,  
Abingdon, Oxon, OX14 3YT, U.K.

VTech Electronics (Australia) Pty Limited, Level 6, 22 Albert Road,  
South Melbourne VIC 3205, Australia.

# CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

## **UK Customers:**

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)  
Website: [www.vtech.co.uk/support](http://www.vtech.co.uk/support)

## **Australian Customers:**

Phone: 1800 862 155  
Website: [support.vtech.com.au](http://support.vtech.com.au)

## **NZ Customers:**

Phone: 0800 400 785  
Website: [support.vtech.com.au](http://support.vtech.com.au)

# PRODUCT WARRANTY/ CONSUMER GUARANTEES

## **UK Customers:**

Read our complete warranty policy online at [vtech.co.uk/warranty](http://vtech.co.uk/warranty).

## **Australian Customers:**

**VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –  
CONSUMER GUARANTEES**

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to [vtech.com.au/consumerguarantees](http://vtech.com.au/consumerguarantees) for further information.

**Visit our website for more  
information about our products,  
downloads, resources and more.**

***www.vtech.co.uk***  
***www.vtech.com.au***

