

Parent's Guide



Remote Control Cory





VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

School

Interactive toys to develop their imagination and encourage language development

Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

vtech Baby

Tovs that will stimulate their interest in different textures. sounds and colours

I want...

- ...to get ready for school by starting to learn the alphabet and counting
- ...my learning to be as fun, easy and exciting as can be
- ...to show my creativity with drawing and music so my whole brain develops

I need...

- ...challenging activities that can keep pace with my growing mind
- ...intelligent technology that adapts to my level of learning i
- ...National Curriculum based content to support what I'm learning at school

lam... ...responding to colours,

sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months






To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the VTech® Toot-Toot Cory Carson® Remote Control Cory!

Let's have fun with Cory! Use the two-button remote control to move Cory forward or reverse spin! Press the light up button to hear fun phrases, sounds and music from the show.

Come on, let's go!

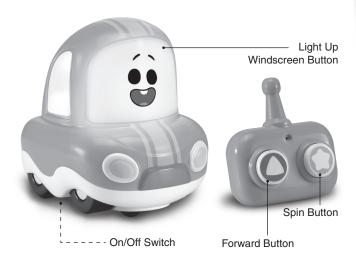

INCLUDED IN THIS PACKAGE

Toot-Toot Cory Carson® Remote Control Cory

- One remote control
- One Parent's Guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE:

Please keep this Parent's Guide as it contains important information.

Removing the Packaging Locks:



- 1 Turn the packaging locks anticlockwise several times.
- (2) Pull out the packaging locks and discard.



- ① Rotate the packaging locks 90 degrees anticlockwise.
- ② Pull out the packaging locks and discard.

INSTRUCTIONS

BATTERY REMOVAL AND INSTALLATION

Car

- 1. Make sure the unit is turned OFF.
- Locate the battery cover on the bottom of the unit. Use a screwdriver to loosen the screw.
- If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
- Install 4 new AA (AM-3/LR6)
 batteries following the diagram inside the battery box.
 (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
- 5. Replace the battery cover and tighten the screw to secure.

Remote Control

- 1. Make sure the unit is turned OFF.
- Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw.
- If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
- Install 2 new AAA (AM-4/LR03)
 batteries following the diagram inside the battery box.
 (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
- 5. Replace the battery cover and tighten the screw to secure.

WARNING:

Adult assembly required for battery installation. Keep batteries out of reach of children.



IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheelie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

VTech® cares for the planet.

Care for the environment and give your toy a second life by disposing of it at a small electricals collection point so all its materials can be recycled.

In the UK:

Visit www.recyclenow.com to see a list of collection points near you.


In Australia & New Zealand:

Check with you local council for kerbside collections.

PRODUCT FEATURES

1. On/Off Switch

To turn the unit **ON**, slide the **ON**/ **OFF Switch** to the **ON (b)** position. To turn the unit **OFF**, slide the **ON**/ **OFF Switch** to the **OFF** ● position.

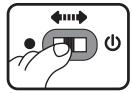

2. Remote Control

Use the **Forward Button** to move Cory forward and the **Spin Button** to reverse spin. Cory will play fun sounds while driving.



3. Automatic Shut-Off

To preserve battery life, **Remote Control Cory** will power down after approximately 100 seconds without input. The unit can be turned on again by pressing Cory's **Light Up Button**.

If the **Forward Button** or **Spin Button** is held for more than 15 minutes, the **Remote Control** and the car will go into sleep mode. The **Remote Control** will not work if the vehicle is in sleep mode.

Note:

If the unit repeatedly powers down while playing or the light fades out, we suggest changing the batteries.

Note:

This product is in Try-Me mode in the packaging. After opening the package, turn the unit off and on again to proceed with normal play. If the unit powers down while playing, please install a new set of batteries.

Note:

This toy's ideal operating temperature range: 0° - 35°C (32° - 95°F)

IMPORTANT:


- For optimal performance, please use Remote Control Cory on a flat, smooth surface.
- For your child's safety, do not place or roll the car on clothing, body or hair. Especially when the RC is turned on.
- If something gets caught in the wheels, lift the car up, slide the ON/OFF SWITCH to the OFF position and remove the obstruction.





ACTIVITIES

Light Up Button
 Press the Light Up Button to hear fun songs, exciting phrases, sounds and music. The light will flash with the sounds.

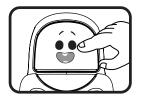

Forward Button
 Press the Forward Button to move Cory forward with fun sounds and phrases. The light will flash with the sounds.



3. Spin Button

Press the **Spin Button** to reverse spin while playing fun sounds and phrases. The light will flash with the sounds.



CARE & MAINTENANCE

- 1. Keep the unit clean by wiping it with a slightly damp cloth.
- Keep the unit out of direct sunlight and away from any direct heat sources.
- 3. Remove the batteries when the unit will not be in use for an extended period of time.
- Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

- 1. Please turn the unit OFF.
- 2. Interrupt the power supply by removing the batteries.
- 3. Let the unit stand for a few minutes, then replace the batteries.
- 4. Turn the unit **ON**. The unit should now be ready to play again.
- If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please contact our Consumer Services
Department and a service representative will be happy to help you.

DECLARATION OF CONFORMITY

Hereby, VTech Electronics Europe BV declares that the radio equipment type 5459 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

www.vtech.com/re-directive

Frequency Band: 2414MHz – 2474MHz Maximum RF power: 0.000335W(-4.74dBm)

DECLARATION OF CONFORMITY

Hereby, VTech Electronics Europe Plc declares that the radio equipment type 5459 is in compliance with The Radio Equipment Regulations 2017 (2017 No.1206). The full text of the Declaration of conformity is available at the following internet address:

www.vtech.com/re-directive

Frequency Band: 2414MHz – 2474MHz Maximum RF power: 0.000335W(-4.74dBm)

RF warning statement:

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED – CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

Visit our website for more information about our products, downloads, resources and more.

www.vtech.co.uk www.vtech.com.au

