



Instruction Manual

Enchanted Castle Slide



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

 
4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the **VTech® Toot-Toot Drivers® Enchanted Castle Slide**. Little ones will love to mix and match the track configurations and launch Cinderella's Wedding Carriage from the ramps, activating phrases, sounds and music.

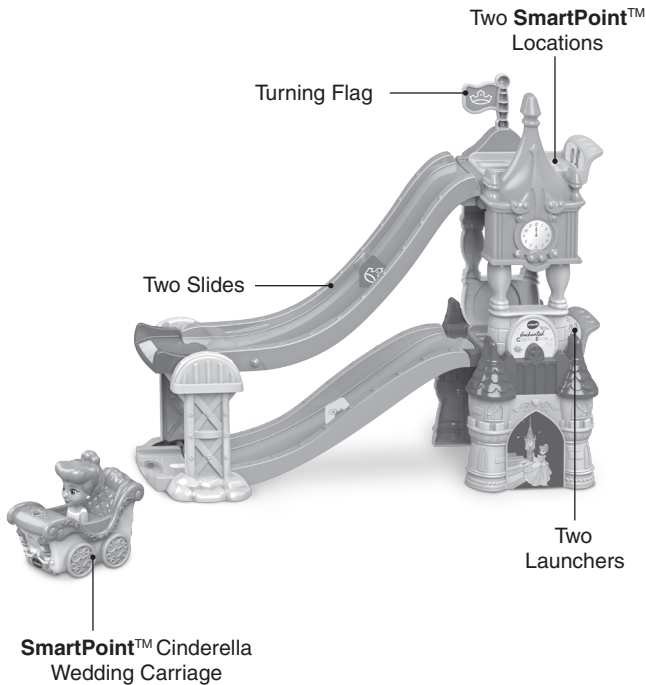

INCLUDED IN THE PACKAGE



One **SmartPoint™**
Cinderella Wedding
Carriage



Two bottom
castle supports



SmartPoint™
launcher one



Two upper castle
supports



SmartPoint™
launcher two



 
One turning flag



One top long track



One bottom long track

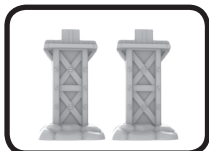


Two bridge supports



One bridge



 One mid track piece

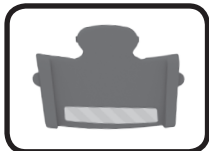

One end track piece

- Label Sheet

- Quick Start Guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE:

 
Please save this Instruction Manual as it contains important information.

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

Unlock the Packaging Locks

- ① Rotate the packaging locks anticlockwise several times.
- ② Pull out and discard the packaging locks.

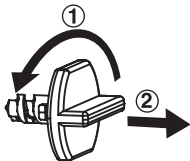


GETTING STARTED

Battery Removal and Installation

Cinderella Wedding Carriage

 1. Make sure the unit is turned **Off**.
2. Locate the battery cover on the bottom of the **Cinderella Wedding Carriage**. Use a coin or a screwdriver to loosen the screw.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance).
5. Replace the battery cover and tighten the screw to secure.

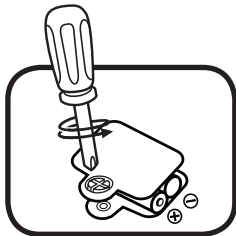

BATTERY NOTICE

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Remove rechargeable batteries (if removable) from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.

 Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

 
 
www.vtech.co.uk/recycle

www.vtech.com.au/sustainability

* Visit www.recyclenow.com to see a list of collection points near you.

LABEL APPLICATION


Please stick the labels to the play set securely as indicated on the following page:

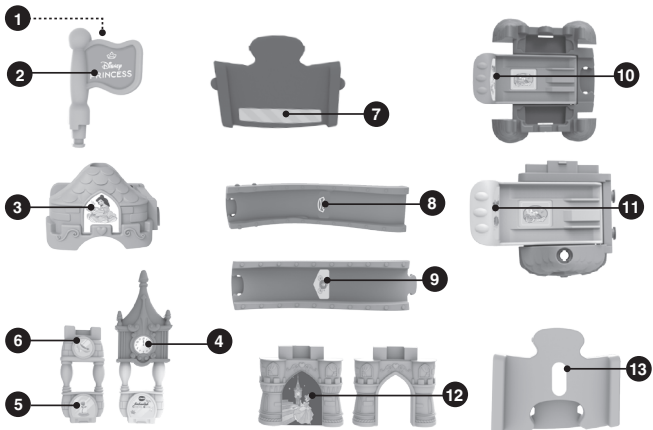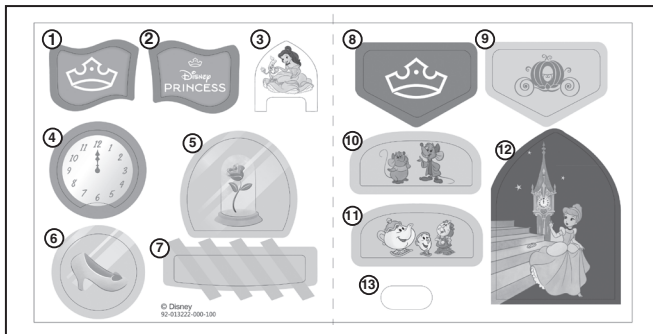


ASSEMBLY INSTRUCTIONS

With the **VTech® Toot-Toot Drivers® Enchanted Castle Slide**, safety comes first. To ensure your child's safety, adult assembly is required.

 
1. Attach the **bottom castle supports** to the **SmartPoint™ launcher one**.

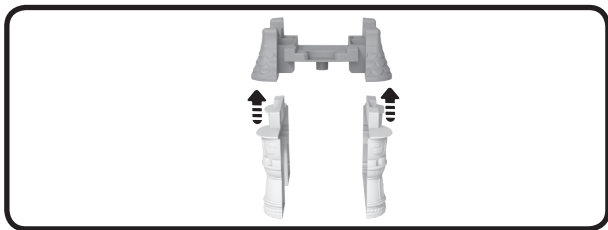

2. Attach the **upper castle supports** to the **SmartPoint™ launcher one**.

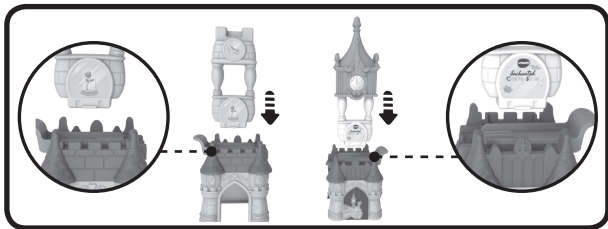 

3. Attach the **SmartPoint™ launcher two** to the **upper castle supports**.

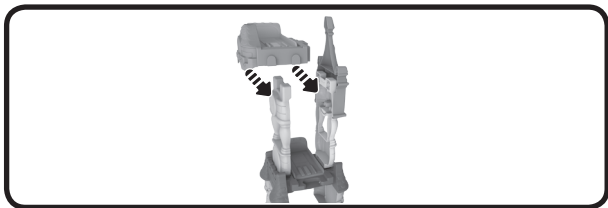 

4. Insert the **turning flag** into the **SmartPoint™ launcher two**.



5. Connect the **bridge** to the **two bridge supports**.

 


After the above steps, connect these pieces to the included track pieces. You can configure your play set as **Tower Slides**, **Double Slides** or a **Super Slide**.

Tower Slides



Double Slides

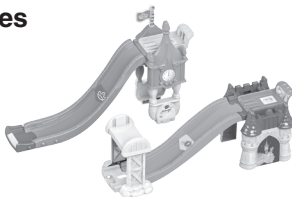

Super Slide

 


PRODUCT FEATURES

Cinderella Wedding Carriage

1. On/Off Switch

To turn the unit **On**, slide the **On/Off Switch** to the **On** (⏻) position. To turn the unit **Off**, slide the **On/Off Switch** to the **Off** (●) position.

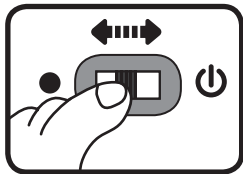

2. Automatic Shut-Off

To preserve battery life, **Cinderella Wedding Carriage** will automatically switch itself off after approximately 60 seconds without input. The unit can be turned on again by pressing the **Character Button**, rolling the vehicle over a **SmartPoint™** location or by pushing the vehicle quickly.

NOTE: This product is in Try-Me mode in the packaging. After opening the package, turn the **Cinderella Wedding Carriage** off and on again to proceed with normal play. If the unit powers down while playing, we suggest changing the batteries.

ACTIVITIES

Cinderella Wedding Carriage

1. Press the **Character Button** to hear songs, phrases, melodies and sounds. While a melody is playing, push the **Cinderella Wedding Carriage** to add sounds on top of the melody. The carriage lights will flash with sounds.



2. Push the **Cinderella Wedding Carriage** to hear playful sounds. The carriage lights will flash with sounds.

 


3. Place the **Cinderella Wedding Carriage** on one of the play set's two **SmartPoint™** locations to see the lights flash and to hear playful sounds, short tunes and phrases. The **Cinderella Wedding Carriage** even interacts with other Toot- Toot Drivers® play sets (other play sets sold separately).




Enchanted Castle Slide

1. Place the **Cinderella Wedding Carriage** or any **SmartPoint™** vehicle (each sold separately) on either of the two **SmartPoint™** locations to trigger sounds, music and phrases.
2. Configure the play set in different ways for added fun and creative play.

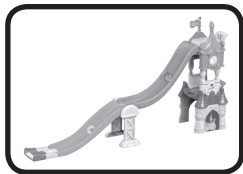

 3. Place the **Cinderella Wedding Carriage** on one of the two SmartPoint™ launchers and tip it up to launch the carriage down the ramp.

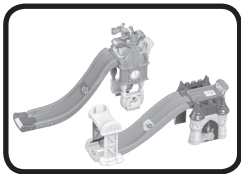

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.

CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)
Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155
Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785
Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au



TM & © 2024 VTech Holdings Limited.
All rights reserved.
Printed in China.
IM-570600-000
Version:0