 


User's Manual

Write & Race Lightning McQueen

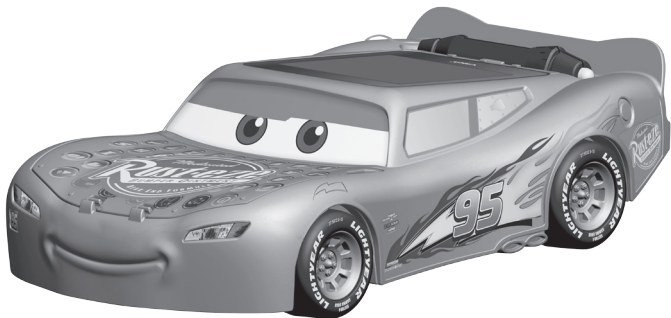

© Disney/Pixar
Visit www.disney.com

TM & © 2017 VTech Holdings Limited.
All rights reserved
Printed in China
91-003363-000 

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the **VTech® Write & Race Lightning McQueen**.

 
Write, race and draw with Lightning McQueen! 5 interactive activities introduce age-appropriate curriculum, including letters, phonics, numbers, words, letter writing and more. Using the chunky stylus, kids will love tracing the lights and playing with their favourite racing car!

5 ACTIVITY
BUTTONS

ON/OFF
BUTTON

26 LETTER
BUTTONS

LIGHT UP
LED TOUCH
PAD

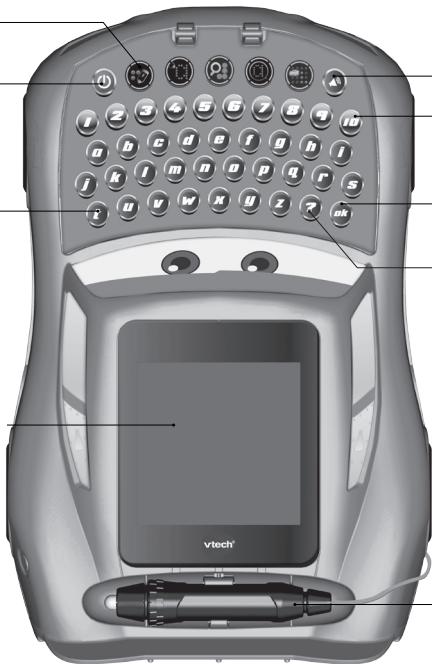

VOLUME
BUTTON

10 NUMBER
BUTTONS

OK
BUTTON

HELP
BUTTON

STYLUS

INCLUDED IN THIS PACKAGE

- One **Write & Race Lightning McQueen**
- One user's manual

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE:

 
Please keep user's manual as it contains important information.

WARNING:

The cords are not part of this toy. The cords should be removed and discarded for your child's safety.



Unlock the packaging locks:

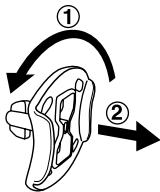


- ① Rotate the packaging lock 90 degrees anticlockwise.
- ② Pull out and discard the packaging lock.

GETTING STARTED

BATTERY INSTALLATION

 1. Make sure the unit is turned **OFF**.
2. Install 2 new AA (LR6/AM-3) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance).
3. Replace the battery cover.

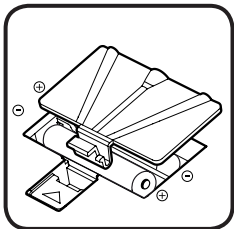

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

www.recycle-more.co.uk

www.recyclenow.com

PRODUCT FEATURES

 
1. ON/OFF BUTTON

To turn the unit **ON**, press the **ON/OFF BUTTON**. Press the **ON/OFF BUTTON** again to turn the unit **OFF**.



2. ACTIVITY BUTTONS

Press one of the five **ACTIVITY BUTTONS** to select an activity.

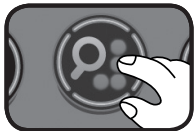

3. LETTER BUTTONS

Press the **LETTER BUTTONS** to learn letters or to answer letter related questions.



4. NUMBER BUTTONS

Press the **NUMBER BUTTONS** to learn numbers.



5. VOLUME BUTTON

Press the **VOLUME BUTTON** to adjust the volume.



6. OK BUTTON

Press the **OK BUTTON** to confirm your drawing.



7. HELP BUTTON

Press the **HELP BUTTON** to repeat the current question or instruction, or to receive a useful hint in some activities.



8. AUTOMATIC SHUT-OFF

To preserve battery life, the **Write & Race Lightning McQueen** will turn off automatically after approximately 1 minute of inactivity. The unit can be turned on again by pressing the **ON/OFF BUTTON**. The unit will also turn off automatically when the batteries are very low.

ACTIVITIES

1. Free Draw

Help Lightning McQueen design some new logos for Rust-eze. Use the **STYLUS** to draw. Then, press the **OK BUTTON** to confirm.

2. Writing McQueen

Cruz and Lightning McQueen are putting data into the simulator, and they could use your help. Press a **LETTER** or **NUMBER BUTTON**, then trace over the lights to write it.

3. Race with Lightning McQueen

It's time for Lightning McQueen's training session. Remember the path, then use the **STYLUS** to follow it.

4. Phonics Finder

Welcome to the Florida 500! Help register the racers by finding the letters that match the letter sounds. Once you've found the correct letter, trace over the lights to write it.

5. Catch me if you can!

Lightning McQueen is racing around Thomasville. Touch the lights to keep up with Lightning.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the unit still does not work, replace with a set of new batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) with any problems and/or suggestions that you might have. A service representative will be happy to help you.



CLASS 1
LED PRODUCT



PRODUCT REGISTRATION

Visit www.vtech.co.uk/clubvtech/login
to register your VTech product

By joining the VTech Club you can also enter competitions, find out about news and events, seek expert advice for parents and let your kids play fun learning games and activities.



PRODUCT WARRANTY

Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor). Please include details of the fault together with your name and address.
9. To keep an online record of your warranty, please register your product online at www.vtech.co.uk/warranty

Vtech Electronics EU PLC, c/o XPO Logistics, Warehouse 350, Cat & Fiddle Lane, West Hallam, DE7 6HE

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.

