


vtech[®]

Instruction Manual

SWITCH & GO[®]
DiNOS 

Viper the Velociraptor

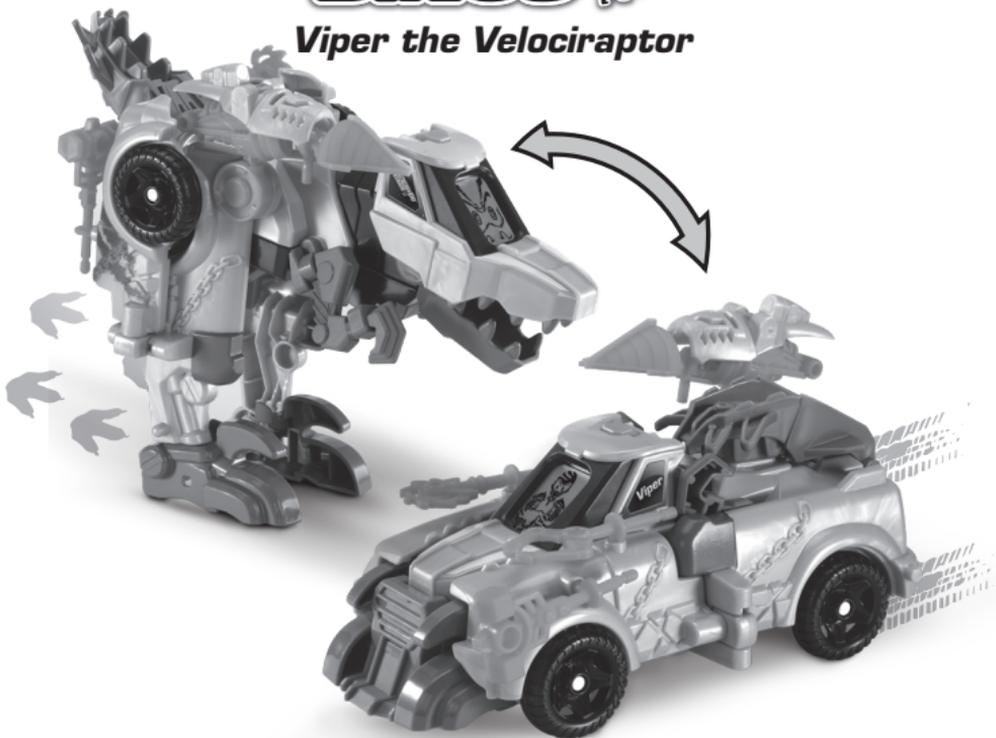

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Switch into fun with **Switch & Go Dinos® Viper the Velociraptor!** Switch this wild Velociraptor into a tough car and back again in just a few simple steps! Launch a projectile from Viper at the press of a button! It's hunting time! Here we go!


Off / Low Volume / High
Volume Switch

Launch Button

Action Button

Sounds Button

LCD Screen

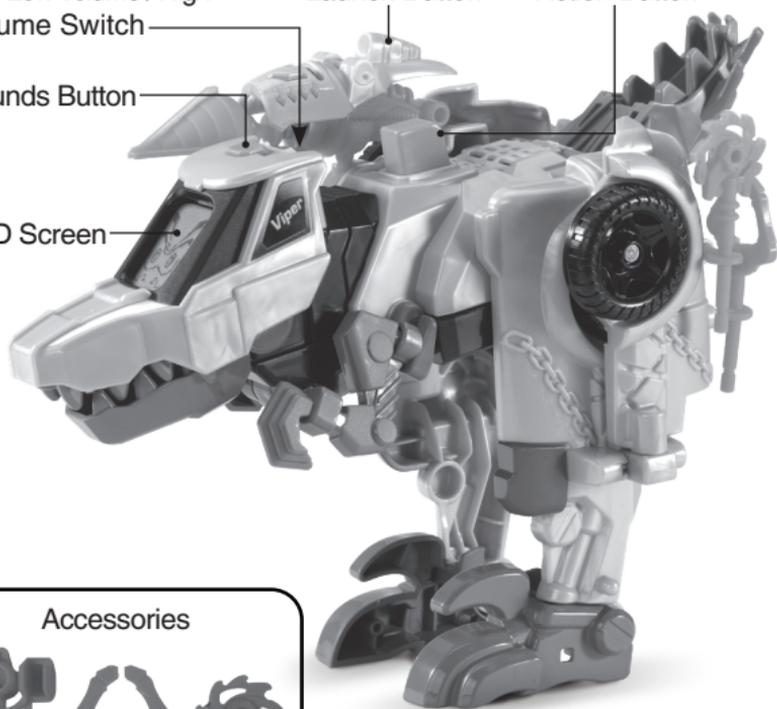

Accessories



INCLUDED IN THIS PACKAGE

- One **Switch & Go Dinos® Viper the Velociraptor**
- Three Projectiles
- One Quick Start Guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE:

Please save this Instruction Manual it contains important information.


WARNING: Do not aim at eyes and face.

WARNING: Do not discharge any object other than the projectile provided with this toy.

INSTRUCTIONS

BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 2 new AAA batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

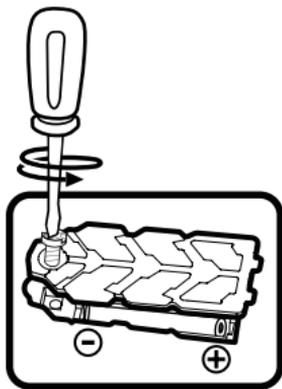

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

VTech® cares for the planet.

Care for the environment and give your toy a second life by disposing of it at a small electricals collection point so all its materials can be recycled.

In the UK:

Visit www.recyclenow.com to see a list of collection points near you.

In Australia & New Zealand:

Check with your local council for kerbside collections.

PRODUCT FEATURES

1. Off / Low Volume / High Volume Switch

To turn the unit **On**, or to adjust the volume, slide the switch to the **Low** () or **High** () **Volume** position. To turn the unit **Off**, slide the switch to the **Off** () position.



2. Sounds Button

Press the **Sounds Button** to hear fun phrases and wild dino sounds with light effects in dino mode, or to hear fun phrases and cool vehicle sounds in vehicle mode.




3. Action Button

Press the **Action Button** to trigger light effects with head and arm movement.



4. Launch Button

Press the **Launch Button** to launch a projectile.

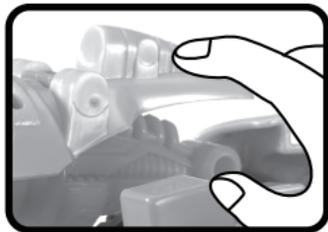

5. LCD Screen

The **LCD Screen** shows dino eye animations in Dino mode and shows driver animations in Vehicle mode.




6. Automatic Shut-Off


To preserve battery life, **Viper the Velociraptor** will automatically turn off after approximately 20 seconds without input. **Viper the Velociraptor** can be woken up again by pressing the **Sounds Button** or **Action Button**, or by switching between dino and vehicle modes. **Viper the Velociraptor** will also automatically turn off when battery power is very low.

NOTE: If the unit powers down or if the light fades out during play, please install a new set of batteries.


SWITCHING FROM DINO TO VEHICLE

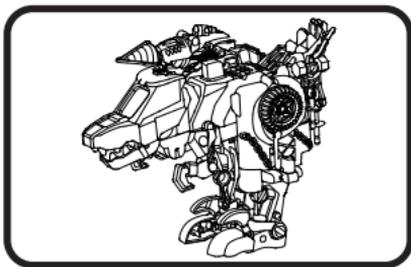


1. Dino Mode.

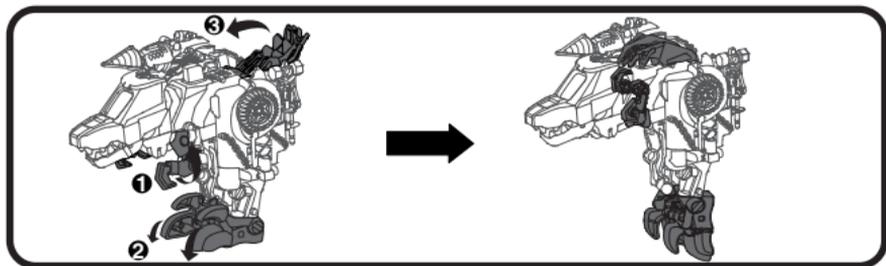


2. First, flip up the Dino's arms, then flip down the Dino's feet, and then flip down the Dino's tail.

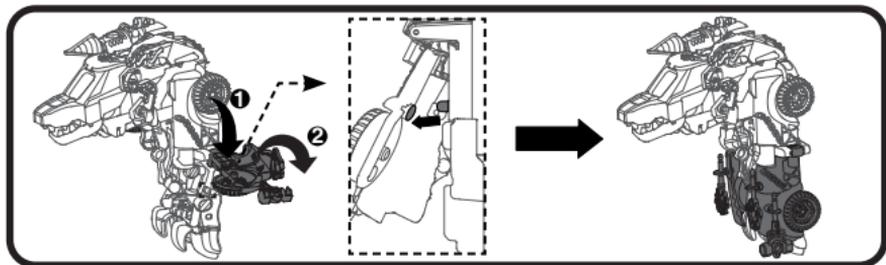

3. Fold out the front wheels and then rotate them 180° before folding them down into the Dino's feet.

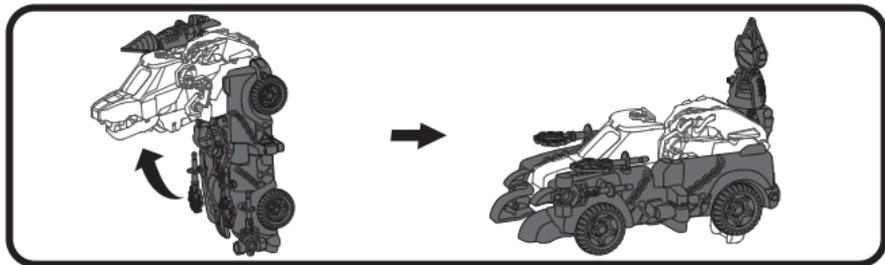

4. Rotate the legs towards the Dino's head.

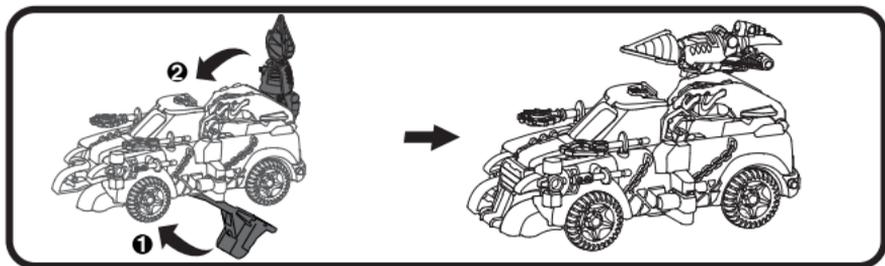

5. Flip the front bumper up towards the Dino's head and rotate the projectile 90° so it is forward facing. Viper is now in Vehicle mode.

Note: To switch from Vehicle mode to Dino mode, follow the above steps in reverse order.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.

CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au

