

Disney
Junior
MICKEY MOUSE
FUNHOUSE



 
Instruction Manual

Mickey Mouse Funhouse Explore & Learn Book



INTRODUCTION

Thank you for purchasing the Disney Mickey Mouse Funhouse Explore & Learn Book! This book has 14 interactive pages and four learning modes. Your child can learn the names of objects, listen to music and be a part of the stories by exploring each page with Mickey Mouse and his friends.

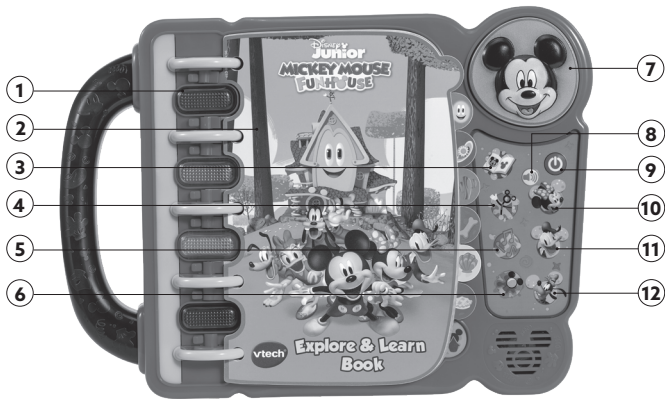

- | | |
|-------------------------|------------------------|
| 1 Light-Up Buttons | 7 Mickey Mouse Button |
| 2 Book Pages | 8 Volume Button |
| 3 Story Mode Button | 9 On/Off Button |
| 4 Explore Mode Button | 10 Minnie Mouse Button |
| 5 Music Mode Button | 11 Donald Duck Button |
| 6 Searching Mode Button | 12 Goofy Button |

INCLUDED IN THE PACKAGE

- Disney Mickey Mouse Funhouse Explore & Learn Book
- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

 
ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE

Il est conseillé de sauvegarder ce manuel d'utilisation car il comporte des informations importantes.

Unlock the Packaging Locks

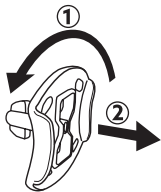


- ① Rotate the packaging locks 90 degrees counterclockwise.
- ② Pull out the packaging locks and discard.

INSTRUCTIONS

Battery Removal and Installation

 1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw, and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 3 new AA (LR6/AM-3) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

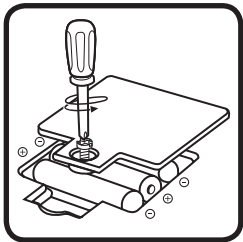

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.



ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.
Tenir les piles ou accumulateurs hors de portée des enfants.

IMPORTANT: BATTERY INFORMATION

- **Insert batteries with the correct polarity (+ and -).**
- **Do not mix old and new batteries.**
- **Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.**
- **Only batteries of the same or equivalent type as recommended are to be used.**
- **Do not short-circuit the supply terminals.**
- **Remove batteries during long periods of non-use.**
- **Remove exhausted batteries from the toy.**
- **Dispose of batteries safely. Do not dispose of batteries in fire.**

RECHARGEABLE BATTERIES

- **Remove rechargeable batteries (if removable) from the toy before charging.**
- **Rechargeable batteries are only to be charged under adult supervision.**
- **Do not charge non-rechargeable batteries.**

IMPORTANT : INFORMATIONS CONCERNANT LES PILES

Les piles fournies avec le produit permettent de tester le jouet en magasin mais ne sont pas des piles longue durée.


- Mettre en place les piles ou les accumulateurs en respectant les polarités + et -.
- Ne pas mélanger des piles ou des accumulateurs neufs avec des usagés.
- Ne pas mélanger différents types de piles : alcalines, zinc-carbone et rechargeables.
- Seules des piles du type recommandé doivent être utilisées.
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le -).
- Retirer les piles ou les accumulateurs en cas de non-utilisation prolongée.
- Enlever les piles ou les accumulateurs usagés du jouet.
- Ne les jeter ni au feu ni dans la nature.

 
PILES RECHARGEABLES

- Enlever, lorsque c'est possible, les accumulateurs du jouet pour les recharger.
- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.
- Ne pas tenter de recharger des piles non rechargeables.

PRODUCT FEATURES


1. On/Off Button

Press the **On/Off Button**  to turn the unit **On**. To turn the unit **Off**, press the **On/Off Button** again.

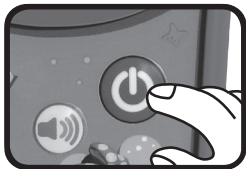


2. Volume Button

 Press **Volume Button**  to adjust volume level.

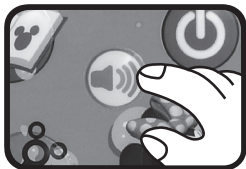

3. Story Mode Button

 Press the **Story Mode Button** to listen to Mickey Mouse tell you stories about the funhouse.

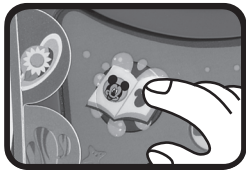


4. Explore Mode Button

Press the **Explore Mode Button** to explore the names of objects at locations in the stories.




5. Music Mode Button

 Press the **Music Mode Button** to listen to music with Mickey Mouse.

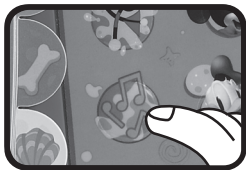


6. Searching Mode Button

 Press the **Searching Mode Button** to play a finding game with Mickey Mouse.

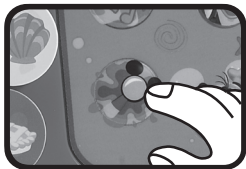

7. Character Buttons

 Press the **Mickey Mouse, Minnie Mouse, Donald Duck and Goofy Buttons** to hear Mickey Mouse talk about himself and his friends.

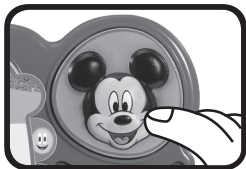


8. Light-Up Buttons

Press the **Light-Up Buttons** to answer questions, add sounds and hear Mickey Mouse read the stories. The lights flash with the sounds and music.



9. Book Pages

 Turn to any page to hear and play different stories, melodies and games.

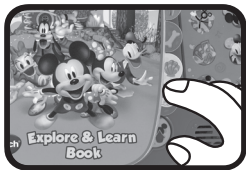

10. Automatic Shut-Off

To preserve battery life, the unit will automatically power off after several seconds without input. The unit can be turned on again by pressing the **On/Off Button**.

Note: The unit will also automatically turn off when the batteries are very low. If the unit powers down while playing, we suggest changing the batteries.

ACTIVITIES

1. Story Mode



Join Mickey Mouse and his friends' magical adventure in the funhouse. Open the book and press the **Light-Up Buttons** to listen to Mickey Mouse read each page of the illustrated book.

2. Explore Mode



Let's learn and explore vocabulary. Open the book and press the **Light-Up Buttons** to learn about the names of objects at locations in the stories.

3. Music Mode



Listen to music and sound effects. Turn to any page and press the **Light-Up Buttons** to hear melodies and get creative by adding sound effects to the melodies.

4. Searching Mode



Let's help Mickey Mouse put the words he's looking for on each page in the correct order. Open the book and press the **Light-Up Buttons** to arrange the words in the correct order.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

IMPORTANT NOTE

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S., **1-877-352-8697** in Canada, or visit our website **vtechkids.com** and fill out our **Contact Us** form located under the **Customer Support** link. Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Supplier's Declaration of Conformity
47 CFR § 2.1077 Compliance Information

Trade Name: VTech®
Model: 5540
Product Name: Disney Mickey Mouse Funhouse Explore & Learn Book
Responsible Party: VTech Electronics North America, L.L.C.
Address: 1156 W. Shure Drive, Suite 200
Arlington Heights, IL 60004
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.
CAN ICES-003(B)/NMB-003(B)

CONSUMER SERVICES

Creating and developing VTech® products is accompanied by a responsibility that we at VTech® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED - CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

vtechkids.com
vtechkids.ca

Read our complete warranty policy online at
vtechkids.com/warranty
vtechkids.ca/warranty



TM & © 2022 VTech Holdings Limited.
All rights reserved.
IM-554000-000
Version:2