



Quick Start Guide



KARAOKE LIGHTS Mic

By reducing the quantity of paper used for our Manuals, we aim to reduce our environmental impact and contribute to the preservation of the environment. The full version of the Instruction Manual is available online through the following links or by scanning the QR code.



For UK
vtech.co.uk/manuals



For AUS/NZ
vtech.com.au/support/product_manuals

© 2026 Vtech. All rights reserved. Printed in China.

91-004849-000 (UK/AUS)



INCLUDED IN THE PACKAGE

- **VTech® Karaoke Lights Mic**
- Quick Start Guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this product and should be discarded for your child's safety.

NOTE:

Please keep this Quick Start Guide as it contains important information.

Pixel Lights Protective Film


Remove the transparent protective film from the front of the **Karaoke Lights Mic** before use.



INSTRUCTIONS

Exit Try-Me Mode:

The microphone is in **Try-Me Mode** in the packaging. To exit **Try-Me Mode**, turn **ON** the unit. Then press the **Exit Try-Me Button** (located at the back of unit). Use a paper clip to press and hold the button for 1 second to exit **Try-Me Mode**. The indicator light will flash for a while, then the unit will turn **ON** automatically once it has entered **Normal Mode**.

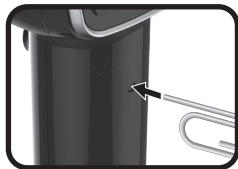




WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned OFF.
2. Locate the battery cover on the side of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 4 new 1.5V AA (LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

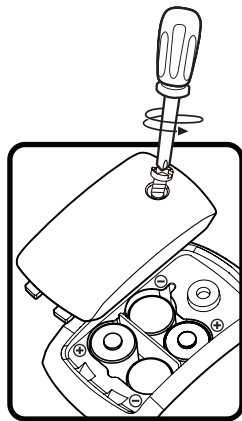

Note: If the unit repeatedly powers down or shows low battery on the pixel lights while playing, please insert new batteries and try powering it on again.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.



- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the product.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.



Please dispose of your product and batteries responsibly.

In the UK, give this product a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

www.vtech.co.uk/recycle

www.vtech.com.au/sustainability

* Visit www.recyclenow.com to see a list of collection points near you.



Bluetooth® Connection

1. Press the **Bluetooth® Button**  then the Indicator light will turn blue and flash.
2. Open your device's **Bluetooth®** settings and search for devices.
3. Select “**VTech 5909 Microphone**” when you see it displayed on your device.
4. A 6-digit PIN number will display on the front of the **Karaoke Lights Mic**.
5. Enter the PIN number on your device.
6. When connected successfully, the **Karaoke Lights Mic** will play “**Bluetooth®** connected”.
7. While in **Bluetooth®** mode, the Indicator light will remain blue and on.
8. To exit **Bluetooth®** mode, press the **Bluetooth® Button**  again.
9. The microphone will automatically reconnect to the last **Bluetooth®** device it was paired with. You don't need to repeat this process next time.





CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play with again.
5. If the unit still does not work, install a brand new set of batteries.

If there is a **Bluetooth®** connection problem, please follow these steps:

1. Delete “**VTech 5909 Microphone**” from your device’s list of paired **Bluetooth®** devices.
2. If applicable, select to forget the pair code of the Microphone.
3. Reconnect the microphone to your device by selecting “**VTech 5909 Microphone**” from the list of available **Bluetooth®** devices on your device.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.



Bluetooth® STATEMENT

The **Bluetooth®** word mark and logos are registered trademarks owned by the **Bluetooth®** SIG, Inc. and any use of such marks by **VTech®** is under license. Other trademarks and trade names are those of their respective owners.

RF Warning Statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

DECLARATION OF CONFORMITY

Hereby, VTech Electronics Europe BV declares that the radio equipment type 5909 is in compliance with Directive 2014/53/EU. The full text of the EU Declaration of Conformity is available at the following internet address:

www.vtech.com/re-directive

Frequency Band: 2402MHz – 2480MHz

Maximum RF power: 0.003W (4.77dBm)

DECLARATION OF CONFORMITY

Hereby, VTech Electronics Europe Plc declares that the radio equipment type 5909 is in compliance with The Radio Equipment Regulations 2017 (2017 No.1206). The full text of the Declaration of Conformity is available at the following internet address:

www.vtech.com/re-directive

Frequency Band: 2402MHz – 2480MHz

Maximum RF power: 0.003W (4.77dBm)



PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

Contact VTech

Tel: 0330 678 0149 (from UK)
+44 330 678 0149 (outside UK)
1800 862 155 (Aus) / 0800 400 785 (NZ)
www.vtech.co.uk
www.vtech.com.au