

vtech®

Instruction Manual

KidiMagic® Sparkle



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

 
4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

With **KidiMagic® Sparkle** by **VTech®**, enter a world of surprises and fun! Who will be your magical BF? Shake the heart to find out! Take your BF on a fun flying adventure. Test your friendship or get your fortune for the day! With **KidiMagic® Sparkle**, make the fun glow!

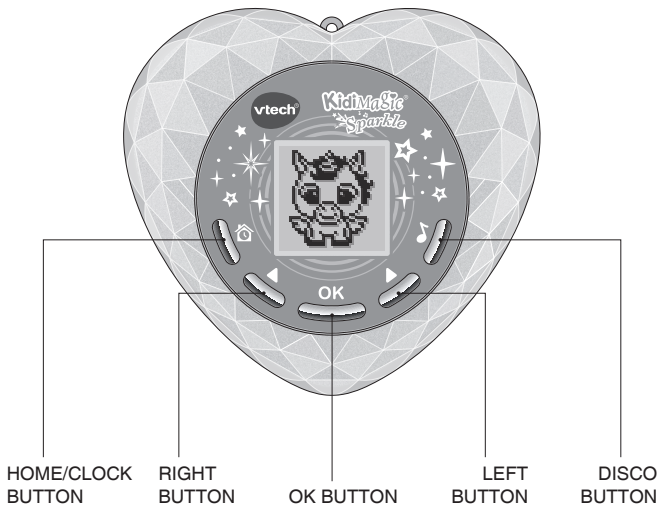


INCLUDED IN THIS PACKAGE

- KidiMagic® Sparkle
- Instruction Manual

WARNING: All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE: Please keep this Instruction Manual as it contains important information.

 Unlock the Packaging Locks

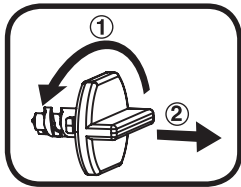

① Turn the packaging lock anticlockwise several times.

 
② Pull out and discard the packaging lock.

GETTING STARTED

KidiMagic® Sparkle is in try-me mode in the packaging. To exit try-me mode, press and hold the **Left Button**, **Right Button** and **Home Button** at the same time for a few seconds. You will enter the time setting page when try-me mode is unlocked. Press the **Left** or **Right Button** to select the time, press the **OK Button** to confirm. Shake **KidiMagic® Sparkle** to find an egg, keep shaking to hatch your very own BF!

BATTERY INSTALLATION

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the bottom of the unit and use a screwdriver to loosen the screw, then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 3 new AAA (LR03/AM-4) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

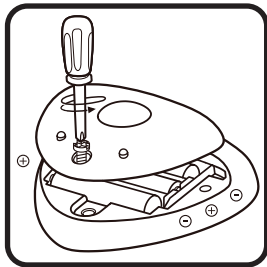

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

VTech® cares for the planet.

Care for the environment and give your toy a second life by disposing of it at a small electricals collection point so all its materials can be recycled.

In the UK:

Visit www.recyclenow.com to see a list of collection points near you.

In Australia & New Zealand:

Check with your local council for kerbside collections.

PRODUCT FEATURES

1. HOME/CLOCK BUTTON

Press the **Home/Clock Button** to return to the Home screen from any function or activity.

Press the **Home/Clock Button** when on the Home screen to display the clock.



2. OK BUTTON

Press the **OK Button** to confirm or move to another option.

Change the light colour when you press the **OK Button** in Home screen.









3. LEFT/RIGHT BUTTON

Press the **Left or Right Buttons** to scroll through the menu options on the Home screen and select an activity or setting.




There are six activities and settings to choose from:

1. Fortune Teller 	2. Sparkling Fly 	3. Creature BF 
4. Power Check 	5. Time Tools 	6. Settings 

4. DISCO BUTTON

 Press the **Disco Button** to hear fun music and to see the sparkling light pattern.

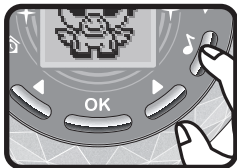

5. MOTION SENSOR

Shake the **KidiMagic® Sparkle** to interact with your BF and to play games!

6. SPARKLE LIGHTS

The colourful lights will flash or fade slowly in and out with the sounds and melodies.

7. ON THE GO

The **KidiMagic® Sparkle** is great for on the go play so you can take your BF with you everywhere!

8. AUTOMATIC SHUT-OFF

To preserve battery life, the **KidiMagic® Sparkle** will automatically power down after several seconds without input. The **KidiMagic® Sparkle** can be turned on again by pressing any button.

Note: If the **KidiMagic® Sparkle** repeatedly powers down while playing, please insert new batteries and try switching it on again.

ACTIVITIES



1. Fancy Adventure

Find an egg to hatch your new BF. When you hear the magic sound and see flashing lights on the Home screen an egg or some treasure has been found! Shake **KidiMagic® Sparkle** to see what is under the leaves.



1.1 Find an egg in the Fancy Adventure Game:

Keep shaking **KidiMagic® Sparkle** to hatch an egg. The baby BF will hatch and play with you. The more games you play the more gems you get. When you have collected 50 gems your BF will evolve into one of the below characters.



When you find an egg after your BF has evolved you can grow a new BF or keep your current one. You have to collect 50 new gems to evolve a new BF.



1.2 Find some treasure in the Fancy Adventure Game:

To unlock new clock faces you need to find the treasure. There are a total of 6 clock faces.

2. Fortune Teller



Shake **KidiMagic® Sparkle** and it will tell your fortune.

3. Sparkling Fly



Have a sparkling flight with your magical BF. Keep pressing the **OK Button** to keep your magical BF flying and to avoid the obstacles.

4. Creature BF



Guess what friendship symbols your BF has chosen to see how well you know your BF. Select “One player” to play with your BF. You can also play with your friends by choosing “Two players”. You and your friend can then choose a symbol each and see how well you know each other.

One player



Two players



5. Party Time



Start a party with your BF! Press the **Disco Button** to enter Party Time Mode. Select a melody by pressing the **Left** or **Right Button**. Shake your **KidiMagic® Sparkle** to hear fun sounds over the top of the melodies.

6. Power Check



Check how many power gems you have! Once you have collected 50 gems you will find out what BF you have grown!

7. TIME TOOLS



7.1 Clock

- Press the **Home/Clock Button** to enter Clock mode.



7.2 Stopwatch

- Press the **OK Button** to start the **Stopwatch**, press again to stop it.
- When the stopwatch is stopped, you can press the **Left** or **Right Buttons** to reset it.



7.3 Timer

- Press the **Left** or **Right Buttons** to change the time.
- Press the **OK Button** to confirm.
- When you press the **OK Button** to confirm the timer duration, the countdown will start immediately.
- While the timer is running, you can press the **OK Button** to pause/resume it.



7.4 Alarm

- Press the **Left** or **Right Buttons** to change the alarm setting.
- Press the **OK Button** to confirm and move to the next setting and automatically save the current setting.

8. SETTINGS

8.1 Time



- Press the **Left** or **Right Buttons** to change the time settings. (The am/pm setting is only applicable in the 12-hour time format).
- Press the **OK Button** to confirm.
- Press the **Clock/Home Button** to automatically save the current settings.

8.2 Clock Style

- Find the treasure to unlock 6 clock styles.



8.3 Light

- Press the **Left** or **Right Buttons** to change the light level  and to turn the back light on or off .

8.4 Volume

- Press the **Left** or **Right Buttons** to change the volume.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play with again.
5. If the product still does not work, install a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.

CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au

