

vtech®

Parent's Guide

# Safari Sounds Karaoke



91-003697-004 (UK)

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

### **vtech** Baby

**Toys that will stimulate their interest in different textures, sounds and colours**

#### I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

### **Pre-School**

**Interactive toys to develop their imagination and encourage language development**

#### I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

### **Electronic Learning Computers**

**Cool, aspirational and inspiring computers for curriculum related learning**

#### I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

Birth-36 months

3-6 years


4-10 years



To learn more about this and other VTech® products, visit [www.vtech.co.uk](http://www.vtech.co.uk)

# INTRODUCTION

Thank you for purchasing the **Safari Sounds Karaoke**. Grab the mic and sing along to 30 child-friendly songs and melodies. Cool voice-changing effects, awesome animations and colourful lights add excitement to every performance.

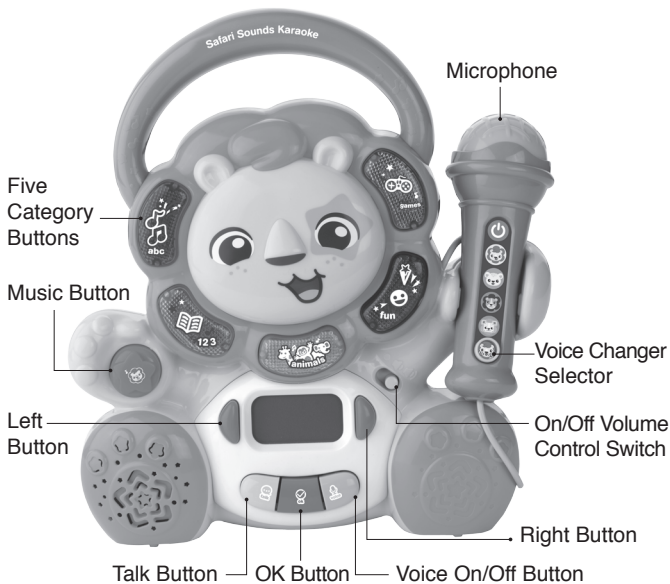

## INCLUDED IN THIS PACKAGE

- One **Safari Sounds Karaoke**
- One Parent's Guide

### WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.


### NOTE:

Please keep this Parent's Guide as it contains important information.

### Demo strip removal:

When the product is taken out of the packaging, please remove the demo strip from the unit to activate normal play mode.

### Unlock the packaging locks:

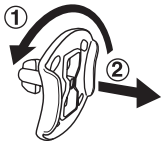


- ① Rotate the packaging lock anticlockwise for 90 degrees.
- ② Pull out the packaging lock and discard.

## GETTING STARTED

### BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the unit.
3. Install 3 new AA (LR6/AM-3) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance).
4. Replace the battery cover.

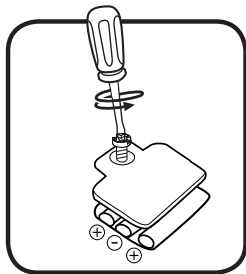



## BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.



### Disposal of batteries and product




The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

 Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

[www.recycle-more.co.uk](http://www.recycle-more.co.uk)

[www.recyclenow.com](http://www.recyclenow.com)

# PRODUCT FEATURES

## 1. On/Off/Volume Control Switch

Move the On/Off/Volume Control Switch to Low or High volume position to switch the unit on. To turn the unit **Off**, slide the **On/Off/Volume Control Switch** to the **Off** position.



## 2. Category Buttons

Press one of the five **Category Buttons** to enter the menu.

**abc**: Contains five alphabet songs.

**123**: Contains five number songs.

**Animals**: Contains five animal songs.

**Fun**: Contains five fun songs.

**Games**: Contains five games.



## 3. Left/Right Buttons and OK Button

In a menu, press the **Left/Right Buttons** to select a song or game. Then, press the **OK Button** to play.



## 4. Talk Button

Press the **Talk Button** to put on a freestyle show. Sing or talk into the **Microphone** any way you'd like!



## 5. Voice On/Off Button

Press the **Voice On/Off Button** when a song is playing to drop the voice track of the song so you can sing into the **Microphone**. Press it again to turn the voice back on.





## 6. Music Button

Press the **Music Button** to listen to melodies. Press again to switch to another melody.



## 7. Voice Changer Selector

Move the **Voice Changer Selector** to switch on the **Microphone** and choose a voice changer effect.



## 8. Automatic Shut Off

To preserve battery life, the **Safari Sounds Karaoke** will automatically turn off after several minutes without input. The unit can be turned on again by pressing any button.

# ACTIVITIES

## Game Time

Press the **Games Category Button** to enter the game menu. Press the **Left/Right Buttons** to choose one of five fun games that use the **Microphone** to play. Press the **OK Button** to start playing.

### 1. Roaring Concert

Blow into the **Microphone** to make the lion sing with roars.

### 2. Bubble Time

Blow into the **Microphone** as long as you can to see how many bubbles can fill the screen.

### 3. Who's There?

Blow into the **Microphone** to reveal the animals hiding behind the bushes.

### 4. It's Picture Time!

When the lion counts down to one, blow into the **Microphone** to keep the lion's mane out of his face for the picture.



## 5. Music Catcher

Blow into the **Microphone** to make the lion jump to collect the music notes.

# LETTER SONGS

## 1. Alphabet Song

A-B-C-D-E-F-G

H-I-J-K-L-M-N-O-P

Q-R-S-T-U-V

W-X-Y and Z.

Now I know my A-B-Cs,

Next time won't you sing with me?

## 2. Bingo

There was a farmer who had a dog,

And Bingo was his name – O!

B-I-N-G-O,

B-I-N-G-O,

B-I-N-G-O,

And Bingo was his name-O!

## 3. Phonics Song

A says Aa and B says Buh

C says Kuh, D says Duh

E says Eh and F says Fff

G says Guh, H says Huh and I says Ih,

J says Juh, K says Kuh

L says Lll and M says Mmm

N says Nnn,

O says Ah and P says Puh

Q says Kwuh, R says Rrr

S says Sss and T says Tuh





U says uh,  
V says Vuh and W says Wuh  
X says Ks and Y says Yuh,  
Z says Zzz

#### **4. Go Lion**

Lion begins with L,  
Next comes I-O-N.  
All together let's spell L-I-O-N!  
Lion begins with L,  
Next comes I-O-N.  
All together let's spell L-I-O-N!

#### **5. A, B, C, Tumble Down D**

ABC, tumble down D,  
The lion is hiding quietly.  
ABC, tumble down D,  
The lion is hiding quietly.

## **NUMBER SONGS**

### **1. This Old Man**

This old man, he played one  
He played knick-knack on my thumb  
With a knick-knack paddywhack, give a dog a bone  
This old man came rolling home.  
This old man, he played two  
He played knick-knack on my shoe  
With a knick-knack paddywhack, give a dog a bone  
This old man came rolling home.

### **2. One, Two Buckle My Shoe**

One, two, buckle my shoe.  
Three, four, knock at the door.



Five, six, pick up sticks.  
Seven, eight, lay them straight.  
Nine, ten, a big fat hen!  
One, two, buckle my shoe.  
Three, four, knock at the door.  
Five, six, pick up sticks.  
Seven, eight, lay them straight.  
Nine, ten, a big fat hen!

### **3. Three Little Kittens**

Three little kittens they lost their mittens,  
And they began to cry,  
Oh, mother dear, we sadly fear  
Our mittens we have lost.  
What! Lost your mittens, you naughty kittens!  
Then you shall have no pie.  
Mee-ow, mee-ow, mee-ow.  
No, you shall have no pie.

### **4. Ten Little Lions**

1 little, 2 little, 3 little lions,  
4 little, 5 little, 6 little lions,  
7 little, 8 little, 9 little lions,  
10 little lions roar!  
1 little, 2 little, 3 little lions,  
4 little, 5 little, 6 little lions,  
7 little, 8 little, 9 little lions,  
10 little lions roar!

### **5. Hickory, Dickory, Dock**

Hickory, dickory, dock  
The lion ran up the clock  
The clock struck one,  
The lion ran down,



Hickory, dickory, dock.  
Hickory, dickory, dock  
The lion ran up the clock  
The clock struck two,  
The lion ran down,  
Hickory, dickory, dock.

## ANIMAL SONGS

### 1. **Incy Wincy Spider**

The incy wincy spider climbed up the waterspout.  
Down came the rain  
and washed the spider out.  
Out came the sun  
and dried up all the rain  
and the incy wincy spider climbed up the spout again.

### 2. **Mary Had a Little Lamb**

Mary had a little lamb, little lamb,  
little lamb, Mary had a little lamb  
whose fleece was white as snow.

### 3. **Old MacDonald Had a Farm**

Old MacDonald had a farm  
E-I-E-I-O.  
And on his farm he had a cow  
E-I-E-I-O.  
With a moo-moo here  
And a moo-moo there  
Here a moo, there a moo  
Everywhere a moo-moo.  
Old MacDonald had a farm  
E-I-E-I-O.



#### **4. Where Has my Little Dog Gone?**

Oh where, oh where has my little dog gone?

Oh where, oh where can he be?

With his ears cut short and his tail cut long.

Oh where, oh where can he be?

#### **5. Hey Diddle, Diddle**

Hey diddle diddle,

The cat and the fiddle,

The cow jumped over the moon,

The little dog laughed to see such sport,

And the dish ran away with the spoon.

Hey diddle diddle,

The cat and the fiddle,

The cow jumped over the moon,

The little dog laughed to see such sport,

And the dish ran away with the spoon.

## **FUN SONGS**

#### **1. Here We Go Round the Mulberry Bush**

Here we go round the mulberry bush,

The mulberry bush,

The mulberry bush.

Here we go round the mulberry bush,

So early in the morning.

This is the way we wash our clothes,

Wash our clothes,

Wash our clothes.

This is the way we wash our clothes,

So early in the morning.



## 2. A-ticket, A-Tasket

A-ticket a-tasket,  
A green-and-yellow basket,  
I wrote a letter to my love,  
On the way I dropped it.  
I dropped it, I dropped it,  
Yes, on the way I dropped it,  
A little boy picked it up,  
And put it in his pocket.

## 3. Row, Row, Row Your Boat

Row, row, row your boat,  
Gently down the stream.  
Merrily, merrily, merrily, merrily,  
Life is but a dream.  
Row, row, row your boat,  
Gently down the stream.  
Merrily, merrily, merrily, merrily,  
Life is but a dream.

## 4. Skip to my Lou

Skip, skip, skip to my Lou,  
Skip, skip, skip to my Lou,  
Skip, skip, skip to my Lou,  
Skip to my Lou, my darlin,  
Skip, skip, skip to my Lou,  
Skip, skip, skip to my Lou,  
Skip, skip, skip to my Lou,  
Skip to my Lou, my darlin.

## 5. Won't you sing sing

Won't you sing sing sing a song with me?  
Sing it high, sing it low, sing it merrily.  
Won't you sing sing sing a song with me?  
Sing it loud, sing it soft, sing it merrily.





## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

## TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.



CLASS 1  
LED PRODUCT



## CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

### **UK Customers:**

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: [www.vtech.co.uk/support](http://www.vtech.co.uk/support)

### **Australian Customers:**

Phone: 1800 862 155

Website: [support.vtech.com.au](http://support.vtech.com.au)



### **NZ Customers:**

Phone: 0800 400 785

Website: [support.vtech.com.au](http://support.vtech.com.au)

## Product Warranty/ Consumer Guarantees



### **UK Customers:**

Read our complete warranty policy online at [vtech.co.uk/warranty](http://vtech.co.uk/warranty).

### **Australian Customers:**

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –  
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to [vtech.com.au/consumerguarantees](http://vtech.com.au/consumerguarantees) for further information.



**Visit our website for more  
information about our products,  
downloads, resources and more.**

***www.vtech.co.uk***  
***www.vtech.com.au***



TM & © 2019 Vtech Holdings Limited.  
All rights reserved.  
**Printed in China.**  
91-003697-004 

