

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Bally

stimulate their interest

in different textures, sounds and colours

...responding to colours,

... understanding cause

...learning to touch, reach,

Birth-36 months

grasp, sit-up, crawl and

sounds and textures

Toys that will

lam...

and effect

toddle



Interactive toys to develop their imagination and encourage language development

l want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning


...National Curriculum based content to support what I'm learning at school

4-10 years



INTRODUCTION

Time for some roaring fun with **Switch & Go Dinos® Burnout the Velociraptor**! This wild Switch & Go Dino is an exciting 2-in-1 toy which switches between a tough Velociraptor and a cool Motorbike! Push the Seat Pad to trigger automatic switching from a Motorbike to a Velociraptor! Press the Sounds Button to hear fun phrases and cool sound effects! Let's Switch & Go!

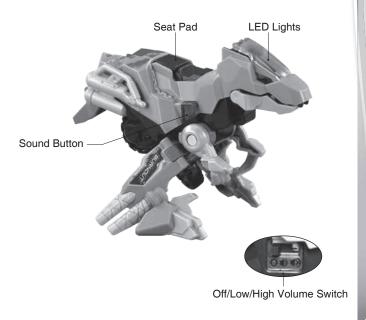

INCLUDED IN THE PACKAGE

- Switch & Go Dinos[®] Burnout the Velociraptor
- Quick Start Guide
- WARNING: All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.
- **NOTE:** Please keep this instruction manual as it contains important information.

GETTING STARTED

BATTERY REMOVAL AND INSTALLATION

- 1. Make sure the unit is turned OFF.
- Locate the battery cover on the roof of the unit. Use a screwdriver to loosen the screw. Then, remove the cover.
- If a used battery is present, remove this battery from the unit by pulling up on one end of the battery.
- Install 1 new AAA (LR03/AM-4) battery following the diagram inside the battery box. (The use of new alkaline battery is recommended for maximum performance).



5. Replace the battery cover and tighten the screw to secure.

WARNING:

Adult assembly required for battery installation. Keep batteries out of reach of children.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheelie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

VTech® cares for the planet.

Care for the environment and give your toy a second life by disposing of it at a small electricals collection point so all its materials can be recycled.

In the UK:

Visit www.recyclenow.com to see a list of collection points near you.

In Australia & New Zealand:

Check with your local council for kerbside collections.

PRODUCT FEATURES

1. Off/Low/High Volume Switch

To turn the unit **On**, or to adjust the volume, slide the switch to the **Low** () or **High Volume** () position. To turn the unit **Off**, slide the switch to the **Off** () position.

2. Sound Button

Press the **Sound Button** to hear fun phrases and cool dinosaur sounds in Dino mode. In Vehicle mode, press the **Sound Button** to hear fun phrases and great vehicle sounds.

3. Seat Pad

Push the **Seat Pad** to trigger automatic switching from Vehicle to Dino.

4. LED Lights

The **LED Lights** will flash along with the sounds in Dino mode and Vehicle mode.

5. Automatic shut-off

 
To preserve battery life, the unit will automatically shut off after approximately 20 seconds without input. The unit can be woken up again by pressing the **Sounds Button**, or by switching between Dino and Vehicle modes. The unit will also automatically turn off when battery power is very low.









HOW TO SWITCH



 
1. Dino mode.



 
3. Push the feet inwards together, then turn the feet up.



 2. Push the tail into the body.



 4. The unit is now in Vehicle mode.



5. Push the Seat Pad to trigger automatic switching from Vehicle to Dino.

CARE & MAINTENANCE

- 1. Keep the unit clean by wiping it with a slightly damp cloth.
- 2. Keep the unit out of direct sunlight and away from any direct heat sources.
- 3. Remove the batteries if the unit will not be in use for an extended period of time.
- Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

- 1. Turn the unit Off.
- 2. Interrupt the power supply by removing the batteries.
- 3. Let the unit stand for a few minutes, then replace the batteries.
- 4. Turn the unit back **On**. The unit should now be ready to use again.
- 5. If the unit still does not work, insert a new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.

CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK) Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155 Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785 Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED – CONSUMER GUARANTEES Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/ consumerguarantees for further information.

Visit our website for more information about our products, downloads, resources and more.

www.vtech.co.uk www.vtech.com.au



TM & © 2021 VTech Holdings Limited. All rights reserved. IM-531500-001 Version: 0