

**vtech**<sup>®</sup>  
baby

# Instruction Manual

## Rattle & Shake Birdie



**VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...**

## **vtech** Baby

**Toys that will stimulate their interest in different textures, sounds and colours**

### **I am...**

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

*Birth-36 months*



## **Pre-School**

**Interactive toys to develop their imagination and encourage language development**

### **I want...**

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

*3-6 years*



## **Electronic Learning Computers**

**Cool, aspirational and inspiring computers for curriculum related learning**

### **I need...**

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

 
*4-10 years*



To learn more about this and other VTech® products, visit [www.vtech.co.uk](http://www.vtech.co.uk)

# INTRODUCTION

Learn and sing with the **Rattle & Shake Birdie** by **VTech®**! This friendly and colourful birdie has multicoloured, textured fabrics that provide tactile and audio stimulation for baby. 2 light up buttons introduce fun phrases and up beat sing-along songs. Wave the birdie to activate the motion sensor to hear fun sound effects. When the electronic module is removed, the birdie is machine washable.

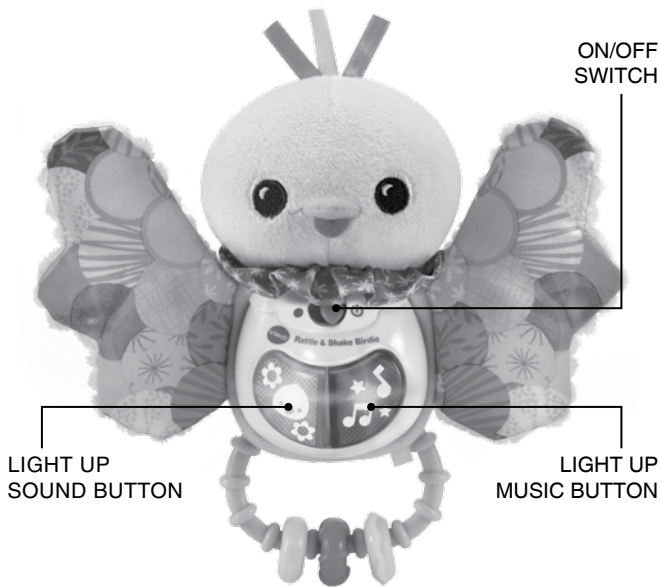

# INCLUDED IN THIS PACKAGE

- Rattle & Shake Birdie
- Quick Start Guide

## NOTE

Please save this Instruction Manual as it contains important information.

## WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

 
## WASHING INSTRUCTIONS

Machine washable when electronic module is removed.

# GETTING STARTED

## Battery Removal and Installation

1. Make sure the unit is turned **OFF**.
2. Find the battery cover located on the back of the birdie. Use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 1 new AAA batteries following the diagram inside the battery box. (The use of new, alkaline batteries is recommended for maximum performance).
5. Replace the battery cover and tighten the screw to secure.

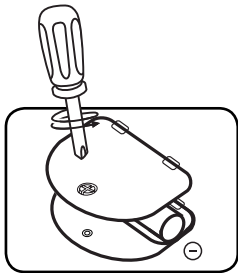

## **WARNING:**

Adult assembly required for battery installation.

Keep batteries out of reach of children.

## **IMPORTANT: BATTERY INFORMATION**

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

## **RECHARGEABLE BATTERIES:**

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

## **Disposal of batteries and product**



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

VTech® cares for the planet.

Care for the environment and give your toy a second life by disposing of it at a small electricals collection point so all its materials can be recycled.

In the UK:



Visit [www.recyclenow.com](http://www.recyclenow.com) to see a list of collection points near you.

 
In Australia & New Zealand:

Check with your local council for kerbside collections.

## PRODUCT FEATURES

### 1. On/Off Switch

To turn the unit **On**, slide the **On/Off Switch** to the **On** (  ) position. To turn the unit **Off**, slide the **On/Off Switch** to the **Off** (  ) position.

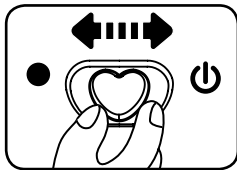

### 2. Automatic Shut-Off

 
To preserve battery life, the **Rattle & Shake Birdie** will automatically shut off after approximately 30 seconds without input. The unit can be turned on again by pressing a light up button.

### NOTE

If the unit powers down or if the light fades out during play, please install a new set of batteries.


### 3. Electronic Module

The electronic module is removable so the fabric portion of the **VTech® Rattle & Shake Birdie** can be washed in a washing machine. **REMOVE** the electronic module before washing the fabric rattle.

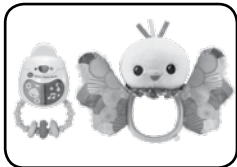

## ACTIVITIES

 1. Slide the **On/Off Switch** to turn Birdie on. You will hear a sound, a fun phrase and a song. The lights will flash with the sound.
2. Press the **Light Up Sound Button** to hear a variety of phrases and sounds. The lights will flash with the sounds.
3. Press the **Light Up Music Button** to hear songs and melodies. The lights will flash with the sounds.

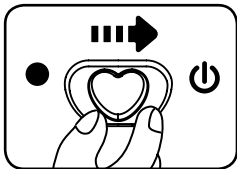

4. Activate the **Motion Sensor** to hear a variety of sounds and melodies. When a melody is playing, shake the rattle to hear sounds play over the melody. The lights will flash with the sounds.



## MELODY LIST

1. Wheels on the Bus
2. Incy Wincy Spider
3. Muffin Man
4. Polly Put the Kettle On
5. Bicycle Built for Two
6. Diddle Diddle Dumpling
7. Girls and Boys Come Out to Play
8. Goosey Goosey Gander
9. Hot Cross Buns
10. Jack and Jill
11. McNamara's Band
12. One, Two, Buckle My Shoe
13. Row Row Row Your Boat
14. Teddy Bears' Picnic
15. Three Little Kittens

## SONG LIST

### SONG 1

I'm a birdie, cutie pie, with two soft fluffy wings.  
Flying everywhere,  
In the fresh blue air,  
Tweeting merrily and singing happily.



## SONG 2

I flap my wings,  
As I sing!

## SONG 3

Birdie's here to sing and play,  
Chirp chirp chirp, hooray!

# CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the battery if the unit will not be in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to excess moisture.
5. The bird is surface washable. Follow the care instructions on the plush tag before cleaning.

# TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.

# CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

## **UK Customers:**

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)  
Website: [www.vtech.co.uk/support](http://www.vtech.co.uk/support)

## **Australian Customers:**

Phone: 1800 862 155  
Website: [support.vtech.com.au](http://support.vtech.com.au)

## **NZ Customers:**

Phone: 0800 400 785  
Website: [support.vtech.com.au](http://support.vtech.com.au)

# PRODUCT WARRANTY/ CONSUMER GUARANTEES

## **UK Customers:**

Read our complete warranty policy online at [vtech.co.uk/warranty](http://vtech.co.uk/warranty).

## **Australian Customers:**

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –  
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to [vtech.com.au/consumerguarantees](http://vtech.com.au/consumerguarantees) for further information.

**Visit our website for more  
information about our products,  
downloads, resources and more.**

***www.vtech.co.uk***  
***www.vtech.com.au***

