



Quick Start Guide



INTERACTIVE ACTIVITY DESK

By reducing the quantity of paper used for our Instruction Manuals, we aim to reduce our environmental impact and contribute to the preservation of the environment. The full version of the Instruction Manual is available online through the following links or by scanning the QR code.



For UK
vtech.co.uk/manuals



For AUS/NZ
vtech.com.au/support/product_manuals

© 2026 VTech. All rights reserved. **Printed in China.**

91-004821-001

 
INCLUDED IN THIS PACKAGE



Bluey Interactive Activity Desk
Desktop



**1 Double-Sided
Activity Card**

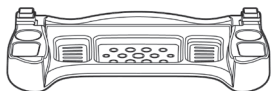

Base



4 Desk Legs



Stool Seat



4 Stool Legs



Quick Start Guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE:

Please keep this Quick Start Guide as it contains important information.

Electrostatic discharge may cause the unit to malfunction. If this occurs, recover the unit by pressing and holding the Power Button for 10 seconds until the unit turns off, then press and hold the Power Button for 3 seconds to turn the unit on. Or, remove batteries for 10 seconds and reinstall the batteries, then power on the unit.

 
GETTING STARTED

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 4 new 1.5V AA (LR6) batteries following the diagram inside the battery box (for best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

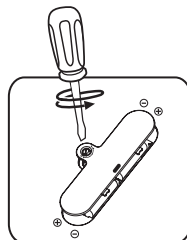

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

 
www.vtech.co.uk/recycle

www.vtech.com.au/sustainability

* Visit www.recyclenow.com to see a list of collection points near you.


ASSEMBLY INSTRUCTIONS

Adult assembly is required.

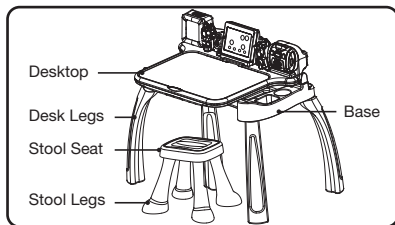


For the Desk

 1. Place the **Base** on a flat surface. Insert the **Desktop** vertically into the **Base** and press down on the hinges. You will hear a click sound.

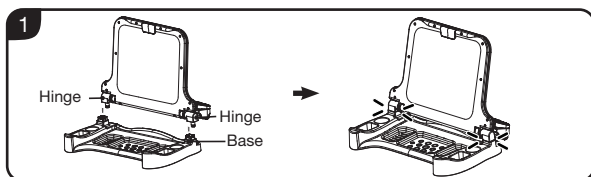

 
2. Flip the **Desktop** down.

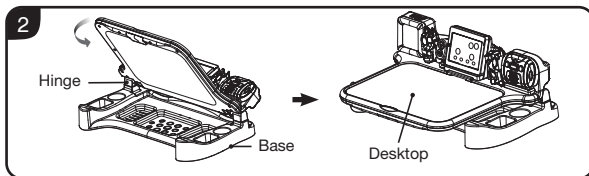

NOTE:

- Keep fingers away from the hinges or underneath the desk before flipping the **Desktop** up or down.

 3. Fully insert the four **Desk Legs** into the slots on the bottom of the **Base**.

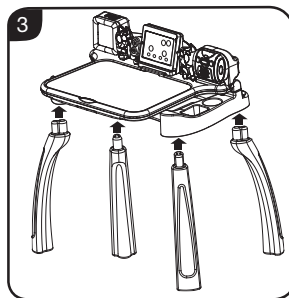

NOTE:

- Do not apply excess pressure to the **Desktop** or put heavy things on the desk to avoid damage.
- Do not stand on the desk. Risk of falling.

For the Stool

Insert the four **Stool Legs** into the slots on the bottom of the **Stool Seat**.



NOTE:

- Always make sure the **Stool Legs** are fully inserted before sitting on the stool.
- The supported weight limit of the stool is 34kg. Exceeding the limit will cause the stool to be unstable, flip over or to be damaged.
- Do not stand on the stool. Risk of falling.

PRODUCT FEATURES



Press the **Power Button** to turn the unit on and begin play.



Play with the **Yes/No Button**, just like Bluey and Bingo in the show.



Touch the pictures on the **Desktop** to hear responses.



Get creative using the **Chalkboard**.



Play music and have FaceTime fun with Bluey, Bingo, Muffin and Socks on the **Touch Pad**.



Insert the **Activity Card** to explore the pages and hear different responses when you press on the **Desktop**.

For more information on further operation, please download the full version of the instruction manual.

CARE & MAINTENANCE

1. Store and use in dry areas.
2. Keep the unit clean by wiping it with a slightly damp cloth.
3. Keep the unit out of direct sunlight and away from any direct heat sources.
4. Remove the batteries if the unit will not be in use for an extended period of time.
5. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
6. Store the Activity Card in the Activity Card Storage Tray under the Desktop when not in use. Do not bend or fold the Activity Card.
7. Keep the Activity Card clean by wiping it with a slightly damp cloth.
8. Do not use any pencils, pens, markers or other pointed objects directly on the Desktop or Activity Card to avoid damage.
9. Do not insert anything other than the Activity Card into the Activity Card Recognition Slot. To avoid any interference, please keep the slot area clean and free from debris.
10. Wipe away any dust or chalk residue from the Activity Card before inserting it into the Activity Card Recognition Slot.
11. Do not stand on the desk or the stool.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Turn the unit Off.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit On. The unit should now be ready to use again.
5. If the unit still does not work, install a brand new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED – CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

Contact VTech

Tel: 0330 678 0149 (from UK)
+44 330 678 0149 (outside UK)
1800 862 155 (Aus)/ 0800 400 785 (NZ)
www.vtech.co.uk
www.vtech.com.au



BBC
STUDIOS

BLUEY (word mark and character logos) are trade marks of Ludo Studio Pty Limited and are used under licence.

BLUEY logo © Ludo Studio Pty Limited 2018. Licensed by BBC Studios. BBC is a trade mark of the British Broadcasting Corporation and is used under licence. BBC logo © BBC 1996