



# Instruction Manual

## Discovery Play Centre



**VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...**

## **vtech** Baby

**Toys that will stimulate their interest in different textures, sounds and colours**

### **I am...**

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

**Birth-36 months**



## **Pre-School**

**Interactive toys to develop their imagination and encourage language development**

### **I want...**

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

**3-6 years**



## **Electronic Learning Computers**

**Cool, aspirational and inspiring computers for curriculum related learning**

### **I need...**

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

**4-10 years**

 


To learn more about this and other VTech® products, visit [www.vtech.co.uk](http://www.vtech.co.uk)

# INTRODUCTION

Thank you for purchasing the **Discovery Play Centre**.

Travel around the **Discovery Play Centre** for lots of exciting activities on four interactive panels. Move the panels into different configurations to explore and play in new ways. There is something new to discover around every corner!

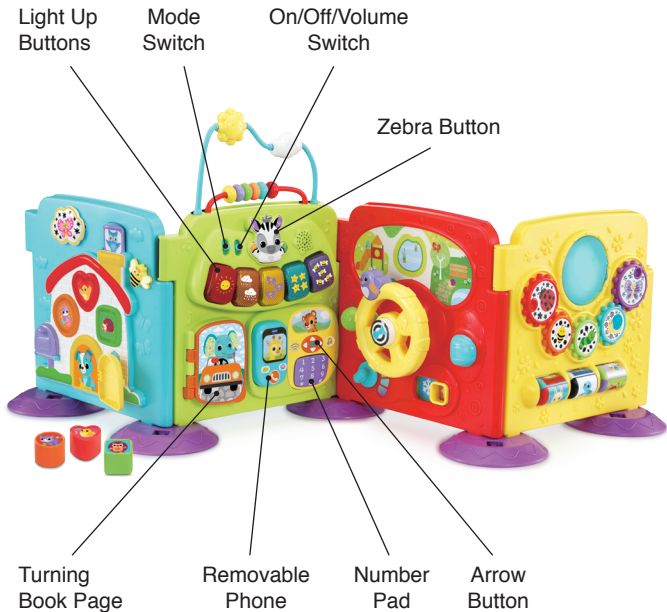

# INCLUDED IN THE PACKAGE



Electronic  
Learning Panel



Shape Sorter  
Panel



 
Driving Panel



Gears & Rollers  
Panel



Five Base Supports

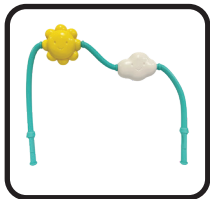


Bead Track



Steering Wheel



 Three Shape Blocks

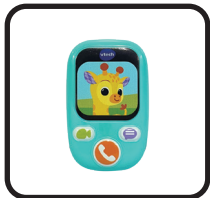

Removable Phone





Door



2 Label Sheets

- Assembly Guide
- Quick Start Guide

### **WARNING**

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

### **NOTE**

Please save this Instruction Manual as it contains important information.

### **WARNING**

Adult assembly required.

# INSTRUCTIONS

 
## WARNING:

Adult assembly required for battery installation.

Keep batteries out of reach of children.

## BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned **Off**.
2. Locate the battery cover on the back of the electronic panel, use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 3 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

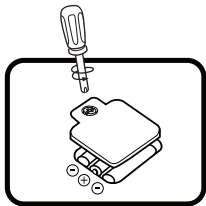

## IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

## RECHARGEABLE BATTERIES

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

## Disposal of batteries and product



The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.

 Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point\* so all of its materials can be recycled.

Learn more at:

[www.vtech.co.uk/recycle](http://www.vtech.co.uk/recycle)

[www.vtech.com.au/sustainability](http://www.vtech.com.au/sustainability)

\* Visit [www.recyclenow.com](http://www.recyclenow.com) to see a list of collection points near you.

# LABEL APPLICATION

Please securely stick the labels to the panels as indicated below:



# ASSEMBLY INSTRUCTIONS

With the **Discovery Play Centre** safety comes first. Adult assembly is required. For your child's safety, do not let them play with this toy until it is fully assembled.

1. Insert the **Bead Track** into the top of the **Electronic Panel**. Press down until you hear the **Bead Track** click into place.



2. Attach the **Steering Wheel** to the front of the **Driving Panel**, ensuring the bird is positioned at the top. Press firmly until you hear it snap into place.



3. Attach the **Door** to the front of the **Shape Sorting Panel**. Align the top and bottom of the hinge with the corresponding slots on the door frame, gently insert until the door is securely in place.



## Configuration Assembly

 
Start by unlocking and separating all of the **Activity Panels** and base support pieces. Then select one of the following four ways to play:


### Stand-Alone Activity Panel

You can use any of the **Activity Panels** alone for floor play or take-along play. Please remove the **Base Supports** before using the **Activity Panels**.



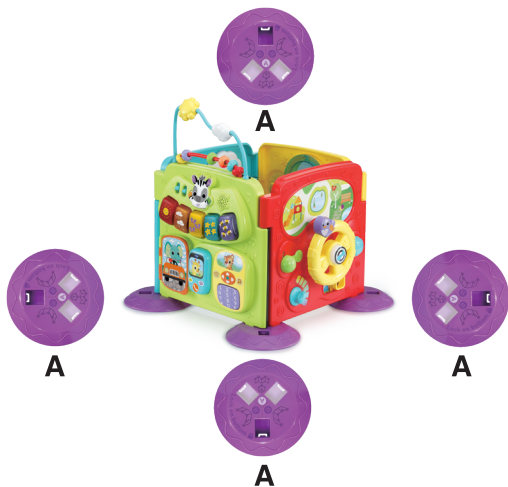


## Activity Cube Mode



1. Unlock the locks on the bottoms of the **Base Supports** and place them on a hard, flat surface. Connect any two **Activity Panels** together then insert them into the **A** slots on either side of the cube icon  on the **Base Supports**. Press firmly until you hear the pieces click together. Repeat the same process with the two remaining **Activity Panels**.



 2. Connect the two sets of panels together, then insert them into the **A** slots on either side of the cube icon  on the **Base Supports**. Turn the **Cube** over and twist the four locks to the locked  position.

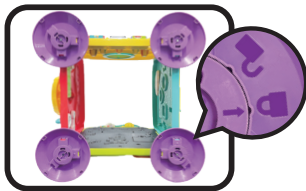




3. The extra **Base Support** piece can be stored behind the round transparent dome on the **Gears & Rollers Panel**.




## Zigzag Mode



1. Unlock the locks on the bottoms of the **Base Supports** and place them on a hard, flat surface. Connect any two **Activity Panels** together then insert them into the **A** slots on either side of the Zigzag icon  on the **Base Supports**. Press firmly until you hear the pieces click together. Repeat the process with the remaining **Activity Panels** and **Base Supports**.




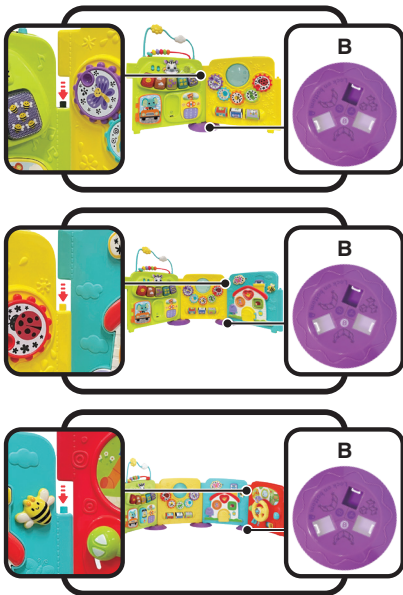 
2. Insert the two remaining **Base Supports** into the **B** slots on either end of the activity centre for stability. Turn the **Zigzag** over and twist the five locks to the locked  position.




## Semicircle Mode



1. Unlock the locks on the bottoms of the **Base Supports** and place them on a hard, flat surface. Connect any two **Activity Panels** together then insert them into the **B** slots on either side of the Semicircle icon  on the **Base Supports**. Press firmly until you hear the pieces click together. Repeat the process with the remaining **Activity Panels** and **Base Supports**.



2. Insert the two remaining **Base Supports** into the **B** slots on either end of the activity centre for stability. Turn the **Semicircle** over and twist the five locks to the locked  position.






## WARNING

This product is not intended for climbing or to assist with standing, misuse may cause the unit to tip over. Adult supervision is recommended.



## PRODUCT FEATURES

### 1. On/Off/Volume Switch

To turn the unit **On**, slide the **On/Off/Volume Switch** to the Low volume  or High volume  position. You will hear a playful opening response in each mode. To turn the unit **Off**, slide the **On/Off/Volume Switch** to the **Off**  position.



## 2. Mode Switch

Slide the **Mode Switch** to select Explore mode , Learning mode  or Music mode .



## 3. Automatic Shut-Off

To preserve battery life, the **Discovery Play Centre** will automatically power down after approximately 20 seconds without input. The unit can be turned **On** again by interacting with any of the features on the Electronic Panel.

## NOTE

If the unit powers down or if the light fades out during play, please install a new set of batteries.

# ACTIVITIES

## 1. Zebra Button

Press the **Zebra Button** to hear fun phrases, sounds, short tunes or answer simple questions, depending on the selected mode. The lights will flash with the sounds.



## 2. Light Up Buttons

Press the **Light Up Buttons** to hear piano sounds and melodies, hear cute sounds and tunes or learn numbers and colours, depending on the selected mode. The lights will flash with the sounds.



### 3. Book Page

Turn the **Book Page** to hear a song, animal sounds, short tunes and car sounds, depending on the selected mode. The lights will flash with the sounds.



### 4. Number Pad

Press the **Number Pad** to hear phone sounds and numbers. The lights will flash with the sounds.



### 5. Removable Phone

Pick up the **Phone** or hang it up to hear phone sounds, short tunes or phone greetings, depending on the selected mode. The lights will flash with the sounds.



### 6. Arrow Button

Press the **Arrow Button** to hear short tunes and sounds. The lights will flash with the sounds.



## MELODIES

1. Roses Are Red
2. Grandfather's Clock
3. Skip to My Lou
4. Head and Shoulders
5. Are You Sleeping?
6. Six Little Snails
7. Where Has My Little Dog Gone?

8. London Bridge
9. Glow Worm
10. Aiken Drum

## SONG LYRICS

### Song 1

Sing a song, sing from your heart.

Use your voice and spread some joy!

### Song 2

Elephant drives along the road,

To see his animal friends.

## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

## TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.



# CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

## **UK Customers:**

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)  
Website: [www.vtech.co.uk/support](http://www.vtech.co.uk/support)

## **Australian Customers:**

Phone: 1800 862 155  
Website: [support.vtech.com.au](http://support.vtech.com.au)

## **NZ Customers:**

Phone: 0800 400 785  
Website: [support.vtech.com.au](http://support.vtech.com.au)

# PRODUCT WARRANTY/ CONSUMER GUARANTEES

## **UK Customers:**

Read our complete warranty policy online at [vtech.co.uk/warranty](http://vtech.co.uk/warranty).

## **Australian Customers:**

**VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –  
CONSUMER GUARANTEES**

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to [vtech.com.au/consumerguarantees](http://vtech.com.au/consumerguarantees) for further information.

**Visit our website for more  
information about our products,  
downloads, resources and more.**

***[www.vtech.co.uk](http://www.vtech.co.uk)***  
***[www.vtech.com.au](http://www.vtech.com.au)***

