



Parents' Guide

# PAW Patrol: The Movie: Learning Tablet



 
© & TM Spin Master Ltd.

91-003982-000 (US)

# INTRODUCTION

Thank you for purchasing the **PAW Patrol: The Movie: Learning Tablet!**

Six exciting activities introduce letters, phonics, spelling, typing, math, memory, shapes and weather conditions! Six character buttons play fun animations and sound effects. Get ready for a learning adventure with the PAW Patrol!

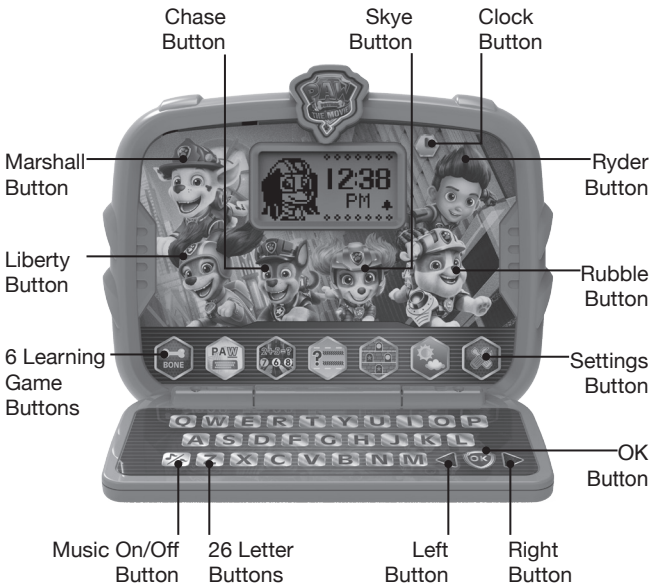

# INCLUDED IN THIS PACKAGE

- **PAW Patrol: The Movie: Learning Tablet**
- Parents' guide

## WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

## NOTE

Please keep the parents' guide as it contains important information.

 
## ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes et vis d'emballage. Ils ne font pas partie du jouet.

## NOTE

Il est conseillé de conserver ce guide des parents car il comporte des informations importantes.

## Unlock the Packaging Lock

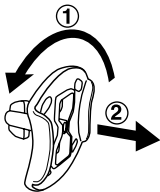


- ① Turn the packaging lock counterclockwise several times.
- ② Pull out the packaging lock and discard.

# INSTRUCTIONS
 
## Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

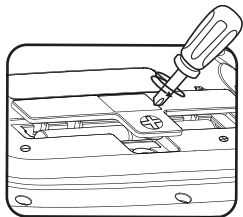

### WARNING:

Adult assembly required for battery installation.  
Keep batteries out of reach of children.



### ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.  
Tenir les piles ou accumulateurs hors de portée des enfants.

## IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.

- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

## RECHARGEABLE BATTERIES

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

## PRODUCT FEATURES

### 1. Keyboard

Open the keyboard to start to play.  
Close the keyboard to go into Sleep mode.



### 2. Clock Button

Press the **Clock Button** to show the time or to wake the unit up from Sleep mode.

### 3. Learning Game Buttons



Press one of the **Learning Game Buttons** to choose any of the six learning games.

### 4. Character Buttons



Press the **Marshall, Liberty, Chase, Skye, Rubble and Ryder Buttons** to hear character voices and see fun animations.

## 5. Letter Buttons

Press a **Letter Button** to learn letters or to answer letter-related questions within the games.

## 6. Left and Right Buttons

Press the **Left** or **Right Button** to navigate on the screen or to select an option.

## 7. OK Button

Press this button to confirm a selection.

## 8. Settings Button

In the Settings menu, press the **Left** or **Right Button** to scroll through the various options:

### A. Time Setting

Press the **Left** or **Right Button** to select between 12-hour and 24-hour time format, then press the **OK Button** to confirm.



### B. Clock Face

Press the **Left** or **Right Button** to select from six different clock faces, then press the **OK Button** to confirm.



### C. Cuckoo Clock

To activate or disable the Cuckoo Clock, press the **Left** or **Right Button** to turn the hourly chime on or off, then press the **OK Button** to confirm. When activated, the Cuckoo Clock will chime at the top of each hour when in Sleep mode.



### D. Alarm Clock

Press the **Left** or **Right Button** to select from three alarm tone options, then press the **OK Button** to confirm.



## E. Volume Setting

Use the **Left Button** to lower the volume or use the **Right Button** to raise the volume level. Press the **OK Button** to confirm.



## F. Screen Contrast

Use the **Left Button** to lower the screen contrast or use the **Right Button** to raise the screen contrast. Press the **OK Button** to confirm.



## 9. Background Music On/Off Button

Press this button to turn the background music on or off.




## 10. Automatic Shut-Off

 
To preserve battery life, the **PAW Patrol: The Movie: Learning Tablet** will go to Sleep mode after several minutes of inactivity or when close the keyboard. The unit can be turned **On** again by pressing the **Clock Button** or by opening the keyboard.

## 11. Low Batteries

The unit will also automatically turn **Off** when the batteries are very low. A warning will be displayed on screen as a reminder to change the batteries.

# TO BEGIN PLAY

When using the unit for the first time, you must unlock from Try-Me mode to play. Open the keyboard, then press the **Letter Discover Button**  + **Left Button**  + **OK Button**  for approximately one second to unlock the Try-Me mode. You will hear three beeping sounds when the Try-Me mode is unlocked. Press the **Left** or **Right Button** to select

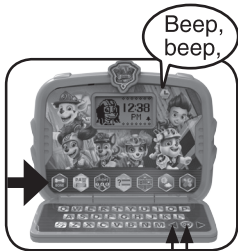

between 12-hour and 24-hour time format, then press the **OK Button** to confirm and move to the next option to set the time. A checkmark will display to confirm.

## ACTIVITIES

### 1. Letter Discovery

Let's learn about Adventure City! Press any **Letter Button** to learn about letters, phonics and words.



Press any of the six **Character Buttons** while in this game to introduce the Character name, the first letter of that character's name and play an animation related to the game.

### 2. Typing Escape

Humdinger's men are after the PAW Patrol. Help them escape by using the **Letter Buttons** to type the letters as fast as you can!



Press any of the six **Character Buttons** while in this game to hear the Character name and voice out the Character name one by one.

### 3. Number Quiz

Solve the equation to choose the correct path to rescue Ryder. Press the **Left** or **Right Button** to choose, then press the **OK Button** to confirm.

 


Press any of the six **Character Buttons** while in this game to hear sound effects and animations related to the game.



#### 4. Tire Match-Up

Chase has been kidnapped by Mayor Humdinger's men. Find and rescue Chase by matching the tire tread marks to the correct patterns. Press the **Left or Right Button** to choose a pattern. Then press the **OK Button** to confirm.



Press any of the six **Character Buttons** while in this game to see each character's badge.

#### 5. Shapes Maze

Help Liberty find her way through a maze and free Chase. Press the **Left or Right Button** to move Liberty. Then, press the **OK Button** to enter a door.



Press any of the six **Character Buttons** while in this game to hear the names of shapes and play animations related to the game.

#### 6. Weather Quiz

The Cloud Catcher has mixed up the weather. Help Skye identify each weather condition.



Press the **Left or Right Button** to choose, then press the **OK Button** to confirm.

Press any of the six **Character Buttons** while in this game to play an animation of that character in one of the weather conditions.

# TROUBLESHOOTING

If for some reason the program/activity stops working, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

## IMPORTANT NOTE:

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S., **1-877-352-8697** in Canada, or by going to our website **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing VTech products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

## CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against

harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Supplier's Declaration of Conformity**  
**47 CFR § 2.1077 Compliance Information**

Trade Name: VTech®  
Model: 5428  
Product Name: PAW Patrol: The Movie: Learning Tablet  
Responsible Party: VTech Electronics North America, L.L.C.  
Address: 1156 W. Shure Drive, Suite 200  
Arlington Heights, IL 60004  
Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.  
CAN ICES-003 (B)/NMB-003(B)

**Visit our website for more  
information about our products,  
downloads, resources and more.**

***vtechkids.com***  
***vtechkids.ca***

Read our complete warranty policy online at  
***vtechkids.com/warranty***  
***vtechkids.ca/warranty***



TM & © 2021 Vtech Holdings Limited.  
All rights reserved.  
**Printed in China.**  
91-003982-000 ©