

vtech®

Quick Start Guide



KidiZoom®
CREATOR CAM

By reducing the quantity of paper used for our Manuals, we aim to reduce our environmental impact and contribute to the preservation of the environment. The full version of the Instruction Manual is available online through the following links or by scanning the QR code.



For UK
vtech.co.uk/manuals



For AUS/NZ
vtech.com.au/support/product_manuals

INCLUDED IN THIS PACKAGE

- KidiZoom® Creator Cam
- Tripod/selfie stick
- Green screen fabric
- Wrist strap
- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE

Please save this Quick Start Guide as it contains important information.

The battery in this product must not be disposed of with household waste. This battery is recyclable. Please follow your local recycling regulations.

Only connect this toy to equipment bearing either of the following symbols:



Environmental Phenomena


Static electricity may cause the unit to malfunction. In cases where the unit is malfunctioning due to static electricity, reset the system by pressing and holding the **Home/On/Off** button for 5 seconds. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by sliding the **Master Power Switch** to the **Off** position for 5 seconds, then slide it back to **On** and press the **Home/On/Off** button to restart the device.

WARNING

Adult operation needed.

Unlock the Packaging Lock

1. With a screwdriver, turn the packaging screw several times anticlockwise to loosen and remove.
2. Safely discard the screw and all packaging products.

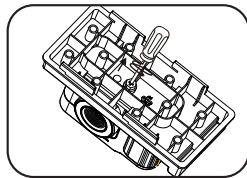



WARNING: For the purposes of recharging the battery, we recommend the use of output DC 5V (1.5A or higher) USB Type-C® AC/DC adaptor.

Safety information when using power supply for toys

Note: The USB charger or AC/DC adaptor is referred to as “power supply” throughout the manual.

- This toy should only be used with a power supply suitable for use with toys.
- The power supply is not a toy.
- This toy is not intended for use by children under 3 years old.
- Do not connect the toy to more than the recommended number of power supplies.
- Never clean a plugged in toy with liquid.
- Please examine the power supply periodically for conditions that may result in the risk of fire, electric shock, or injury to persons (such as damage to the supply cord, output cord, plug, blades, housing, or other parts) and that, in the event of such conditions, the power supply should be disposed of properly.
- Power supplies for toys are not intended to be used as toys and should not be used by children.

BATTERY MAINTENANCE

Charge the battery regularly to keep it operating at optimum performance, even when the camera isn't regularly in use. For example, charge the camera at least once every six months. If the device will not be in use for an extended period of time, slide the Master Power Switch to the Off position.

This toy contains batteries that are non-replaceable.

Australia/New Zealand

WARNING! SAFETY INSTRUCTIONS, PLEASE READ THOROUGHLY BEFORE GIVING THIS PRODUCT TO A CHILD. KEEP AWAY FROM FIRE OR HEAT SOURCE.

BATTERIES CANNOT BE REPLACED.

The batteries within this toy are permanently encased. Before giving this toy to a child make sure there are no signs of damage. Regularly check the toy and dispose of it immediately if there are any signs of damage. Do not dispose of the toy in a fire, as the batteries may leak and explode. Keep batteries safely out of children's reach before disposing of them via a safe disposal system.

PRODUCT SPECIFICATIONS

Display	2.4" colour LCD
Language	Multilingual (US English, UK English, Deutsch, Español, Français, Nederlands, Italian)
Photo Resolution	20 MP (5120 x 3840) for regular photos (by interpolation) 5 MP (2560 x 1920) for regular photos 2 MP (1600 x 1200) for photos with effects 0.3 MP (640 x 480) Photo Saved From Video: Same as the video's resolution
Video Resolution	For internal memory: Low (320 x 240) / High (640 x 480) For memory card: Low (640 x 480) / High (960 x 720) / HD (1280 x 720)
Video Length Limit per File	~30 minutes or up to 2 GB file size
Focus Range	1.5 feet - ∞
Internal Memory	256 MB built-in memory (shared with program data; actual memory available for user storage will be less)
Memory Card Format and Capacity	microSD / microSDHC card (not included) with capacity from 1 GB to 32 GB Class 10 or above is recommended
File Format	Photo: Standard baseline JPEG Video: AVI (Motion JPEG)
Connectivity	USB Type-C Port for connecting to a computer or battery charging
Battery	Rechargeable lithium ion battery (battery is not replaceable)

Operating Temperature	32°F to 104°F (0°C to 40°C)
Charging Temperature	41°F to 104°F (5°C to 40°C)

STORAGE CAPACITY FOR REFERENCE


Media	Resolution	Internal Memory	8 GB microSD Card	16 GB microSD Card	32 GB microSD Card
Photos	0.3 MP	1,260	83,800	167,700	335,500
	5.0 MP	260	17,700	35,400	70,800
	20 MP	140	9,900	19,900	39,800
Video (Minutes)	640 x 480	2	190	380	770
	720p HD	N/A	50	110	230

Note: The above amounts are approximations. The actual capacity depends on the shooting environment.

GETTING STARTED

When you use the **KidiZoom® Creator Cam** for the first time, switch the **Master Power Switch** to the  position.

When the **Master Power Switch** is in the  position, it is not possible to charge the camera or play any activities, and the system clock will be reset.

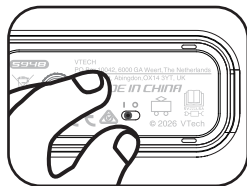

BATTERY CHARGING

Note: Adult operation required.

- Make sure the device is not in use and the **Master Power Switch** is in the on  position. Pull up the rubber cover over the USB Type-C Port on the side of device.

- Connect the USB Type-C end of a charging cable (not included) from your power supply to the USB Type-C port on the device.
- When the battery is charging, you will see the battery charging icon .
- When the battery is fully charged, the screen will show the charging completed image . Disconnect the device from the power source.

NOTE: Do not connect the device when the power switch is in Off position.

CHARGING GUIDELINES

Only charge this device using a Class II  or Class III  power adaptor with 5V(1.5A or higher) USB Type-C output and with applicable country regulations, international and regional safety standards. Before use, inspect the cable to confirm that it is in good condition and that there are no breaks or exposed wires. Ensure there are no particles or liquid (water, juice, etc.) in either of the connectors before plugging in either end of the cable. The device should be completely dry with no debris in the cable connectors when charging. Plug in the cable securely and in the correct orientation. It is important to keep the device, the cable, and the power adaptor in a well-ventilated area when charging. Do not charge your device on soft surfaces, such as on a bed or sofa or covered by clothes as they can trap heat around the device. Typical charging time is approximately 3 to 4 hours. Disconnect the device when it is fully charged. Do not leave the device charging for more than 5 hours.

BATTERY LIFE

Like with other electronic devices, the more the camera is used, the more quickly the battery will drain. The battery will last approximately 1.5 hours with continuous use while taking photos and videos. With typical usage, the battery will last longer. The remaining battery capacity will display  in the top right corner of the screen. When the battery level is low , recharge the battery before further use. When the battery level is too low , the camera will not turn on until it is charged.


AUTOMATIC SHUT-OFF

To preserve battery life, the **KidiZoom® Creator Cam** will automatically shut off after a few minutes without input. When recording videos or using the time-lapse video function, the camera will not automatically turn off until the process completes.

MEMORY CARD INSTALLATION

The **KidiZoom® Creator Cam** is compatible with microSD and microSDHC memory cards (not included) up to 32 GB. To install:

- Make sure the camera is **Off**.
- Open the cover over the **Memory Card Slot** on the side of the camera.
- Insert a memory card as illustrated. Once the memory card is detected, the memory card will automatically be used as the default memory.
- To remove the memory card from the camera, push the card once and it will eject.

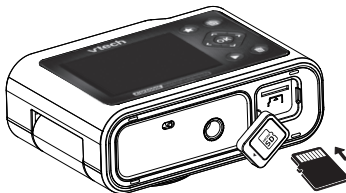

Note

- VTech recommends that you format your memory card before using it with the **KidiZoom® Creator Cam**.
- Data stored on the camera's internal memory will not be accessible while the memory card is in use. Be sure to back up all data to a computer regularly to prevent loss of photos and video.

COMPUTER CONNECTION REQUIREMENTS

PC: Microsoft® Windows® 11 or above.

Macintosh: macOS 10.13 or above.

USB Port required.

Microsoft® and Windows logos are trademarks of Microsoft Corporation in the United States and other countries. Macintosh and Mac logos are trademarks of Apple Inc. in the United States and other countries. All other trademarks are the property of their respective owners.

USB Type-C® and USB-C® are registered trademarks of USB Implementers Forum.

DISPOSAL OF BATTERIES AND PRODUCT



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

www.vtech.co.uk/recycle

www.vtech.com.au/sustainability

* Visit www.recyclenow.com to see a list of collection points near you.

CARE & MAINTENANCE

- Keep the rubber cover of the **USB Type-C Port** and **Memory Card Slot** tightly closed while the camera is not in use in order to prevent dust or water from getting into it.
- Keep the camera clean by wiping it with a slightly damp cloth.
- Turn the camera off at the **Master Power Switch** if it will not be in use for an extended period of time.
- Keep the camera out of direct sunlight and away from any direct heat source.
- Do not drop the camera on a hard surface and do not expose it to moisture or immerse it in water.
- Keep the **Lens** clean. If the images are blurry, it could be because there is dust or dirt on the **Lens**.

GREEN SCREEN FABRIC CARE



Do Not Wash



Do Not Bleach



Do Not Tumble Dry



Do Not Iron



Do Not Dryclean

Clean the green cloth by gently wiping with a damp cloth.

Battery disposal/recycling in the UK

As a responsible distributor, VTech® is committed to ensuring the correct disposal and reducing the environmental damage they can cause.

VTech® offers a returns program for products with inaccessible batteries (i.e. built-in Lithium Polymer batteries).

Please email consumer_services@vtech.com with the subject "battery disposal" to obtain a returns form.

Ecodesign Information	(EU) 2023/826 amending Regulation (EC) No. 1275/2008
Manufacturer's name	VTECH
Product type	Toy
Model No.	5948
Power consumption in another condition mode (energy saver mode)	0.7 W
Default time to switch to another condition mode(energy saver mode)	5 minutes
Adaptor Information	AC/DC adaptor, Conform to the ERP norm, DC output 5V/1.5A

CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTech ELECTRONICS (AUSTRALIA) PTY LIMITED – CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

Contact VTech

Tel: 0330 678 0149 (from UK)

+44 330 678 0149 (outside UK)

1800 862 155 (Aus) / 0800 400 785 (NZ)

www.vtech.co.uk

www.vtech.com.au