



Instruction Manual

Snuggles the Octopus



 
INTRODUCTION

Thank you for purchasing **Snuggles the Octopus**.

There's an ocean of textures and sounds to explore. Eight arms excite little ones with colourful fabrics, music and more!

On/Off/Volume Switch

Light Up Starfish

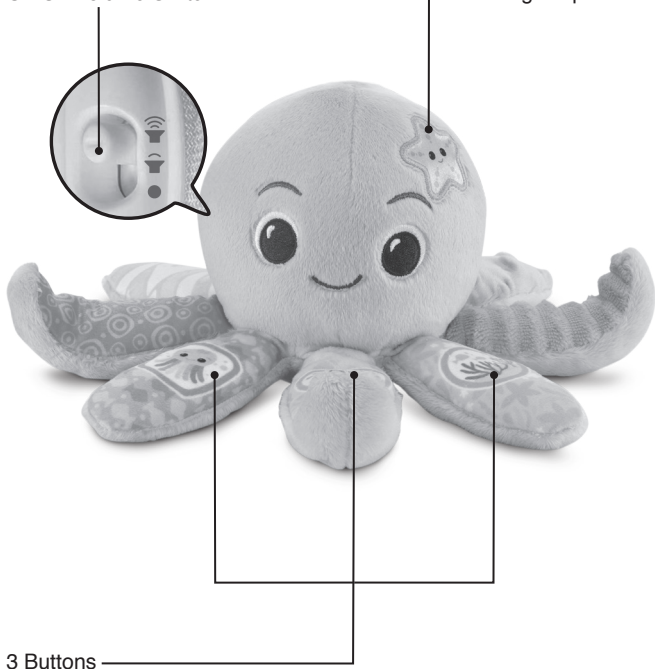

INCLUDED IN THE PACKAGE

- Snuggles the Octopus
- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

WARNING

Keep this soft toy out of the sleeping environment for babies under twelve months to avoid suffocation risk.

 
GETTING STARTED

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned **Off**.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

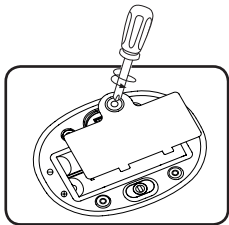

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.

 Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

www.vtech.co.uk/recycle

www.vtech.com.au/sustainability

* Visit www.recyclenow.com to see a list of collection points near you.

PRODUCT FEATURES

1. On/Off/Volume Switch

To turn the unit **On**, slide the **On/Off/Volume Switch** to the Low volume (🔊) or High volume (🔊🔊) position. You will hear an opening tune, a song and a phrase. To turn the unit **Off**, slide the **On/Off/Volume Switch** to the **Off** (●) position.



2. Automatic Shut-Off

To preserve battery life, **Snuggles the Octopus** will automatically power down after approximately 20 seconds without input. The unit can be turned on again by pressing any button.

 
NOTE

If the unit powers down or if the light fades out during play, please install a new set of batteries.

ACTIVITIES


1. Octopus Button

Press the **Octopus Button** to hear phrases about the octopus. The starfish will flash with the sounds.

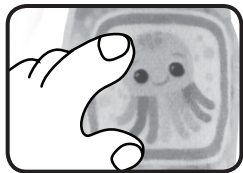

2. Musical Heart Button

 Press the **Heart Button** to hear songs and melodies. The starfish will flash with the sounds.

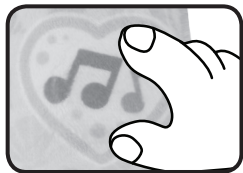

3. Coral Button

Press the **Coral Button** to hear a variety of ocean and water sounds. The starfish will flash with the sounds.



MELODIES

1. Sailing, Sailing
2. Sailor's Hornpipe
3. I'm Forever Blowing Bubbles
4. Go Round and Round the Village
5. Twinkle, Twinkle Little Star
6. While Strolling Through the Park One Day
7. Boys and Girls Go Out to Play
8. Chopsticks
9. Toyland
10. Row, Row, Row Your Boat
11. Ten in the Bed
12. Six Little Snails
13. Oh, Dear! What Can the Matter Be?
14. Pussy Cat, Pussy Cat
15. Good Morning, Merry Sunshine

SONG LYRICS

Song 1

Red, orange, blue, yellow,
Pink, green and purple leggings.
A rainbow of legs swimming in the sea,
Wiggling all around me.

Song 2

I swim around the ocean, the ocean so blue.
I wiggle and giggle and take in the view.

Song 3

I stretch out my arms to give you a hug,
Snuggle in close and cuddle up my friend.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
5. The octopus is surface washable only.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

CONSUMER SERVICES

Creating and developing **VTech®** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)
Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155
Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785
Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

**VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES**

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au

