



vtech®

Quick Start Guide



**Kidi GUITAR
SUPERSTAR**

By reducing the quantity of paper used for our Manuals, we aim to reduce our environmental impact and contribute to the preservation of the environment. The full version of the Instruction Manual is available online through the following links or by scanning the QR code.



 
For UK
vtech.co.uk/manuals



For AUS/NZ
vtech.com.au/support/product_manuals

© 2026 VTech. All rights reserved. Printed in China.

91-004867-002 (UK) (AUS)



INCLUDED IN THE PACKAGE

- One **VTech® Kidi® Guitar Superstar**
- One Guitar Strap
- Quick Start Guide

WARNING:

 
All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE:

Please keep this Quick Start Guide as it contains important information.

Activate Normal Play Mode

Unlock the Packaging Locks and Enter Normal Play Mode:

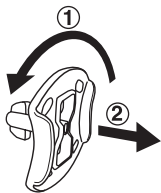

① Rotate the packaging locks 90 degrees anticlockwise.

② Pull out the packaging locks; the Guitar will exit **Try-Me Mode**.



 
 
 
GETTING STARTED

FOLDABLE GUITAR

Adult assembly is required. For your child's safety, do not let them play with this toy until it is fully assembled.



If the **Fretboard** is folded, unfold it before playing.

Use a screwdriver to tighten the screw (located on the back of the Guitar) to secure the **Fretboard** in its unfolded position.

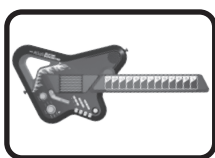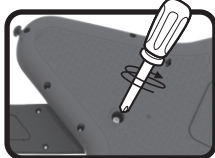
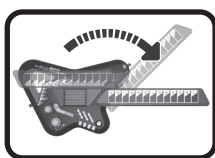


GUITAR STRAP INSTALLATION

  A. Install one end of the strap to the guitar pin on the top:

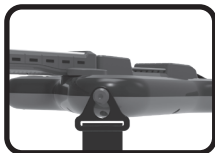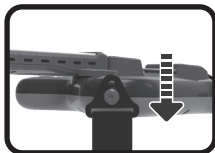

  B. Then install the other end of the strap to the pin at the bottom:

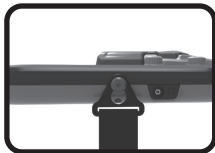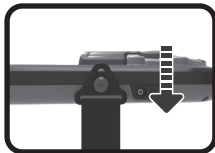

C. Make sure each end of the strap is snapped into place and is not loose.



 
WARNING:

Adult assembly required for battery installation.


Keep batteries out of reach of children.

Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the back of the unit and use a screwdriver to loosen the screw, then open the battery cover.
3. If present, remove old batteries by pulling up on one end of each battery.
4. Install 4 new 1.5V AA (LR6) batteries, following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

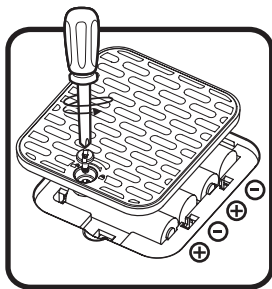

 NOTE: When battery power is low, the lights of **Fret Button 13** and the **Mode Dial** will flash three times in red, and then the guitar will automatically turn off. Please install brand new batteries before powering on the unit again.



IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.



Disposal of batteries and product



The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



The solid bar indicates that the product was placed on the market after 13th August, 2005.



Please dispose of your product and batteries responsibly.

 
In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

www.vtech.co.uk/recycle

www.vtech.com.au/sustainability

* Visit www.recyclenow.com to see a list of collection points near you.

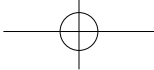



Connect to **Bluetooth®** wireless technology (Jam, Star and Show modes)

1. Turn the **Mode Dial** to Jam, Star or Show to connect wirelessly to a nearby device. As it searches for your device, the **Mode Dial** light will flash blue.
2. Go to the **Bluetooth®** settings on your device and select “VTech 5910 Guitar”.
3. When the pairing request appears on your device, select “Pair” to continue. (A passcode is not required to connect the guitar to your wireless device. If you see a passcode displayed in your device’s **Bluetooth®** settings, simply select “Pair” to continue.)
4. On the guitar, press and hold the **OK Button**  for several seconds to confirm.
5. When the connection is successful, the **Mode Dial** light will remain **ON** in blue.
6. To disconnect from your wireless device, turn the **Mode Dial** to Solo, Band or Game.
7. **VTech® Kidi® Guitar Superstar** will automatically search for and connect to the most-recent wireless device it was paired with. You do not need to repeat this process next time when you would like to use the same device.

NOTE:

  Press and hold the **Tempo +**  and **Previous**  Buttons for 3 seconds to forget the last device that was paired with **VTech® Kidi® Guitar Superstar**.

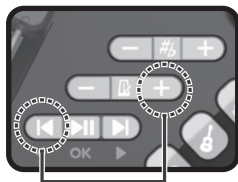

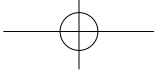

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

If there is problem pairing with your device with **Bluetooth®** wireless technology, please follow these steps:

1. On your wireless device, go to the **Bluetooth®** settings. If “VTech 5910 Guitar” is found in the list of connected, paired or saved devices, select “Forget” or “Unpair.”
2. Disable and enable **Bluetooth®** or restart your device.
3. Turn the unit **OFF** and **ON** again and repeat the pairing process.



Bluetooth® Statement

The **Bluetooth®** word mark and logos are registered trademarks owned by the **Bluetooth®** SIG, Inc. and any use of such marks by **VTech®** is under license. Other trademarks and trade names are those of their respective owners.

RF Warning Statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

DECLARATION OF CONFORMITY

Hereby, VTech Electronics Europe BV declares that the radio equipment type 5910 is in compliance with Directive 2014/53/EU. The full text of the EU Declaration of Conformity is available at the following internet address: www.vtech.com/re-directive

Frequency Band: 2402MHz – 2480MHz

Maximum RF power: 2.016 mW (3.045 dBm)

DECLARATION OF CONFORMITY

Hereby, VTech Electronics Europe Plc declares that the radio equipment type 5910 is in compliance with The Radio Equipment Regulations 2017 (2017 No.1206). The full text of the Declaration of Conformity is available at the following internet address:


www.vtech.com/re-directive

Frequency Band: 2402MHz – 2480MHz

Maximum RF power: 2.016 mW (3.045 dBm)



Player	
Maximum output voltage	≤150mV

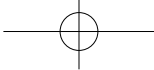 

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED – CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

Contact VTech

Tel: 0330 678 0149 (from UK)
+44 330 678 0149 (outside UK)
1800 862 155 (Aus) / 0800 400 785 (NZ)
www.vtech.co.uk
www.vtech.com.au