



Push & Spin Helicopter



91-003598-001 🗵

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...



Electronic Learning

Computers

To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the **VTech® Push & Spin Helicopter**. Press the rotor blades to see the helicopter roll forward. The 2 animal buttons trigger lights, catchy music, fun responses and introduce your baby to animals, numbers, colours and letters.



INCLUDED IN THIS PACKAGE

- One Push & Spin Helicopter
- One Parent`s Guide
- WARNING: All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy and should be discarded for your child's safety.
- NOTE: Please keep this Parent's Guide as it contains important information.

Unlock the packaging locks:



- Rotate the packaging lock anticlockwise 90 degrees.
- 2 Pull out and discard the packaging lock.

GETTING STARTED

BATTERY INSTALLATION

- 1. Make sure the unit is turned OFF.
- Locate the battery cover on the bottom of the unit. Use a screwdriver to loosen the screw.
- Install one new AA (LR6/AM-3) battery following the diagram inside the battery box. (The use of a new, alkaline battery is recommended for maximum performance).
- 4. Replace the battery cover and tighten the screw to secure.



BATTERY NOTICE

- Use new alkaline batteries or fully charged NI-MH (Nickel Metalhydride) rechargeable batteries for best performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheelie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).



The solid bar indicates that the product was placed on the market after 13th August, 2005.



For more information, please visit: www.recycle-more.co.uk

www.recyclenow.com

PRODUCT FEATURES

1. On/Off/Volume Control Switch

To turn the unit ON, slide the On/ Off/Volume Control Switch to the Low Volume ((\P)) or the High Volume ((\P)) position. You will hear a phrase and a song. To turn the unit OFF, slide the On/Off/Volume Control Switch to the OFF ((Φ)) position.



2. Automatic Shut Off

To preserve battery life, the **Push & Spin Helicopter** will automatically power down after approximately 45 seconds without input. The unit can be turned on again by pressing any button.

NOTE: If the unit repeatedly powers down while playing, we recommend changing the battery.

ACTIVITIES

1. Spinning Rotor Blades

Press the **Rotor Blades** to see the helicopter move forward. You will hear a variety of playful phrases, helicopter sounds and music.



2. Number Button

Press the **Number Button** to learn about numbers from one to three, hear the button colour, hear the animal be introduced and to hear songs and short tunes.



3. Letter Button

Press the Letter Button to learn letters from a to c, hear the button colour, hear the animal be introduced and to hear songs and short tunes.

4. Wheel Sensor

Push the helicopter to hear a variety of playful phrases, helicopter sounds and music. When a melody or song is playing, push the helicopter to hear sounds play over the music.

SONG LYRICS

Song 1

Soaring over the mountains. Flying through the sky. The sun is shining, there's lots to see. When flying way up high!

Song 2

Taking off up into the air. We can fly anywhere. Look out the window, what do you see? Adventure for you and me!

Song 3

Let's go! Let's fly! My rotor blades are turning. Let's soar! Sky high! My rotor blades are spinning.

MELODY LIST

- 1. MacNamara's Band
- 2. Bicycle Built for Two
- 3. Colonel Bogey March



- 4. Old Grey Mare
- 5. The Daring Young Man on the Flying Trapeze
- 6. Muffin Man
- 7. This Old Man
- 8. Polly Put the Kettle On
- 9. There Is a Tavern in the Town
- 10. Come, Josephine, in My Flying Machine

CARE & MAINTENANCE

- 1. Keep the unit clean by wiping it with a slightly damp cloth.
- 2. Keep the unit out of direct sunlight and away from any direct heat sources.
- 3. Remove the batteries when the unit is not in use for an extended period of time.
- 4. Do not drop the unit on a hard surface and do not expose the unit to excess moisture.

TROUBLESHOOTING

If for some reason the program/activity stops working, please follow these steps:

- 1. Please turn the unit OFF.
- 2. Interrupt the power supply by removing the battery.
- 3. Let the unit stand for a few minutes, then replace the battery.
- 4. Turn the unit back **ON**. The unit will now be ready to play with again.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.



CONSUMER SERVICES

Creating and developing VTech products is accompanied by a responsibility that we at **VTech**® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK) Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155 Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785 Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED – CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/ consumerguarantees for further information.

Visit our website for more information about our products, downloads, resources and more.

www.vtech.co.uk www.vtech.com.au



TM & © 2018 VTech Holdings Limited. All rights reserved. **Printed in China.** 91-003598-001 @