

User's Manual

Little Singing Puppy



© 2016 VTech All rights reserved Printed in China 91-003288-000 (®) VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...



Interactive toys to develop their imagination and encourage language development

l want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

```
4-10 years
```

To learn more about this and other VTech® products, visit www.vtech.co.uk

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

lam...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle


Birth-36 months

Introduction

INTRODUCTION

Thank you for purchasing the VTech® Little Singing Puppy!

Hug your way to adorable early learning! Press the 3 light up buttons on the puppy's tummy to hear fun phrases that teach objects, emotions, numbers and popular tunes. Pressing the buttons develops fine motor skills while senses are stimulated by the flashing lights, fun sounds and huggable textures. Puppy can be attached to a cot, pushchair or car seat with the included attachment strap!

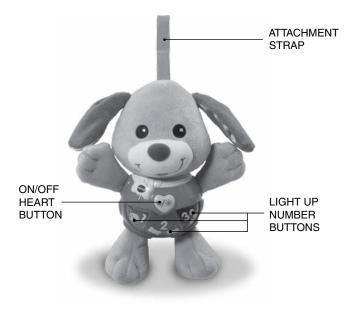

INCLUDED IN THIS PACKAGE

- One VTech[®] Little Singing Puppy
- One user's manual

WARNING:

All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

NOTE:

Please keep this user's manual as it contains important information.

GETTING STARTED

BATTERY INSTALLATION

- 1. Make sure the unit is turned OFF.
- 2. Locate the battery cover on the bottom of the unit. Use a screwdriver to loosen the screw.
- Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance).
- 4. Replace the battery cover and tighten the screw to secure.

BATTERY NOTICE

- Use new alkaline batteries or fully charged NI-MH (Nickel Metalhydride) rechargeable batteries for best performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbonzinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.



- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheelie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).



The solid bar indicates that the product was placed on the market after 13th August, 2005.



Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit: <u>www.recycle-more.co.uk</u>

www.recyclenow.com

PRODUCT FEATURES

1. ON/OFF HEART BUTTON

Press the **ON/OFF HEART BUTTON** to turn the unit **ON.** To turn the unit **OFF**, press the button again.



2. AUTOMATIC SHUT OFF

To preserve battery life, the **VTech®** Little Singing Puppy will automatically power down after approximately a minute without input. The unit can be turned on again by pressing the **ON/OFF HEART** BUTTON.

NOTE: If the unit powers down while playing, we suggest changing the batteries.

ACTIVITIES

 Press the ON/OFF HEART BUTTON to turn the unit ON. You will hear the puppy sniff and bark, followed by a fun phrase and a sing-along song. The lights will flash with the sounds.



2. Press the **LIGHT UP BUTTONS** to hear phrases, numbers, objects or a melody. The lights will flash with the sounds.



- Press the LIGHT UP BUTTONS while a melody is playing to hear a fun sound effect jam into the tune. The lights will flash with the sounds.
- Continuously press the LIGHT UP BUTTONS to play a fun sound effect. Press and hold the LIGHT UP BUTTONS to hear a fun tune.
- Press the ON/OFF HEART BUTTON again to turn the unit OFF. You will hear a closing tune before the unit switches off. The lights will flash with the sounds.

MELODY LIST

- 1. A-Tisket A-Tasket
- 2. ABC Tumble Down D
- 3. Bear Went Over the Mountain
- 4. Clementine
- 5. Farmer In the Dell
- 6. Here We Go Looby Loo
- 7. London Bridge
- 8. Down By the Riverside
- 9. Oh Where Has My Little Dog Gone
- 10. Maple Leaf Rag
- 11. She'll be Coming 'Round the Mountain
- 12. This Old Man





- 13. Yankee Doodle
- 14. Three Blind Mice
- 15. Teddy Bears Picnic

SING-ALONG SONG LYRICS

SONG 1

There was a farmer who had a dog Who's cute, soft and playful B-I-N-G-O B-I-N-G-O B-I-N-G-O I love to play all day long.

SONG 2

I have a kennel, I call it my home, I go there to sleep, or chew on a bone.

SONG 3

When I am good, I get a treat! Bones are my favourite treat!

SONG 4

I chase and I fetch bouncy balls, I like playtime best of all.

CARE & MAINTENANCE

- 1. Keep the unit clean by wiping it with a slightly damp cloth.
- 2. Keep the unit out of direct sunlight and away from any direct heat source.
- 3. Remove the batteries when the unit will not be in use for an extended period of time.
- 4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

 
If for some reason the program/activity stops working or malfunctions, please follow these steps:

- 1. Please turn the unit OFF.
- 2. Interrupt the power supply by removing the batteries.
- 3. Let the unit stand for a few minutes, then replace the batteries.
- 4. Turn the unit **ON**. The unit should now be ready to play again.
- 5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) with any problems and/or suggestions that you might have. A service representative will be happy to help you.





PRODUCT REGISTRATION

Visit www.vtech.co.uk/clubvtech/login to register your VTech product

By joining the VTech Club you can also enter competitions, find out about news and events, seek expert advice for parents and let your kids play fun learning games and activities.



PRODUCT WARRANTY

Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

- 1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
- The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
- 3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
- 4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
- 5. This warranty is personal to the original purchaser and is not transferable.
- 6. Breakages to the LCD screen are not covered by the warranty.
- 7. Returns to VTech Electronics Europe plc should include a cheque or postal order for \pounds 1.50 towards the cost of return postage and packaging.
- 8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor). Please include details of the fault together with your name and address.
- 9. To keep an online record of your warranty, please register your product online at www. vtech.co.uk/warranty

Vtech Electronics EU PLC, c/o XPO Logistics, Warehouse 350, Cat & Fiddle Lane, West Hallam, DE7 6HE

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.