

vtech[®]
Baby

User's Manual

Dancing Monkey Piano



© 2014 VTech
Printed in China
91-002948-001 ^{UK}

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years



To learn more about this and other VTech® products, visit www.vtechuk.com

INTRODUCTION

Thank you for purchasing the **VTech® Dancing Monkey Piano** learning toy!

Join the monkey's band with the **Dancing Monkey Piano** by **VTech®**. This all-in-one band includes a guitar, drum, keyboard and microphone so your child can play, sing and learn. Little hands can easily grab the microphone so your child can sing along with the music. The playful monkey will dance when the guitar is moved.

ON/OFF/MODE SELECTOR SWITCH

DANCING MONKEY

GUITAR JOYSTICK

MICROPHONE

**DRUM
BUTTON**

**FLASHING
LIGHTS**

5 PIANO KEYS

**VOLUME CONTROL
SWITCH**

INCLUDED IN THIS PACKAGE

- One VTech® Dancing Monkey Piano learning toy
- One user's manual

 
WARNING: All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

NOTE: Please keep user's manual as it contains important information.

WARNING: Please cut and discard the cords that attach the microphone to the main unit before playing. The cords are not part of this toy and should be discarded for your child's safety.



Unlock the packaging locks:

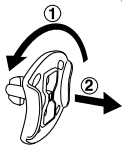


- ① Rotate the packaging locks 90 degrees counter-clockwise.
- ② Pull out the packaging locks.

GETTING STARTED

BATTERY INSTALLATION

 1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit. Use a screwdriver to loosen the screw.
3. Install 3 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.

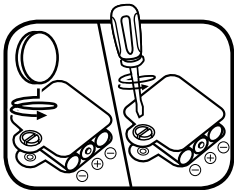

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

www.recycle-more.co.uk

www.recyclenow.com

PRODUCT FEATURES

1. ON/OFF/MODE SELECTOR SWITCH

To turn the unit **ON**, slide the **ON/OFF/MODE SELECTOR SWITCH** to the **LEARNING MODE** (🧐) or the **MUSIC MODE** (🎵) position. To turn the unit **OFF**, slide the **ON/OFF/MODE SELECTOR SWITCH** to the **OFF** (●) position.



2. VOLUME CONTROL SWITCH

To adjust the volume, slide the **VOLUME CONTROL SWITCH** to the **HIGH VOLUME** (🔊)) or the **LOW VOLUME** (🔊)) position.



3. AUTOMATIC SHUT-OFF

To preserve battery life, The **VTech® Dancing Monkey Piano** will automatically power-down after approximately 50 seconds without input. The unit can be turned on again by pressing any button or by moving the guitar.

ACTIVITIES

1. Slide the **on/off/mode selector switch** to turn the unit on. You will hear a fun sound, a song and a phrase. The lights will flash with the sounds.



 
2. Press the **piano keys** to learn colours, animal names, animal sounds and hear short tunes in the learning mode. You will hear individual piano notes in the music mode. The lights will flash with the sounds.




3. Tap the **drum button** to hear fun sounds, phrases and music, depending on the selected mode. The lights will flash with the sounds.



4. Move the **guitar** to see the monkey dance. Depending on the selected mode, you will hear fun sounds, phrases and music. The lights will flash with the sounds.

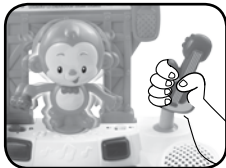

 5. Sing into the **microphone** to hear your voice amplified. The lights will flash with the sounds.

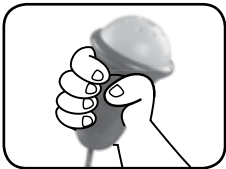

MELODY LIST

1. The Entertainer
2. Pineapple Rag
3. A-Tisket, A-Tasket
4. Yankee Doodle

5. Camptown Races
6. Ding Dong Bell
7. Funiculi, Funicula
8. Aiken Drum
9. Good Night Ladies
10. Take Me Out to the Ball Game
11. Teddy Bears' Picnic
12. Farmer in the Dell
13. Little Bo Peep
14. Aunt Rhody
15. Polly Put the Kettle On
16. I've Been Working on the Railroad
17. Turkey in the Straw
18. Looby Loo
19. Jack and Jill
20. Old King Cole

SING-ALONG SONG LYRICS

SONG 1

Monkey wants to sing with you.

Play the guitar, see what he will do.

Tap the drum or press the keys,

You can learn and play with ease!

SONG 2

Tap the drum, with your hand.

Keep to the beat, if you can.

Making music is fun.

SONG 3

Twinkle, twinkle, you're a star,

Shining brightly, yes you are!

Up upon a stage so grand,

Singing out across the land!
Twinkle, twinkle, you're a star,
Shining brightly, yes you are!

SONG 4

Did you ever see a monkey, a monkey, a monkey?
Did you ever see a monkey go this way and that?

SONG 5

Little monkey's dancing on the stage.
Play the guitar and watch him move.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit OFF.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit ON. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK), with any problems and/or suggestions that you might have. A service representative will be happy to help you.



CLASS 1
LED PRODUCT



PRODUCT WARRANTY



Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

Join the VTech club online at www.vtechuk.com

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor).
Please include details of the fault together with your name and address.

VTech Electronics Europe plc, c/o Tablogix Limited, 200 Milton Park, Abingdon, Oxon OX14 4TA

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.