

vttech®

Instruction Manual

Sip & Learn Tea Set™



Instruction Manual

This manual contains important information. Please save it for future reference.

INTRODUCTION

Thank you for purchasing the **Sip & Learn Tea Set™**! Share some tea with friends (or a favourite teddy bear!) and learn about shapes, colours, counting and manners.



INCLUDED IN THIS PACKAGE

- Sip & Learn Tea Set™



One Sip and Learn™ teapot



2 tea cups



1 plate



4 cakes

- Quick Start Guide

WARNING


All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

Unlock the Packaging Locks

- ① Rotate the packaging lock 90 degrees anti-clockwise.
- ② Pull out the packaging lock and discard.

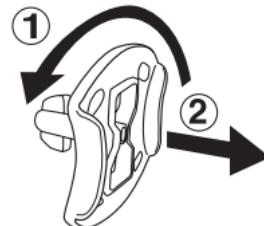

NOTE

After removing from packaging, wipe all the included pieces using a slightly damp cloth. Wash the dishes and cups thoroughly before and after use. To avoid damaging the electronics, do not submerge the tea pot in water or expose it to excessive moisture.


GETTING STARTED

BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned **Off**.
2. Find the battery covers located on the bottom. Use a screwdriver to loosen the screws, and then open the battery covers.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 3 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screws to secure.

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

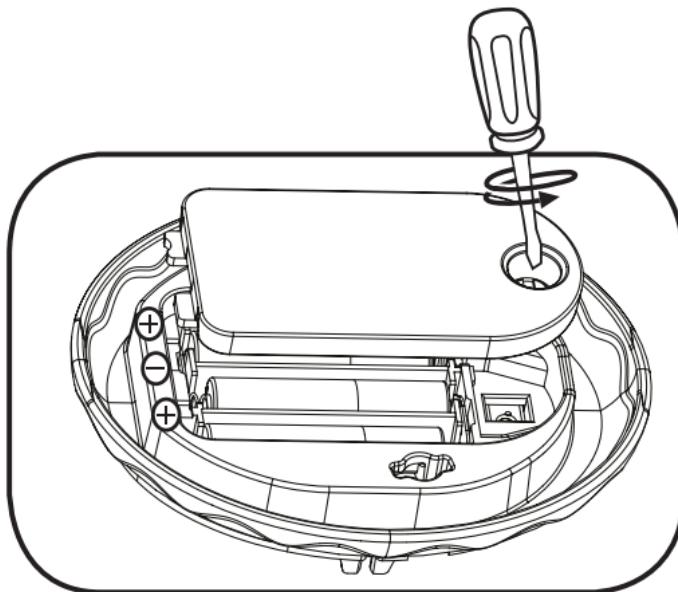

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Remove rechargeable batteries (if removable) from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheelie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

www.vtech.co.uk/recycle


www.vtech.com.au/sustainability

* Visit www.recyclenow.com to see a list of collection points near you.

PRODUCT FEATURES

1. Off/Low/High Volume Switch

Slide the switch to Low  or High  to turn the device on and select the desired volume. To turn the unit off, slide the switch to Off  position.

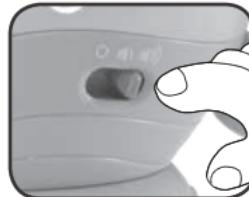

2. Star Switch

Spin the **Star Switch** to brew the tea and hear a variety of fun responses.



3. Light-Up Teapot

Tilt the teapot to hear fun pouring sounds.



4. Automatic Shut Off

To save power, the teapot automatically shuts down after 60 seconds without input. Spin the **Star Switch**, or slide the **Off/Low/High Volume Switch** to turn the teapot on again.

ACTIVITIES

Time for Tea

Tilt the teapot or spin the **Star Switch** to practise counting, hear good manners modeled, and receive pretend-play prompts.

Snack Time

Match the cakes with the tea by frosting colour or number.

Music

Spin the **Star Switch** to hear cute learning songs and sound effects.

Song Lyrics

Intro Song

1, 2, 3.

Have some tea with me.

Tea with a friend!

Sharing

Sharing, it makes me happy!

Please and Thank You

Please and thank you, my favourite things to say.

Please and thank you, I use them every day!

Let's Have a Party

Let's have a party, with you and me!

We'll make the cakes and share some tea!

It's Always Fun

It's always fun to match your tea and cake,

Look at all the colours, what matches can we make?

If you're having yellow tea, lemon cake is nice.

So find yourself some icing and decorate a slice!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit Off.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit On. The unit should now be ready to use again.
5. If the unit is still not working properly, install a brand new set of batteries.

Environmental Phenomena

The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power **off** and back **on**, or remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

CONSUMER SERVICES

Creating and developing VTech® products is accompanied by a responsibility that we at VTech® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)
Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155
Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785
Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

Visit our website for more
information about our products,
downloads, resources and more.

www.vtech.co.uk
www.vtech.com.au

