

vtech®

Parent's Guide

Kid
SuperStar
Move



91-003446-000 (UK)

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk


INTRODUCTION






Thank you for purchasing the **VTech® Kidi Super Star® Move!** **Kidi Super Star® Move** helps encourage your child to sing, dance, perform and create!



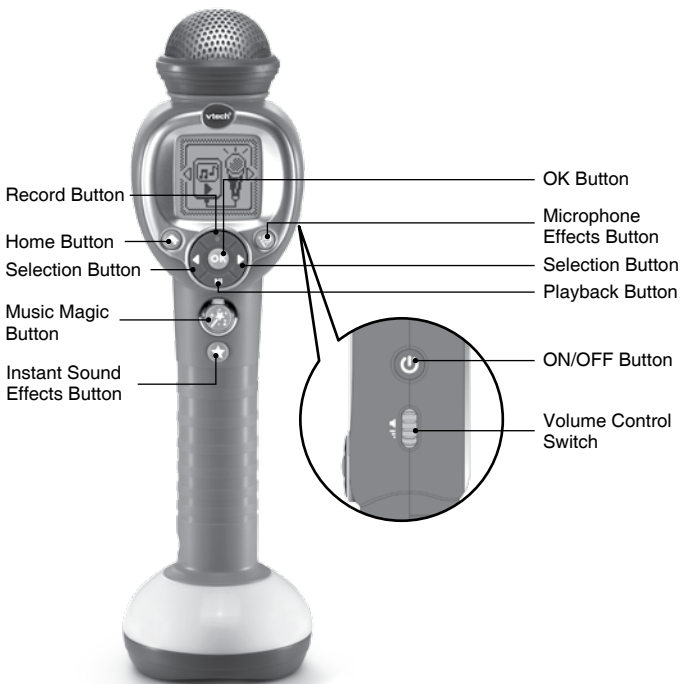



















With the 4 built-in sing-along songs and 4 built-in Games & Tools, there is plenty of singing and learning fun! You can also plug in an external music player (not included) to listen to your own music via a 3.5mm jack! Use Music Magic mode to reduce or remove the main vocal track of a song, so you can sing along to your favourite songs as the lead! Enjoy **Kidi Super Star® Move!**

PRODUCT FEATURES

PRODUCT LAYOUT AND BUTTONS



ON/OFF 	Press this button to turn the unit ON/OFF.
Volume Control Switch 	<p>This controls the volume of the whole unit, turn this switch to adjust the whole unit's volume at any time.</p> <p>NOTE: In accordance with EU Law, Kidi Super Star® Move complies with the maximum volume output standards set to protect your child's hearing.</p>
Music Magic Button 	<p>Music Magic mode works in Singing Fun mode and External Music Connection mode. It reduces or removes the main vocal track from most songs. This allows you to perform like a Super Star and sing along to the music as the lead. Press the Music Magic button to toggle between Music Magic mode and Normal mode.</p> <p>Music Magic mode: Reduce or remove the main vocal track from songs*.</p> <p>Normal mode: Normal music playback, without reduced or removed vocals.</p> <p>*NOTE: The Music Magic feature may not work for all songs. Its effectiveness varies from song to song. For best results, stereo songs are recommended, but we cannot guarantee Music Magic will work for every song. It is not recommended to use Music Magic for mono songs or live concert performances, etc.</p>
Record 	<p>Press this button to start or stop Recording.</p> <p>NOTE: Kidi Super Star® Move records up to a maximum of 2 minutes.</p> <p>When recording, please do not remove the batteries, otherwise the recording will be erased.</p>
Playback 	<p>Press this button to play or pause your recording. Kidi Super Star® Move will also exit the previous mode after this button is pressed. To return to the previous mode, press the Home button and select your desired mode again.</p>


Microphone Effects 	<p>Press this button to switch between different microphone effects when using the microphone:</p> <table border="1" data-bbox="335 171 855 346"> <tr> <td data-bbox="335 171 609 230">Squeaky </td> <td data-bbox="615 171 855 230">Deep </td> </tr> <tr> <td data-bbox="335 230 609 288">Robot </td> <td data-bbox="615 230 855 288">Echo </td> </tr> <tr> <td data-bbox="335 288 609 346">Normal </td> <td data-bbox="615 288 855 346"></td> </tr> </table>	Squeaky 	Deep 	Robot 	Echo 	Normal 	
Squeaky 	Deep 						
Robot 	Echo 						
Normal 							
Instant Sound Effects 	<p>Press this button to add an applause and clapping sound effect over your performance:</p>						
Home 	<p>Press this button to enter the home menu for different activities.</p>						
Selection Buttons  	<p>Press these buttons to make a selection.</p>						
OK Button 	<p>Press this button to confirm your selection.</p>						
Audio-in Jack 	<p>Used to plug in an external music player (not included) using the supplied 3.5mm jack audio cable.</p> <p>NOTE: Please ensure a firm connection on both ends of the audio cable.</p>						

INCLUDED IN THIS PACKAGE

- 1 VTech® Kidi Super Star® Move
- 1 3.5mm jack audio cable
- 1 parent's guide
- 2 AA batteries for demo purposes only

WARNING: All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

Note: Please keep this parent's guide as it contains important information.


This product is only to be connected to equipment of Class II (marked on the marking plate with a symbol .

GETTING STARTED

BATTERY INSTALLATION

Kidi Super Star® Move uses 2 AA size batteries.

- Make sure the unit is turned OFF.
- Locate the battery cover on the back of the unit.
- Remove the battery cover and install 2 AA size batteries as illustrated.
- Close the battery cover.

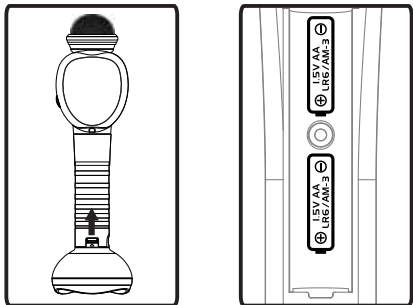

BATTERY NOTICE

- Use new alkaline batteries or fully charged NI-MH (Nickel Metal-hydride) rechargeable batteries for best performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

www.recycle-more.co.uk


www.recyclenow.com

TO BEGIN USING KIDI SUPER STAR[®] MOVE

ACTIVATING NORMAL PLAY

Press the ON/OFF Button to turn the unit ON and enter normal play mode.

LOW BATTERY ICON

When the batteries are exhausted, the low battery icon  will be displayed and the unit will automatically shut off. Please replace the batteries with a full set of new batteries before further use.

AUTOMATIC SHUT OFF

To preserve battery life, **Kidi Super Star[®] Move** will automatically shut off if there is no input after a short period of time in Game mode. In Singing Fun and Free Play mode, the automatic shut off time will be longer. The automatic shut off time can be chosen for external music connection in settings.

ACTIVITIES

Press the Home button to enter the home menu for different activities.

1. Free Play

Here it is just you and the microphone. You can use your imagination to create your own concert, talk show, talent show, or to just play around and have fun! It's Show Time!



2. Singing Fun

Choose the Singing Fun activity to learn and sing along to 4 built-in songs. Press the selection buttons to choose a song and press the OK button to begin. When you are ready, press the Music Magic button to remove the main vocal track from the built-in songs and sing by yourself like a Super Star!



NOTE: For the lyrics of the 4 built-in sing-along songs, please refer to the **Appendix**.

3. External Music Connection

Plug in an external music player (not included) via the provided 3.5mm jack audio cable to listen to your own music! From here, you can press the Music Magic button to reduce or remove the main vocal track from the current song. Now you can sing along and be a Super Star!



You can also set an auto-off timer in this mode. For details, please refer to the Settings section of this guide.

The Volume Controls on the microphone cannot control the volume of external devices. Please use the volume controls on your external music player to increase or decrease volume.

Music Magic mode may not apply for all songs. For details, you may refer to the Music Magic section under **PRODUCT FEATURES**.

NOTE: Please disconnect your external music player if it is not in use. You can wind the 3.5mm jack audio cable around the **Kidi Super Star® Move** and hook it as illustrated.



4. GAMES & TOOLS

After entering the Games & Tools menu, press the selection buttons to choose a game or tool, pressing the OK button to confirm.

4.1 Music Catcher

Catch the music note on the right beat. Press the selection buttons and OK button to play. When the music note is in the target area, push the corresponding button to catch it. Try to catch them all!



4.2 Silly Beat, Silly Song

When there is a smiling face in the target area, press the OK button to play a silly sound!



4.3 Beat Boxer

Beat Boxer is a tool that provides different musical beats for your own beat box creation. You can create, sing and beat box along to your preferred beat and record it! Play it back to see how great your beat box creation was!



4.4 Tongue Twisters

Challenge yourself to master all of these tricky Tongue Twisters! Press the selection buttons to select a twister and then press the OK button to confirm. Listen to the instructions and repeat the Tongue Twister! Press the OK button when you've finished and to select the next Tongue Twister! Can you master them all?



NOTE: For all of the Tongue Twister sentences, please refer to the **APPENDIX**.

5. Settings

Here you can change the below settings:

- Light Brightness
- Auto-off Timer of the External Music Connection
- Contrast

5.1 Light Brightness

Press the selection buttons to set the light brightness. Press the OK button to save.

5.2 Auto-off Timer of the External Music Connection

Here you can change the Auto-off Time of the External Music Connection. To do this, use the selection buttons to choose your desired auto off time and then press the OK button to save.

5.3 Contrast

Press the selection buttons to set the contrast. Press the OK button to save.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Handle the unit carefully.
3. Keep the unit away from dusty or dirty areas.
4. Keep the unit away from moisture or extreme temperatures.
5. Do not disassemble the unit. If a problem occurs, remove the existing batteries and replace them with a brand new set of batteries to reset the device.
6. Do not drop the unit on a hard surface and do not expose it to or immerse it in water.

TROUBLESHOOTING

Check this section if you experience difficulty operating **Kidi Super Star® Move**.

Problem	Possible cause	Solution
Kidi Super Star® Move has stopped working or does not turn on	Incorrect battery polarities	Ensure that the batteries are installed using the correct polarity
	Depleted batteries	Replace the existing batteries with a brand new set of batteries
Microphone output cannot be heard or not loud enough*	The master volume is low	Turn up the volume on the unit using the Volume Control Switch

<p>Music Magic mode is not functioning correctly</p>	<p>The external music player is not properly connected to Kidi Super Star® Move</p>	<p>Make sure that the external music player is well connected to Kidi Super Star® Move at both ends of the provided 3.5mm jack audio cable.</p>
	<p>Unsuitable song source</p>	<p>The Music Magic feature may not work for all songs. Its effectiveness varies from song to song. For best results, stereo songs are recommended, but we cannot guarantee Music Magic will work for every song. It is not recommended to use Music Magic for mono songs or live concert performances, etc.</p>
<p>Noise can be heard when connected to a mobile phone to play music</p>	<p>Interference from Wi-Fi or mobile data</p>	<p>The Kidi Super Star® Move is affected by mobile phone interference when streaming music through Wi-Fi or mobile data. It is not recommended to use streaming music. Please download the music to an external music player and then play the music for higher quality playback.</p>

***NOTE:** In accordance with EU Law, **Kidi Super Star® Move** complies with the maximum volume output standards set to protect your child's hearing.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK), and a service representative will be happy to help you.

APPENDIX

Table 1 - Tongue Twisters

1	Double bubble gum, bubbles double.
2	She sells seashells on the seashore.
3	Red lorry yellow lorry, red lorry yellow lorry, red lorry yellow lorry.
4	She sees cheese, she sees cheese, she sees cheese.
5	Rolling red wagons, rolling red wagons, rolling red wagons.
6	Freshly fried flying fish.
7	A proper copper coffee pot.
8	I scream, you scream, we all scream for ice cream.
9	Which wristwatches are Swiss wristwatches?
10	Many an anemone sees an enemy anemone.
11	How much wood would a woodchuck chuck if a woodchuck could chuck wood?
12	Peter Piper picked a peck of pickled peppers, A peck of pickled peppers Peter Piper picked
13	Fuzzy Wuzzy was a bear. Fuzzy Wuzzy had no hair. Fuzzy Wuzzy wasn't fuzzy, was he?
14	Any noise annoys an oyster, but a noisy noise annoys an oyster more.
15	If two witches were watching two watches, which witch would watch which watch?

Table 2 – Singing Fun

1. Ice Cream

1 scoop, 2 scoops, 3 scoops, 4.
It's never enough, we want more.
Strawberry, vanilla, chocolate too.
These are just for me and you.



We love ice cream every day.
Nothing will ever keep us away.
Vanilla and chocolate ice cream cones,
makes me happy in my bones.



Sweet and delicious. Cold and light.
I can eat this all through the night!



2. Wiggle till the night!

We jump to the left,
we jump to the right,
We jump up high
and wiggle till the night.



We dance to the left,
we dance to the right,
we dance in the light
and wiggle till the night.



Come on, friends!
Don't be shy!
Take my hand! And we wiggle...



We clap to the left,
we clap to the right,
we clap up high
and we wiggle till the night.



We laugh to the left,
we laugh to the right,
we laugh in the light
and wiggle till the night.



Come on, friends!
Don't be shy!
Take my hand! And we wiggle...



We jump to the left,
we dance to the right,
we clap up high
and wiggle till the night.



We wiggle to the left,
we giggle to the right,
we wiggle at night
and we wiggle wiggle till the night!
Oh yeah!



3. Dance for the show!

Shake your body, gotta go with the flow.
Move your head and the next thing you know.
You're out there spinning and you're ready to go.
On the floor, the lights are aglow.



Dance, dance, dance for the show!
Dance, dance, dance for the show!
Dance, dance, dance for the show!
Oh yeah! Look at you go!



Shake your body, gotta go with the flow.
Move your head and the next thing you know.
You're out there spinning and you're ready to go.
On the floor, the lights are aglow.



Dance, dance, dance for the show!
Dance, dance, dance for the show!
Dance, dance, dance for the show!
Oh yeah! Look at you go!



4. Let's go to the beach!

Summer, summer,
The best time of year.
The sun is out.
Let's go to the beach.
To the sand, to the sea, to the beach, let's go!



The sea side, the sea side.
My favourite place to be.
Sunshine and ice cream.
My friends, here with me.
On the sand, in the sea, at the beach, we're here!



IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) with any problems and/or suggestions that you might have. A service representative will be happy to help you.



**CLASS 1
LED PRODUCT**



PRODUCT REGISTRATION

Visit www.vtech.co.uk/clubvtech/login
to register your VTech product

By joining the VTech Club you can also enter competitions, find out about news and events, seek expert advice for parents and let your kids play fun learning games and activities.



PRODUCT WARRANTY

Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor). Please include details of the fault together with your name and address.
9. To keep an online record of your warranty, please register your product online at www.vtech.co.uk/warranty

Vtech Electronics EU PLC, c/o XPO Logistics, Warehouse 350, Cat & Fiddle Lane, West Hallam, DE7 6HE

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.



**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk



TM & © 2018 VTech Holdings Limited.
All rights reserved.
Printed in China.
91-003446-000 (UK)