

vtech[®]
Baby

Parent's Guide

Push & Play Elephant



VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the **VTech® Push & Play Elephant!** Move and play with this interactive elephant to develop motor skills and to encourage crawling and exploration. Pressing the buttons introduces shapes and animals. Hear playful phrases, melodies, cute songs and fun sounds while exploring with your new elephant friend!

 
Turning
Trunk

On/Off/Volume
Control Switch

Textured Ears

Animal Buttons

Light Up Heart Button

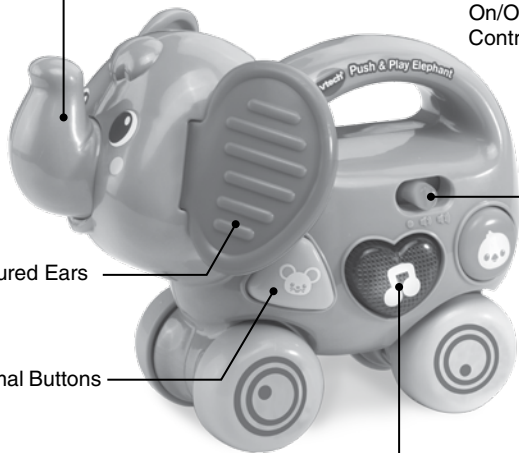

INCLUDED IN THIS PACKAGE

- One **Push & Play Elephant**
- One Parent's Guide

 
WARNING: All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE: Please keep Parent's Guide as it contains important information.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw.
3. Install 1 new AAA (AM-4/LR03) battery following the diagram inside the battery box. (The use of a new alkaline battery is recommended for maximum performance).
4. Replace the battery cover and tighten the screw to secure.

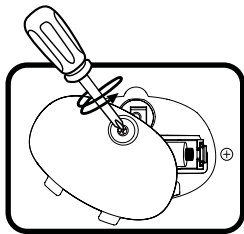

BATTERY NOTICE

- Use new alkaline batteries or fully charged NI-MH (Nickel Metal-hydride) rechargeable batteries for best performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.

- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

 
www.recycle-more.co.uk

www.recyclenow.com

PRODUCT FEATURES

1. On/Off/Volume Control Switch

To turn the unit **On**, slide the **On/Off/Volume Control Switch** to the **Low Volume** (🔊) or **High Volume** (🔊🔊) position. You will hear a song, a phrase and a short tune. To turn the unit **Off**, slide the **On/Off/Volume Control Switch** to the **Off** (●) position.

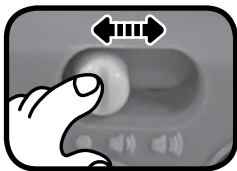

2. Automatic Shut Off

To preserve battery life, the **Push & Play Elephant** will automatically power down after approximately 45 seconds without input. The unit can be turned on again by pressing one of the buttons.

NOTE: If the unit repeatedly powers down when playing, we recommend changing the batteries.

ACTIVITIES

1. Light Up Button

Press the **Light Up Button** to learn about numbers and to hear fun phrases, playful sounds and melodies.



 
2. Animal Buttons

Press the **Animal Buttons** to learn about animals, shapes and to hear songs, playful sounds and melodies.



3. Motion Sensor

Push the elephant to activate the **Motion Sensor** and hear a variety of playful sounds and short phrases. If a melody is playing, activate the **Motion Sensor** to hear fun sounds play over the melody.

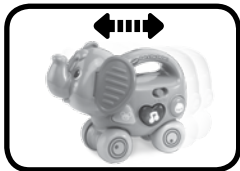

SING-ALONG SONGS

Song 1

I'm just a little elephant.
With two big ears and one long trunk.
Push me along so we can play.
Let's go on a learning journey.

Song 2

Hello, Hello.
Let's sing with the animal friends.
Hip-Hip Hooray!

MELODY LIST

1. Aloha Oe
2. Animal Fair
3. Billy Boy
4. B-I-N-G-O
5. Canon In D
6. Did You Ever See a Lassie?
7. Turkey in the Straw
8. Rockin' Robin
9. Oh! Susanna
10. Polly Wolly Doodle
11. Toyland

12. When the Saints Go Marching In
13. Yankee Doodle
14. Chopsticks
15. Row, Row, Row Your Boat

CARE & MAINTENANCE

 
1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to excess moisture.

TROUBLESHOOTING

If for some reason the program/activity stops working, please follow these steps:

1. Turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **ON**. The unit will now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please contact our Consumer Services Department and a service representative will be happy to help you.

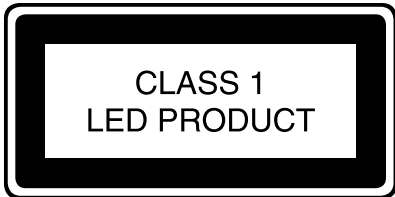

CONSUMER SERVICES

Creating and developing VTech products is accompanied by a responsibility that we at VTech® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 0330 678 0149 (from UK) or +44 330 678 0149 (outside UK)

Website: www.vtech.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.vtech.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.vtech.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at vtech.co.uk/warranty.

Australian Customers:

**VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES**

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to vtech.com.au/consumerguarantees for further information.

**Visit our website for more
information about our products,
downloads, resources and more.**

www.vtech.co.uk
www.vtech.com.au

