

vtech[®]
Baby

User's Manual

**Toot-Toot
Animals**  **Tree House**



© 2014 VTech
Printed in China
91-002932-000^(R)

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years

 


To learn more about this and other VTech® products, visit www.vtechuk.com

INTRODUCTION

Thank you for purchasing the **VTech® Toot-Toot Animals Tree House** learning toy!

Explore the **Toot-Toot Animals Tree House** by **VTech®**. Learn about animals, colours and more with the included **SmartPoint™** Toot-Toot Animals panda. Ride the lift to the top of the tree house, then take a ride down the slide! For added fun, you can connect this play set to other Toot-Toot Animals and Toot-Toot Drivers play sets (each sold separately). Please note SmartPoint responses may vary.

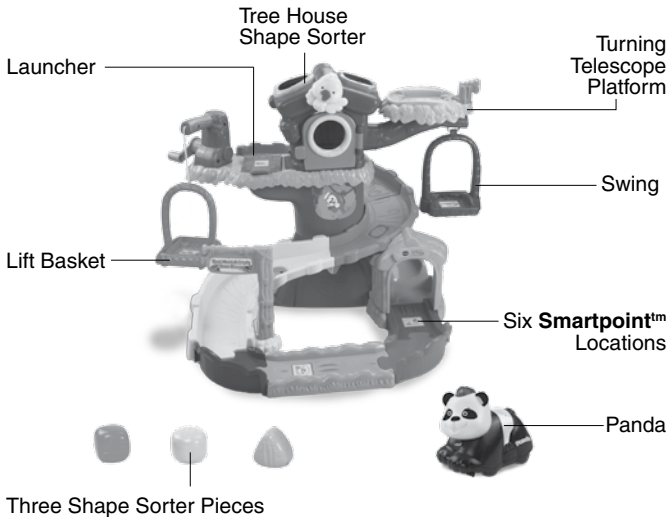

INCLUDED IN THIS PACKAGE



One tree house
shape sorter



One treetop
platform



One lift basket bracket
with hand crank



One **SmartPoint™**
launcher



One welcome sign



One **SmartPoint™**
lift basket



One 90 degree
track, female



One 90 degree
track, male



One **SmartPoint™**
straight track



One tree base



One entrance piece



One **SmartPoint™**
entrance track



One shape sorter container



One turning **SmartPoint™** telescope platform



 
One tree trunk with track




One **SmartPoint™** swing



One swing bracket

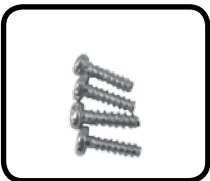

Four screws

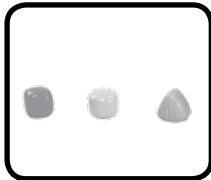 


Three shape sorter pieces



Two spiral ramp pieces



 One **VTech® Toot-Toot Animals** panda

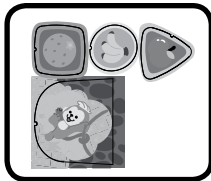


One sheet of labels

WARNING: All packing materials, such as tape, plastic sheets, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

NOTE: Please keep user's manual as it contains important information.

 
Please stick the labels to the play set securely as indicated below:

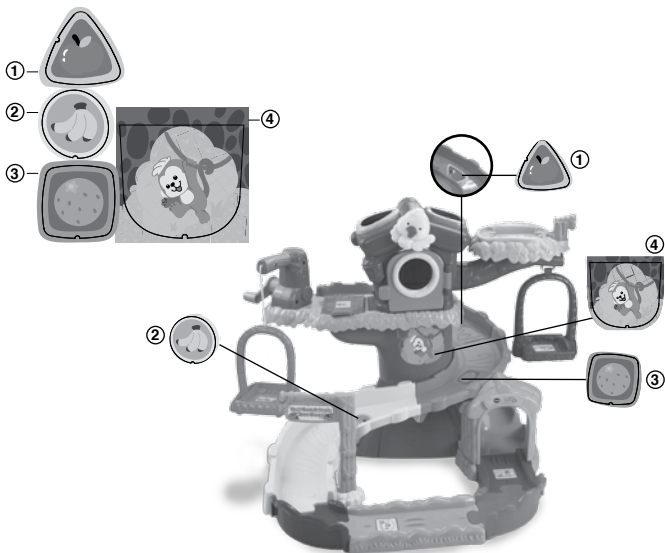

GETTING STARTED

BATTERY INSTALLATION - PANDA

 1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the panda. Use a coin or a screwdriver to loosen the screw.
3. Install 2 new 'AAA' (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.

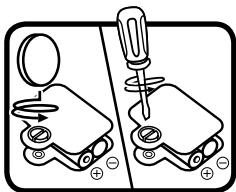

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

www.recycle-more.co.uk

www.recyclenow.com

ASSEMBLY INSTRUCTIONS

With the **VTech® Toot-Toot Animals Tree House**, safety comes first. To ensure your child's safety, adult assembly is required.


1. Attach the tree trunk with track to the tree base as shown. You will hear a click sound to indicate the track is secure.



2. Attach the treetop platform to the tree trunk with track. You will hear a click sound to indicate the track is secure.



 3. Attach the **SmartPoint™** launcher to the treetop platform as shown. You will hear a click sound to indicate the track is secure.

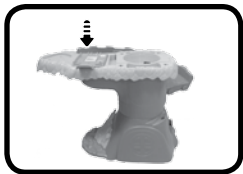


4. Attach the lift basket bracket to the **SmartPoint™** lift. You will hear a click sound to indicate the lift basket is secure. Once the bracket is connected to the lift basket, it cannot be detached.



5. Place the lift basket with hand crank on the treetop platform as shown, and fasten it with the four screws provided.



 
6. Attach the tree house shape sorter to the treetop platform. You will hear a click sound to indicate the treetop platform is secure. Once the tree house shape sorter is connected to the treetop platform, it cannot be detached.

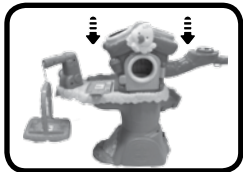

7. Attach the swing bracket to the **SmartPoint™** swing. You will hear a click sound to indicate the track is secure. Once the bracket is connected to the **SmartPoint™** swing, it cannot be detached.



 
8. Attach the swing bracket to the tree house shape sorter as shown. You will hear a click sound to indicate the swing is secure.

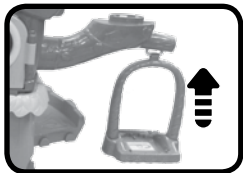


9. Attach the **SmartPoint™** turning telescope platform to the tree house shape sorter. You will hear a click sound to indicate the telescope platform is secure.



 10. Connect the shape sorter container to the tree base.

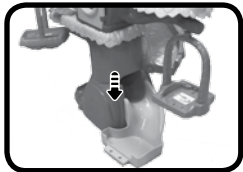

 
11. Connect the **SmartPoint™** entrance track to the container as shown.

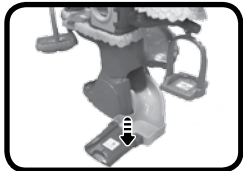

12. Insert the entrance piece to the **SmartPoint™** entrance track.



 
13. Attach the upper most spiral track piece to the tree trunk with track and entrance piece as shown.

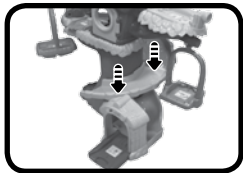

14. Connect the two spiral ramp pieces as shown.



 15. Insert the welcome sign into the bottom most spiral ramp piece as shown.

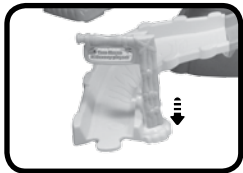


16. Once you've completed the above steps, you are ready to play! You can connect these pieces to the other included track pieces or you can connect this play set to other **Toot-Toot Animals** and **Toot-Toot Drivers play sets** (each sold separately). Please note SmartPoint responses may vary.



PRODUCT FEATURES – PANDA

1. ON/OFF SWITCH

 To turn the unit **ON**, slide the **ON/OFF SWITCH** to the **ON** (☺) position. To turn the unit **OFF** (●), slide the **ON/OFF SWITCH** to the **OFF** (●) position.

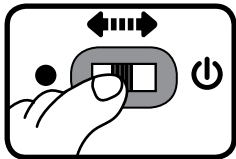


2. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Toot-Toot Animals panda** will automatically power-down after approximately 60 seconds without input. The unit can only be turned on again by pressing the light-up button or pushing the panda quickly.

ACTIVITIES – PANDA

 
1. Slide the **ON/OFF SWITCH** to the **ON** position to turn the unit on. You will hear a panda sound, a song and a phrase. The light will flash with the sounds.

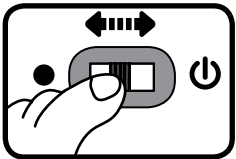

2. Press the **LIGHT-UP BUTTON** to hear fun sounds, sing-along songs and phrases. The light will flash with the sounds.



 3. Push the panda to hear fun sounds and melodies. While a melody is playing, push the panda again to add in fun sounds on top of the melody. The light will flash with the sounds.


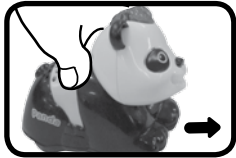


4. For added fun, the panda interacts with **VTech® Toot-Toot Animals** play sets (each sold separately). Simply roll the panda over one of the play sets **SmartPoint™** locations to see the light flash and to hear greetings, fun sounds, short tunes and sing-along songs. You can also play with your animal on **Toot-Toot Drivers** play sets (each sold separately). Please note SmartPoint responses may vary.




ACTIVITES – TREE HOUSE

  1. Move the panda or any **SmartPoint™** animal (each sold separately) over the tree house's six **SmartPoint™** locations to trigger fun sounds, songs, or phrases.
2. Lift the panda to the top of the tree on the lift basket by turning the lift handle.
3. To launch the panda down the spiral track, place the panda on the **LAUNCHER** at the top of the treetop platform. Lift up the **LAUNCHER** to see the panda slide down.

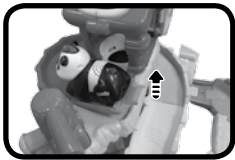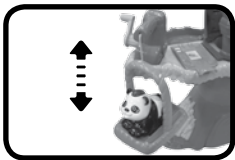

 4. Rotate the **SmartPoint™** telescope platform for the animals to enjoy great views.

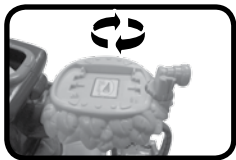

5. Insert the shape sorter pieces into the tree house shape sorter's correct locations.



CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **VTech**[®] products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK), with any problems and/or suggestions that you might have. A service representative will be happy to help you.

**CLASS 1
LED PRODUCT**



PRODUCT WARRANTY



Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor).
Please include details of the fault together with your name and address.

VTech Electronics Europe plc, c/o Tablogix Limited, 200 Milton Park, Abingdon, Oxon OX14 4TA

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.

