

vtech[®]
Baby

User's Manual

Tiny Tot Driver



© 2010 VTech
Printed in China
91-002430-013-000 (英)

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

Birth-36 months



3-6 years




4-10 years



INTRODUCTION

Get moving with the **VTech® Tiny Tot Driver!** This role-play toy introduces animals, colours and numbers with fun phrases and realistic car sounds. Encourage baby's imagination while spinning the wheel, moving the mini car and pressing the horn button. A big wing mirror, accelerator button and light-up traffic lights all add to the fun.

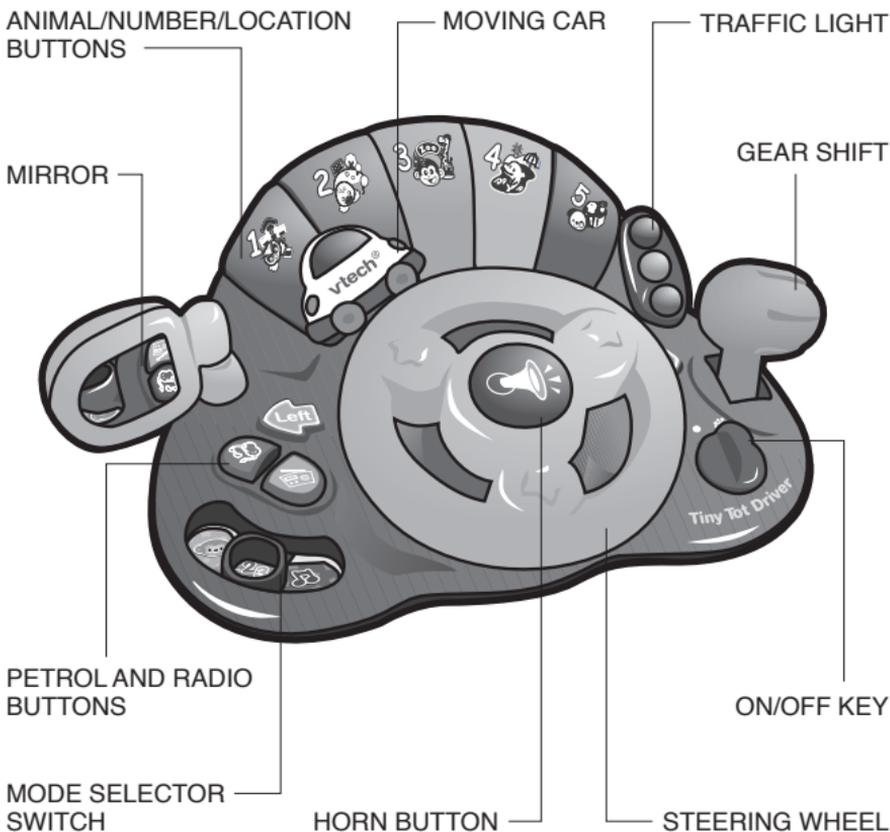


INCLUDED IN THIS PACKAGE

- One VTech® Tiny Tot Driver
- One user's manual

WARNING: All packing materials, such as tape, plastic sheets, packing lockers, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

NOTE: Please keep user's manual as it contains important information.

Unlock the packing lockers:

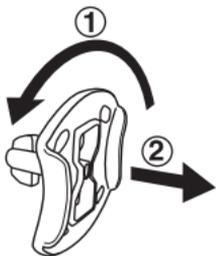


① Rotate the packing locker counter-clockwise through 90 degrees

② Pull out the packing locker

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit. Use a coin or a screwdriver to loosen the screw.
3. Install 2 new 'AA' batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)

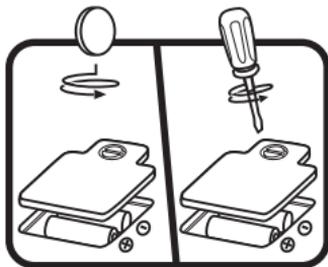

4. Replace the battery cover and tighten the screw to secure.

BATTERY NOTICE

- The use of new alkaline batteries is recommended for maximum performance.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged (if removable).
- Rechargeable batteries are only to be charged under adult supervision (if removable).
- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- The toy is not to be connected to more than the recommended number of power supplies.
- Do not dispose of batteries in fire.

WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.

Help the environment by disposing of your product responsibly.

The wheelie bin symbols indicate the product and batteries must not be disposed of in the domestic waste as they contain substances which can be damaging to the environment and health. Please use designated collection points or recycling facilities when disposing of the item or batteries.

More information can be found on:


<http://www.recycle-more.co.uk>; www.recyclenow.com



PRODUCT FEATURES

1. ON/OFF Key

To turn the unit **ON**, slide the **ON/OFF KEY** to the **ON** (☼) position. To turn the unit **OFF**, slide the **ON/OFF KEY** to the **OFF** (●) position.


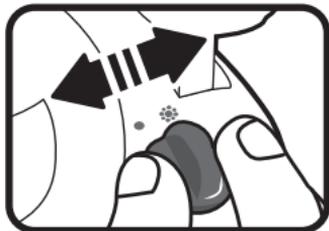


2. AUTOMATIC SHUT-OFF


To preserve battery life, the **VTech® Tiny Tot Driver** will automatically power-down after approximately 30 seconds without input. The unit can be turned on again by pressing any button.

ACTIVITIES


1. Turn the **ON/OFF KEY** to turn the unit **ON**. You will hear fun sounds, a song and a phrase. The lights will flash with the sounds.
2. Slide the **MODE SELECTOR** to choose Animal, Number or Music Mode.

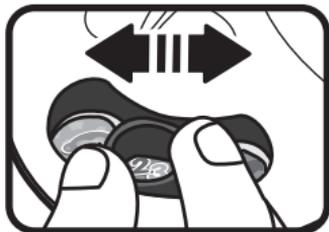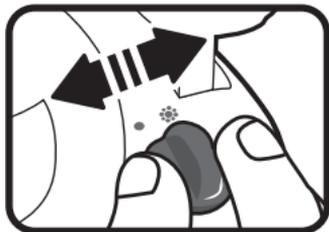


3. Press the **ANIMAL/NUMBER/LOCATION BUTTONS** to learn animals in Animal Mode and numbers in Number Mode. In Music Mode, pressing the buttons will play melodies. When melodies are playing, pressing the buttons will add fun sounds over the music. The lights will flash with the sounds.

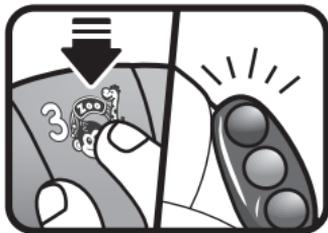

4. Spin the **STEERING WHEEL** or slide the **CAR** to hear fun sounds, melodies and phrases. In Animal Mode, turning the wheel will teach animals and locations. In Number Mode, turning the wheel will teach numbers. In Music Mode, turning the wheel will activate melodies. Turning the wheel fast will speed up the melodies. The lights will flash with the sounds.

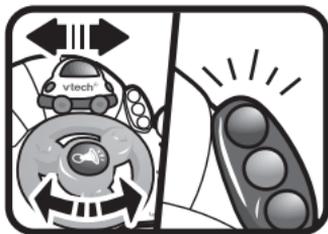


5. Push the **GEAR SHIFT** up and down to hear fun sounds and phrases. The lights will flash with the sounds.

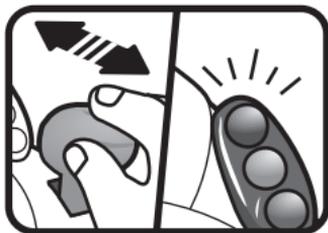

6. Press the **PETROL BUTTON** to hear fun phrases and sounds. Press the **RADIO BUTTON** to hear melodies. Keep pressing to find a melody you like!



7. If there is no input for approximately 10 seconds, you will hear a phrase, a fun sound or a melody. If there continues to be no input after another 10 seconds, you will hear a song. If there is no input for an additional 10 seconds, you will hear “Bye-bye” and the unit will power down. The unit can be turned on again by pressing any button or sliding the mode selector.

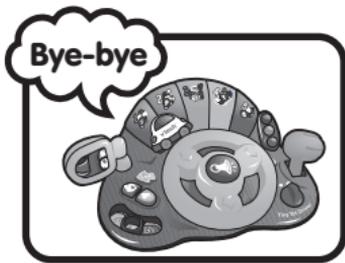

MELODY LIST

1. Alphabet Song
2. The Entertainer
3. Pop! Goes the Weasel
4. Sailing, Sailing
5. Home Sweet Home
6. This Old Man
7. One, Two, Three, Four, Five
8. Skip to My Lou
9. Bingo
10. Row, Row, Row Your Boat
11. Farmer in the Dell

SING-ALONG SONG LYRICS (To the tune of ‘Bingo’)

Come along, we’ll take a drive.

There’s so much to see!

Stop at school.

To the park.

Beach and more.

Drive along with me!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK), with any problems and/or suggestions that you might have. A service representative will be happy to help you.



vtech®

PRODUCT WARRANTY



Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor).
Please include details of the fault together with your name and address.

VTech Electronics Europe plc, c/o Tablogix Limited, 200 Milton Park, Abingdon, Oxon OX14 4TA

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.

Join the VTech club online at www.vtechuk.com

